

XRT Timeline to be uploaded on 2019/04/20

Period: 2019/04/20 10:53:00 - 2019/04/25 10:45:00

* * * * *

Normal mode

* * * * *

XOB #1BBF: AR High-cadence without PFB, 384x384 at 1064 1048, thin-Be with G-band (1ms/1ms leak), 6s cad													
Term	Pointing (x, y)										Comment		
04/20 11:12:30 - 04/20 12:57:00	Track (770.5, 104.3) ^{@ 04/20 11:03:00}	# OP start + 10min + HOP371											
PROG= 18 Inf.-time(s)													
└─ Subr= 1 1-time(s) 2.0sec													
└─ Seqn= 92 1-time(s) 2.0sec													
└─ Open/G-band Open/G-band open Safe Norm 1ms Obs 1x1 384x384 (1064, 1048) DPCM 0 0 2.0sec													
└─ Open/G-band Open/G-band close Safe Norm 1ms Obs 1x1 384x384 (1064, 1048) DPCM 0 0 2.0sec													
└─ Open/Ti-poly Open/thick-Al close Safe Dark 16.0s Obs 1x1 384x384 (1064, 1048) Q=98 0 0 2.0sec													
└─ Subr= 2 3-time(s) 2.0sec													
└─ Seqn= 61 100-time(s) 2.0sec													
└─ thin-Be/Open med-Be/Open close Safe Norm 1.00s Obs 1x1 384x384 (1064, 1048) Q=95 0 0 6.0sec													
Default Filter Thicker Filter VLS mode image Exp. CCD Bin ROI: size (center) Comp. AEC Buffer Interval													

XOB #1BA5: HOP304 - High cadence (10s Al/poly only) 384x384 at 1064 1048													
Term	Pointing (x, y)										Comment		
04/20 13:13:30 - 04/20 14:35:30	Track (770.5, 104.3) ^{@ 04/20 11:03:00}	# OP start + 10min + HOP371											
PROG= 17 Inf.-time(s)													
└─ Subr= 1 1-time(s) 2.0sec													
└─ Seqn= 92 1-time(s) 2.0sec													
└─ Open/G-band Open/G-band open Safe Norm 1ms Obs 1x1 384x384 (1064, 1048) DPCM 0 0 2.0sec													
└─ Open/G-band Open/G-band close Safe Norm 1ms Obs 1x1 384x384 (1064, 1048) DPCM 0 0 2.0sec													
└─ Open/Ti-poly Open/thick-Al close Safe Dark 16.0s Obs 1x1 384x384 (1064, 1048) Q=98 0 0 2.0sec													
└─ Subr= 2 1-time(s) 2.0sec													
└─ Seqn= 74 50-time(s) 10.0sec													
└─ Al-poly/Open thin-Be/Open close Safe Norm 500ms Obs 1x1 384x384 (1064, 1048) Q=95 3 0 2.0sec													
Default Filter Thicker Filter VLS mode image Exp. CCD Bin ROI: size (center) Comp. AEC Buffer Interval													

XOB #1BA3: AR Standard-A(Filter-Ratio with Al/poly and thin-Be) with PFB, 384x384 at 1064 1048, thin-Be, thick-Al, Al/Poly context, with G-band (1ms/1ms leak), 6s cad													
Term	Pointing (x, y)										Comment		
04/20 14:59:30 - 04/20 17:36:54	Track (770.5, 104.3) ^{@ 04/20 11:03:00}	# OP start + 10min + HOP371											
04/20 18:25:30 - 04/21 01:55:00	Track (805.5, 99.4) ^{@ 04/20 17:47:00}	AR 12739 Tracking cont.											
04/21 06:08:00 - 04/21 07:59:54	Track (860.4, 90.1) ^{@ 04/21 06:05:00}	AR 12739 Tracking cont.											
04/21 18:13:00 - 04/21 21:43:30	Fixed (910.0, 92.0)	EIS Spectral Atlas											
04/21 22:14:00 - 04/22 01:59:54	Fixed (908.0, 76.3)	AR 12739 fixed cont.											
04/22 06:25:00 - 04/22 07:59:54	Fixed (908.0, 76.3)	AR 12739 fixed cont.											
PROG= 09 Inf.-time(s)													
└─ Subr= 1 1-time(s) 2.0sec													
└─ Seqn= 92 1-time(s) 2.0sec													
└─ Open/G-band Open/G-band open Safe Norm 1ms Obs 1x1 384x384 (1064, 1048) DPCM 0 0 2.0sec													
└─ Open/G-band Open/G-band close Safe Norm 1ms Obs 1x1 384x384 (1064, 1048) DPCM 0 0 2.0sec													
└─ Open/Ti-poly Open/thick-Al close Safe Dark 16.0s Obs 1x1 384x384 (1064, 1048) Q=98 0 0 2.0sec													
└─ Seqn= 42 3-time(s) 2.0sec													
└─ Al-poly/Open thin-Be/Open close Safe Norm 500ms Obs 1x1 384x384 (1064, 1048) Q=95 3 0 2.0sec													
└─ thin-Be/Open med-Be/Open close Safe Norm 5.66s Obs 1x1 512x512 (1064, 1048) Q=95 3 0 2.0sec													
└─ Open/thick-Al Open/thick-Al close Safe Norm 16.0s Obs 1x1 384x384 (1064, 1048) Q=95 3 0 2.0sec													
└─ Seqn= 32 40-time(s) 90.0sec													
└─ thin-Be/Open med-Be/Open close Safe Norm 1.00s Obs 1x1 384x384 (1064, 1048) Q=95 3 0 2.0sec													
└─ Al-poly/Open thin-Be/Open close Safe Norm 500ms Obs 1x1 384x384 (1064, 1048) Q=95 3 0 34.0sec													
└─ thin-Be/Open med-Be/Open close Safe Norm 1.00s Obs 1x1 384x384 (1064, 1048) Q=95 3 1 2.0sec													
└─ Al-poly/Open thin-Be/Open close Safe Norm 500ms Obs 1x1 384x384 (1064, 1048) Q=95 3 1 34.0sec													
└─ thin-Be/Open med-Be/Open close Safe Norm 1.00s Obs 1x1 384x384 (1064, 1048) Q=95 3 2 2.0sec													
└─ Al-poly/Open thin-Be/Open close Safe Norm 500ms Obs 1x1 384x384 (1064, 1048) Q=95 3 2 2.0sec													
Default Filter Thicker Filter VLS mode image Exp. CCD Bin ROI: size (center) Comp. AEC Buffer Interval													

XOB #1BD9: Synoptic Q95 2x2 - Al/mesh(64/512/2897) + Dark cal(2x2 4x4 8x8 512 Q98) + Dark cal(1x1 512x2048 - 1x1 2048x512) + Al-poly(45/512/4096) + T													
Term	Pointing (x, y)										Comment		
04/20 17:40:00 - 04/20 17:46:54	Fixed (0.0, 0.0)	synoptic, shifted -23.0 min											
04/21 05:57:32 - 04/21 06:04:54	Fixed (0.0, 0.0)	synoptic + HOP349											
04/21 18:03:00 - 04/21 18:09:54	Fixed (0.0, 0.0)	synoptic											
04/22 06:14:32 - 04/22 06:21:54	Fixed (0.0, 0.0)	synoptic + HOP 349											
04/23 05:45:32 - 04/23 05:52:54	Fixed (0.0, 0.0)	synoptic + HOP349											
PROG= 07 1-time(s)													
└─ Subr= 1 1-time(s) 2.0sec													
└─ Seqn= 5 1-time(s) 2.0sec													
└─ Open/Ti-poly Open/thick-Al close Safe Dark 500ms Obs 2x2 2048x2048 (1024, 1024) Q=98 0 0 2.0sec													
└─ Open/Ti-poly Open/thick-Al close Safe Dark 500ms Obs 4x4 2048x2048 (1024, 1024) Q=98 0 0 2.0sec													
└─ Open/Ti-poly Open/thick-Al close Safe Dark 500ms Obs 8x8 2048x2048 (1024, 1024) Q=98 0 0 2.0sec													
└─ Open/Ti-poly Open/thick-Al close Safe Dark 500ms Obs 1x1 2048x512 (1024, 1024) DPCM 0 0 2.0sec													
└─ Open/Ti-poly Open/thick-Al close Safe Dark 500ms Obs 1x1 512x2048 (1024, 1024) DPCM 0 0 2.0sec													
└─ Seqn= 36 1-time(s) 2.0sec													

Open/Al-mesh	Open/Al-mesh	close	Safe	Norm	63ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Open/Al-mesh	Open/Al-mesh	close	Safe	Norm	500ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Open/Al-mesh	Open/Al-mesh	close	Safe	Norm	2.83s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Seqn= 99 1-time(s) 2.0sec												
Al-poly/Open	Al-poly/Open	close	Safe	Norm	44ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Al-poly/Open	Al-poly/Open	close	Safe	Norm	500ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Al-poly/Open	Al-poly/thick-Al	close	Safe	Norm	4.00s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Seqn= 33 1-time(s) 2.0sec												
thin-Be/Open	thin-Be/Open	close	Safe	Norm	1.00s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
thin-Be/Open	thin-Be/Open	close	Safe	Norm	11.3s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
thin-Be/Open	thin-Be/Open	close	Safe	Norm	22.6s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Seqn= 23 1-time(s) 2.0sec												
Open/G-band	Open/G-band	open	Safe	Norm	1ms	Obs	1x1	2048x2048 (1024, 1024)	Q=90	0	0	2.0sec
Open/G-band	Open/G-band	close	Safe	Norm	1ms	Obs	1x1	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Default Filter	Thicker Filter	VLS	mode	image	Exp.	CCD	Bin	ROI: size (center)	Comp.	AEC Buffer	Interval	

XOB #1C2C: HOP349 - 3-filter Synoptics (Al-mesh[24/256/2897], Al-poly[45/512/4096], thin-Be[1024/11571/23142] with 512x512 G-band+Leak - 45min cad) +

Term	Pointing (x, y)	Comment
04/21 02:20:30 - 04/21 05:57:00	Fixed (0.0, 0.0)	synoptic + HOP349
04/22 02:03:00 - 04/22 05:34:00	Fixed (0.0, 0.0)	synoptic + HOP 349
04/23 02:03:00 - 04/23 05:45:00	Fixed (0.0, 0.0)	synoptic + HOP349

PROG= 05 Inf.-time(s)

Subr= 1 1-time(s) 600.0sec												
Seqn= 1 1-time(s) 2.0sec												
Open/Al-mesh	Open/Al-mesh	close	Safe	Norm	24ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Open/Al-mesh	Open/Al-mesh	close	Safe	Norm	250ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Open/Al-mesh	Open/Al-mesh	close	Safe	Norm	2.83s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Seqn= 99 1-time(s) 2.0sec												
Al-poly/Open	Al-poly/Open	close	Safe	Norm	44ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Al-poly/Open	Al-poly/Open	close	Safe	Norm	500ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Al-poly/Open	Al-poly/thick-Al	close	Safe	Norm	4.00s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Seqn= 33 1-time(s) 2.0sec												
thin-Be/Open	thin-Be/Open	close	Safe	Norm	1.00s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
thin-Be/Open	thin-Be/Open	close	Safe	Norm	11.3s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
thin-Be/Open	thin-Be/Open	close	Safe	Norm	22.6s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Seqn= 30 1-time(s) 2.0sec												
Open/G-band	Open/G-band	open	Safe	Norm	1ms	Obs	1x1	512x512 (1024, 1024)	Q=90	0	0	2.0sec
Open/G-band	Open/G-band	close	Safe	Norm	1ms	Obs	1x1	512x512 (1024, 1024)	Q=95	0	0	2.0sec
Subr= 2 4-time(s) 600.0sec												
Seqn= 8 1-time(s) 2.0sec												
thin-Be/Open	med-Be/Open	close	Safe	Norm	1.00s	Obs	4x4	2048x2048 (1024, 1024)	Q=98	3	0	2.0sec
thin-Be/Open	med-Be/Open	close	Safe	Norm	1.41s	Obs	4x4	2048x2048 (1024, 1024)	DPCM	2	0	2.0sec
Seqn= 6 1-time(s) 2.0sec												
Al-poly/Open	Al-poly/Open	close	Safe	Norm	125ms	Obs	4x4	2048x2048 (1024, 1024)	Q=98	3	0	2.0sec
Al-poly/Open	Al-poly/Open	close	Safe	Norm	1.00s	Obs	4x4	2048x2048 (1024, 1024)	DPCM	2	0	2.0sec
Seqn= 29 1-time(s) 2.0sec												
Open/Al-mesh	Open/Al-mesh	close	Safe	Norm	125ms	Obs	4x4	2048x2048 (1024, 1024)	Q=98	3	0	2.0sec
Open/Al-mesh	Open/Al-mesh	close	Safe	Norm	250ms	Obs	4x4	2048x2048 (1024, 1024)	Q=98	2	0	2.0sec
Default Filter	Thicker Filter	VLS	mode	image	Exp.	CCD	Bin	ROI: size (center)	Comp.	AEC Buffer	Interval	

XOB #1C1D: CME watch - 4x4 - AEC 2 - 2-filter (Be-thin, Al-poly) - G-band (1x1,1ms) - Leak (1x1,1ms) - 120s cad (G-band/Leak first)

Term	Pointing (x, y)	Comment
04/21 08:03:00 - 04/21 12:59:54	Fixed (0.0, 0.0)	HOP371 Disc Center (fixed)
04/22 08:03:00 - 04/22 11:59:54	Fixed (0.0, 0.0)	HOP 371 Disc Center (fixed)

PROG= 01 Inf.-time(s)

Subr= 1 1-time(s) 2.0sec												
Seqn= 30 1-time(s) 2.0sec												
Open/G-band	Open/G-band	open	Safe	Norm	1ms	Obs	1x1	512x512 (1024, 1024)	Q=90	0	0	2.0sec
Open/G-band	Open/G-band	close	Safe	Norm	1ms	Obs	1x1	512x512 (1024, 1024)	Q=95	0	0	2.0sec
Subr= 2 30-time(s) 120.0sec												
Seqn= 95 1-time(s) 2.0sec												
thin-Be/Open	med-Be/Open	close	Safe	Norm	4.00s	Obs	4x4	2048x2048 (1024, 1024)	Q=98	2	0	2.0sec
Seqn= 31 1-time(s) 2.0sec												
Al-poly/Open	thin-Be/Open	close	Safe	Norm	500ms	Obs	4x4	2048x2048 (1024, 1024)	Q=98	2	0	2.0sec
Default Filter	Thicker Filter	VLS	mode	image	Exp.	CCD	Bin	ROI: size (center)	Comp.	AEC Buffer	Interval	

XOB #1C2D: CME watch - 4x4 - AEC 2 - 2-filter (Be-thin, Al-poly) - G-band (1x1,1ms) - Leak (1x1,1ms) - 180s cad

Term	Pointing (x, y)	Comment
04/21 13:03:00 - 04/21 17:59:54	Track (-197.5, -213.5) @ 04/21 13:00:00	QS study
04/23 05:56:00 - 04/23 07:50:00	Track (156.1, -215.1) @ 04/23 05:53:00	BP study cont.

PROG= 10 Inf.-time(s)

Subr= 1 1-time(s) 2.0sec												
Seqn= 30 1-time(s) 2.0sec												
Open/G-band	Open/G-band	open	Safe	Norm	1ms	Obs	1x1	512x512 (1024, 1024)	Q=90	0	0	2.0sec
Open/G-band	Open/G-band	close	Safe	Norm	1ms	Obs	1x1	512x512 (1024, 1024)	Q=95	0	0	2.0sec
Subr= 2 30-time(s) 180.0sec												
Seqn= 95 1-time(s) 2.0sec												

thin-Be/Open	med-Be/Open	close	Safe	Norm	4.00s	Obs	4x4	2048x2048 (1024, 1024)	Q=98	2	0	2.0sec
Seqn= 31 1-time(s) 2.0sec												
Al-poly/Open	thin-Be/Open	close	Safe	Norm	500ms	Obs	4x4	2048x2048 (1024, 1024)	Q=98	2	0	2.0sec
Default Filter	Thicker Filter	VLS	mode	image	Exp.	CCD	Bin	ROI: size (center)	Comp.	AEC Buffer	Interval	

XOB #1BA1: HOP336 1-filter - Al/poly -384x384, 512ms and 4s, 60s-cadence, G-band - 384x384 1ms

Term	Pointing (x, y)	Comment
04/22 12:03:00 - 04/22 15:29:54	Fixed (-20.0, 655.0)	HOP336 North
04/22 15:33:00 - 04/22 19:02:00	Fixed (-20.0, -640.0)	HOP336 South

PROG= 16 Inf.-time(s)

Subr= 1 1-time(s) 2.0sec												
Seqn= 16 2-time(s) 2.0sec												
Open/G-band	Open/G-band	close	Safe	Norm	1ms	Obs	1x1	384x384 (1064, 1048)	DPCM	0	0	2.0sec
Subr= 2 1-time(s) 2.0sec												
Seqn= 90 1-time(s) 30.0sec												
Open/G-band	Open/G-band	open	Safe	Norm	1ms	Obs	1x1	384x384 (1064, 1048)	Q=90	0	0	2.0sec
Subr= 3 15-time(s) 2.0sec												
Seqn= 68 1-time(s) 60.0sec												
Al-poly/Open	Al-poly/Open	close	Safe	Norm	4.00s	Obs	1x1	384x384 (1064, 1048)	Q=90	0	0	2.0sec
Al-poly/Open	Al-poly/Open	close	Safe	Norm	500ms	Obs	1x1	384x384 (1064, 1048)	Q=90	0	0	2.0sec
Default Filter	Thicker Filter	VLS	mode	image	Exp.	CCD	Bin	ROI: size (center)	Comp.	AEC Buffer	Interval	

XOB #1B8D: Synoptic 7 Filter w/ Al-mesh(24/256/2897), Al-poly(45/512/4096), Thin-Be(512/8192/23142) - Thick-Be(65536), Al-poly+Ti-poly(256/5795), Med-A

Term	Pointing (x, y)	Comment
04/22 19:38:00 - 04/22 19:44:54	Fixed (0.0, 0.0)	synoptic, shifted manually

PROG= 08 1-time(s)

Subr= 1 1-time(s) 2.0sec												
Seqn= 5 1-time(s) 2.0sec												
Open/Ti-poly	Open/thick-Al	close	Safe	Dark	500ms	Obs	2x2	2048x2048 (1024, 1024)	Q=98	0	0	2.0sec
Open/Ti-poly	Open/thick-Al	close	Safe	Dark	500ms	Obs	4x4	2048x2048 (1024, 1024)	Q=98	0	0	2.0sec
Open/Ti-poly	Open/thick-Al	close	Safe	Dark	500ms	Obs	8x8	2048x2048 (1024, 1024)	Q=98	0	0	2.0sec
Open/Ti-poly	Open/thick-Al	close	Safe	Dark	500ms	Obs	1x1	2048x512 (1024, 1024)	DPCM	0	0	2.0sec
Open/Ti-poly	Open/thick-Al	close	Safe	Dark	500ms	Obs	1x1	512x2048 (1024, 1024)	DPCM	0	0	2.0sec
Seqn= 1 1-time(s) 2.0sec												
Open/Al-mesh	Open/Al-mesh	close	Safe	Norm	24ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Open/Al-mesh	Open/Al-mesh	close	Safe	Norm	250ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Open/Al-mesh	Open/Al-mesh	close	Safe	Norm	2.83s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Seqn= 99 1-time(s) 2.0sec												
Al-poly/Open	Al-poly/Open	close	Safe	Norm	44ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Al-poly/Open	Al-poly/Open	close	Safe	Norm	500ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Al-poly/Open	Al-poly/thick-Al	close	Safe	Norm	4.00s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Seqn= 54 1-time(s) 2.0sec												
thin-Be/Open	thin-Be/Open	close	Safe	Norm	500ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
thin-Be/Open	thin-Be/Open	close	Safe	Norm	8.00s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
thin-Be/Open	thin-Be/Open	close	Safe	Norm	22.6s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Seqn= 23 1-time(s) 4.0sec												
Open/G-band	Open/G-band	open	Safe	Norm	1ms	Obs	1x1	2048x2048 (1024, 1024)	Q=90	0	0	2.0sec
Open/G-band	Open/G-band	close	Safe	Norm	1ms	Obs	1x1	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Subr= 2 1-time(s) 2.0sec												
Seqn= 46 1-time(s) 2.0sec												
Open/thick-Be	Open/thick-Be	close	Safe	Norm	64.0s	Obs	2x2	2048x2048 (1024, 1024)	Q=98	0	0	2.0sec
Seqn= 55 1-time(s) 2.0sec												
med-Al/Open	med-Al/Open	close	Safe	Norm	4.00s	Obs	2x2	2048x2048 (1024, 1024)	Q=98	0	0	2.0sec
med-Al/Open	med-Al/Open	close	Safe	Norm	64.0s	Obs	2x2	2048x2048 (1024, 1024)	Q=98	0	0	2.0sec
Seqn= 40 1-time(s) 2.0sec												
Al-poly/Ti-poly	Al-poly/thick-Al	close	Safe	Norm	250ms	Obs	2x2	2048x2048 (1024, 1024)	Q=98	0	0	2.0sec
Al-poly/Ti-poly	Al-poly/thick-Al	close	Safe	Norm	5.66s	Obs	2x2	2048x2048 (1024, 1024)	Q=98	0	0	2.0sec
Default Filter	Thicker Filter	VLS	mode	image	Exp.	CCD	Bin	ROI: size (center)	Comp.	AEC Buffer	Interval	

XOB #1C39: CME watch - 4x4 - AEC 2 - Thin-Be - G-band (1x1,512x512,1ms) - Leak (1x1,512x512,1ms) - 40s cad

Term	Pointing (x, y)	Comment
04/22 19:48:00 - 04/23 01:31:00	Track (68.6, -213.6) ^{04/22 19:45:00}	EIS BP study

PROG= 06 Inf.-time(s)

Subr= 1 50-time(s) 40.0sec												
Seqn= 83 1-time(s) 4.0sec												
thin-Be/Open	med-Be/Open	close	Safe	Norm	1.41s	Obs	4x4	2048x2048 (1024, 1024)	Q=98	2	0	2.0sec
Subr= 2 1-time(s) 2.0sec												
Seqn= 30 1-time(s) 2.0sec												
Open/G-band	Open/G-band	open	Safe	Norm	1ms	Obs	1x1	512x512 (1024, 1024)	Q=90	0	0	2.0sec
Open/G-band	Open/G-band	close	Safe	Norm	1ms	Obs	1x1	512x512 (1024, 1024)	Q=95	0	0	2.0sec
Default Filter	Thicker Filter	VLS	mode	image	Exp.	CCD	Bin	ROI: size (center)	Comp.	AEC Buffer	Interval	

XOB #1C2E: CME watch - 4x4 - AEC 2 - 2-filter (Be-thin, Al-poly) - G-band (1x1,1ms) - Leak (1x1,1ms) - 360s cad

Term	Pointing (x, y)	Comment
04/23 08:27:30 - 04/23 11:25:00	Fixed (0.0, 0.0)	HOP371 Disc Center (fixed)

PROG= 11 Inf.-time(s)

Subr= 1		1-time(s)		2.0sec											
└─ Seqn= 30		1-time(s)		2.0sec											
	Open/G-band	Open/G-band	open	Safe	Norm	1ms	Obs	1x1	512x512 (1024, 1024)	Q=90	0	0	2.0sec		
	Open/G-band	Open/G-band	close	Safe	Norm	1ms	Obs	1x1	512x512 (1024, 1024)	Q=95	0	0	2.0sec		
Subr= 2		30-time(s)		360.0sec											
└─ Seqn= 95		1-time(s)		2.0sec											
	thin-Be/Open	med-Be/Open	close	Safe	Norm	4.00s	Obs	4x4	2048x2048 (1024, 1024)	Q=98	2	0	2.0sec		
└─ Seqn= 31		1-time(s)		2.0sec											
	Al-poly/Open	thin-Be/Open	close	Safe	Norm	500ms	Obs	4x4	2048x2048 (1024, 1024)	Q=98	2	0	2.0sec		
	Default Filter	Thicker Filter	VLS	mode	image	Exp.	CCD	Bin	ROI: size (center)	Comp.	AEC Buffer	Interval			

* * * * *

Flare mode

* * * * *

XOB #1B8E: Flare - multifilter 26 sec cadence (Be/thin, Be/med, Al/thick), AEC 3(thin-Be AEC2), 384x384 + context (med-Al,thick-Be -384x384 + Al-poly 512

Term	Pointing (x, y)	Comment
04/20 11:12:30 - 04/20 12:57:00	Track (770.5, 104.3) @ 04/20 11:03:00	# OP start + 10min + HOP371
04/20 13:13:30 - 04/20 14:35:30	Track (770.5, 104.3) @ 04/20 11:03:00	# OP start + 10min + HOP371
04/20 14:59:30 - 04/20 17:36:54	Track (770.5, 104.3) @ 04/20 11:03:00	# OP start + 10min + HOP371
04/20 18:25:30 - 04/21 01:55:00	Track (805.5, 99.4) @ 04/20 17:47:00	AR 12739 Tracking cont.
04/21 02:20:30 - 04/21 05:57:00	Fixed (0.0, 0.0)	synoptic + HOP349
04/21 06:08:00 - 04/21 07:59:54	Track (860.4, 90.1) @ 04/21 06:05:00	AR 12739 Tracking cont.
04/21 08:03:00 - 04/21 12:59:54	Fixed (0.0, 0.0)	HOP371 Disc Center (fixed)
04/21 13:03:00 - 04/21 17:59:54	Track (-197.5, -213.5) @ 04/21 13:00:00	QS study
04/21 18:13:00 - 04/21 21:43:30	Fixed (910.0, 92.0)	EIS Spectral Atlas
04/21 22:14:00 - 04/22 01:59:54	Fixed (908.0, 76.3)	AR 12739 fixed cont.
04/22 02:03:00 - 04/22 05:34:00	Fixed (0.0, 0.0)	synoptic + HOP 349
04/22 06:25:00 - 04/22 07:59:54	Fixed (908.0, 76.3)	AR 12739 fixed cont.
04/22 08:03:00 - 04/22 11:59:54	Fixed (0.0, 0.0)	HOP 371 Disc Center (fixed)
04/22 12:03:00 - 04/22 15:29:54	Fixed (-20.0, 655.0)	HOP336 North
04/22 15:33:00 - 04/22 19:02:00	Fixed (-20.0, -640.0)	HOP336 South
04/22 19:48:00 - 04/23 01:31:00	Track (68.6, -213.6) @ 04/22 19:45:00	EIS BP study
04/23 02:03:00 - 04/23 05:45:00	Fixed (0.0, 0.0)	synoptic + HOP349
04/23 05:56:00 - 04/23 07:50:00	Track (156.1, -215.1) @ 04/23 05:53:00	BP study cont.
04/23 08:27:30 - 04/23 11:25:00	Fixed (0.0, 0.0)	HOP371 Disc Center (fixed)

PROG= 13 30-time(s)

Subr= 1		20-time(s)		2.0sec											
└─ Seqn= 11		1-time(s)		2.0sec											
	Al-poly/Open	Al-poly/thick-Al	close	Safe	Norm	125ms	Obs	2x2	512x512 (1024, 1024)	Q=95	2	0	2.0sec		
└─ Seqn=100		1-time(s)		10.0sec											
	thin-Be/Open	med-Be/Open	close	Safe	Norm	125ms	Obs	1x1	384x384 (1024, 1024)	Q=95	2	0	2.0sec		
	med-Be/Open	Open/thick-Al	close	Safe	Norm	250ms	Obs	1x1	384x384 (1024, 1024)	Q=95	3	0	2.0sec		
	Open/thick-Al	Open/thick-Be	close	Safe	Norm	1.00s	Obs	1x1	384x384 (1024, 1024)	Q=95	3	0	2.0sec		
Subr= 2		1-time(s)		2.0sec											
└─ Seqn= 10		1-time(s)		2.0sec											
	med-Al/Open	med-Al/thick-Al	close	Safe	Norm	500ms	Obs	1x1	384x384 (1024, 1024)	Q=95	3	0	2.0sec		
	Open/thick-Be	Open/thick-Be	close	Safe	Norm	2.00s	Obs	1x1	384x384 (1024, 1024)	Q=95	3	0	2.0sec		
└─ Seqn= 11		1-time(s)		2.0sec											
	Al-poly/Open	Al-poly/thick-Al	close	Safe	Norm	125ms	Obs	2x2	512x512 (1024, 1024)	Q=95	2	0	2.0sec		
└─ Seqn= 87		1-time(s)		2.0sec											
	Open/G-band	Open/G-band	open	Safe	Norm	1ms	Obs	1x1	384x384 (1024, 1024)	Q=98	0	0	2.0sec		
	Open/G-band	Open/G-band	close	Safe	Norm	1ms	Obs	1x1	384x384 (1024, 1024)	Q=98	0	0	2.0sec		
	Open/thick-Al	Open/thick-Al	close	Safe	Dark	1.00s	Obs	1x1	384x384 (1024, 1024)	Q=98	0	0	2.0sec		
	Open/thick-Al	Open/thick-Al	close	Safe	Dark	1.00s	Obs	2x2	512x512 (1024, 1024)	Q=98	0	0	2.0sec		
	Default Filter	Thicker Filter	VLS	mode	image	Exp.	CCD	Bin	ROI: size (center)	Comp.	AEC Buffer	Interval			

* * * * *

Active Region Search

* * * * *

NOT USED

* * * * *


Flare Detection

* * * * *


FLD Patrol

Term	Pointing (x, y)	Comment										
04/20 17:47:18 - 04/21 05:57:24	Track (805.5, 99.4) @ 04/20 17:47:00	AR 12739 Tracking cont.										
04/21 06:05:18 - 04/21 18:00:18	Track (860.4, 90.1) @ 04/21 06:05:00	AR 12739 Tracking cont.										
04/21 18:10:18 - 04/22 06:14:24	Fixed (910.0, 92.0)	EIS Spectral Atlas										
04/22 06:22:18 - 04/22 19:35:18	Fixed (908.0, 76.3)	AR 12739 fixed cont.										
04/22 19:45:18 - 04/23 05:45:24	Track (68.6, -213.6) @ 04/22 19:45:00	EIS BP study										
04/23 05:53:18 - 04/25 10:45:00	Track (156.1, -215.1) @ 04/23 05:53:00	BP study cont.										
	Al-poly/Open	Al-poly/Open	close	Safe	Norm	8ms	Obs	8x8		Q=50		80sec
	Default Filter	Thicker Filter	VLS	mode	image	Exp.	CCD	Bin	ROI: size (center)	Comp.	AEC Buffer	Interval


CMDI #0189 2019/04/20

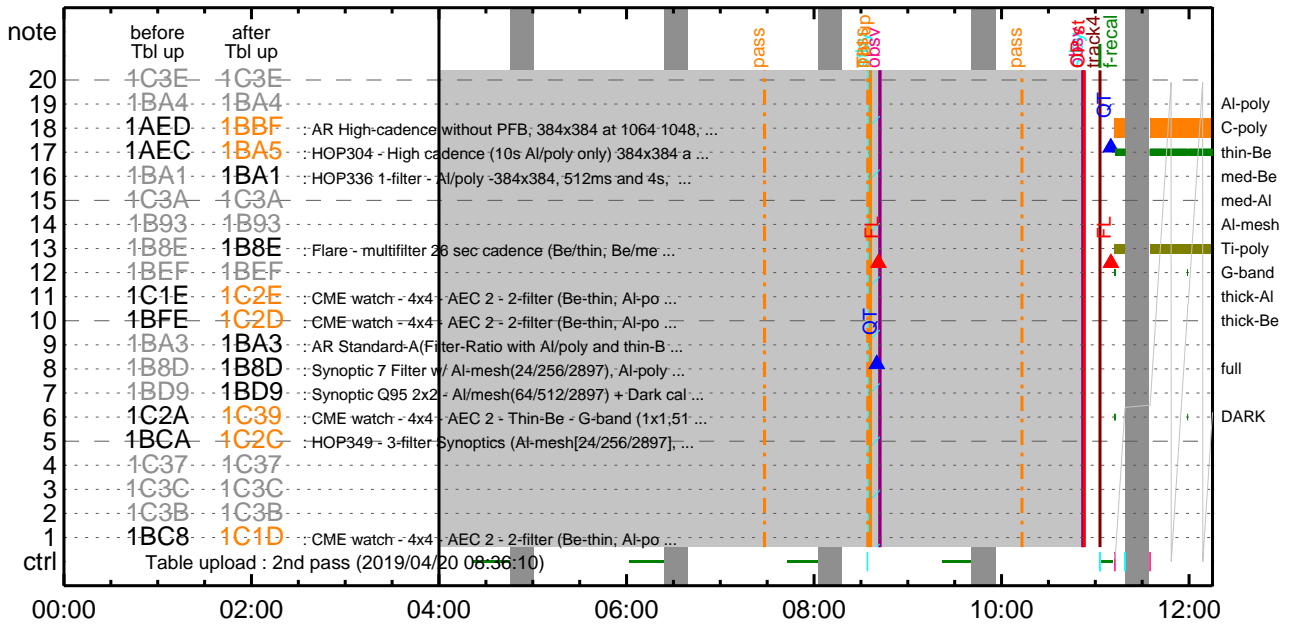


CMDI #0189 2019/04/20

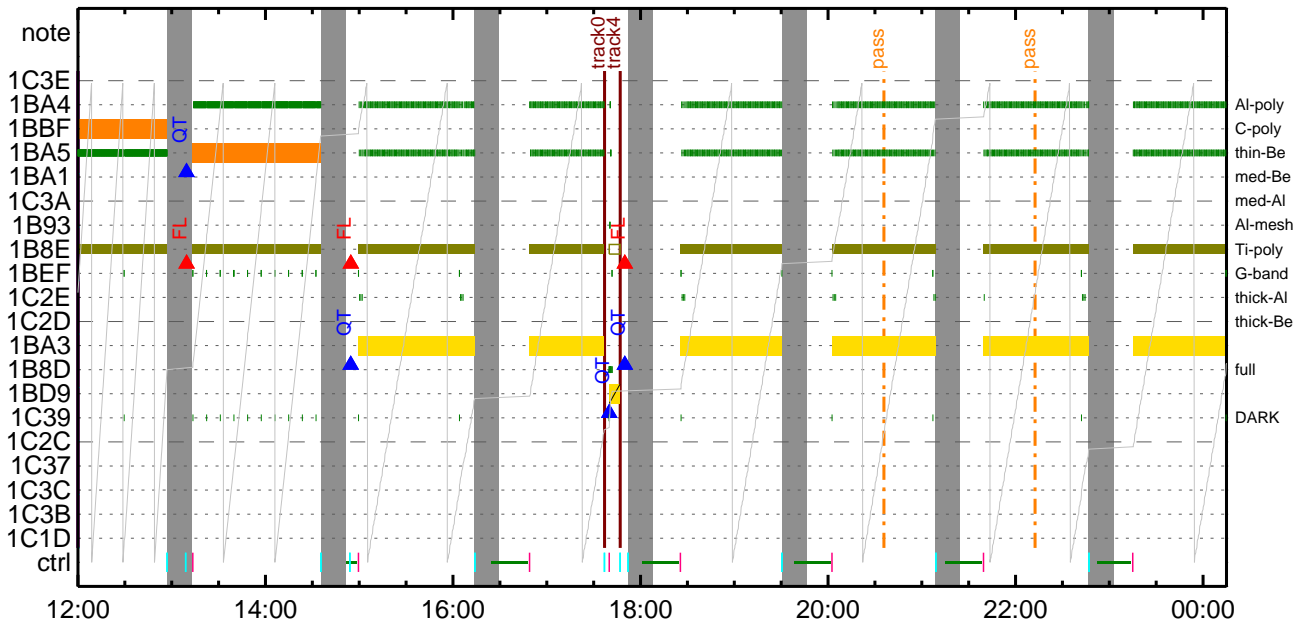


CMDI #0189 2019/04/21

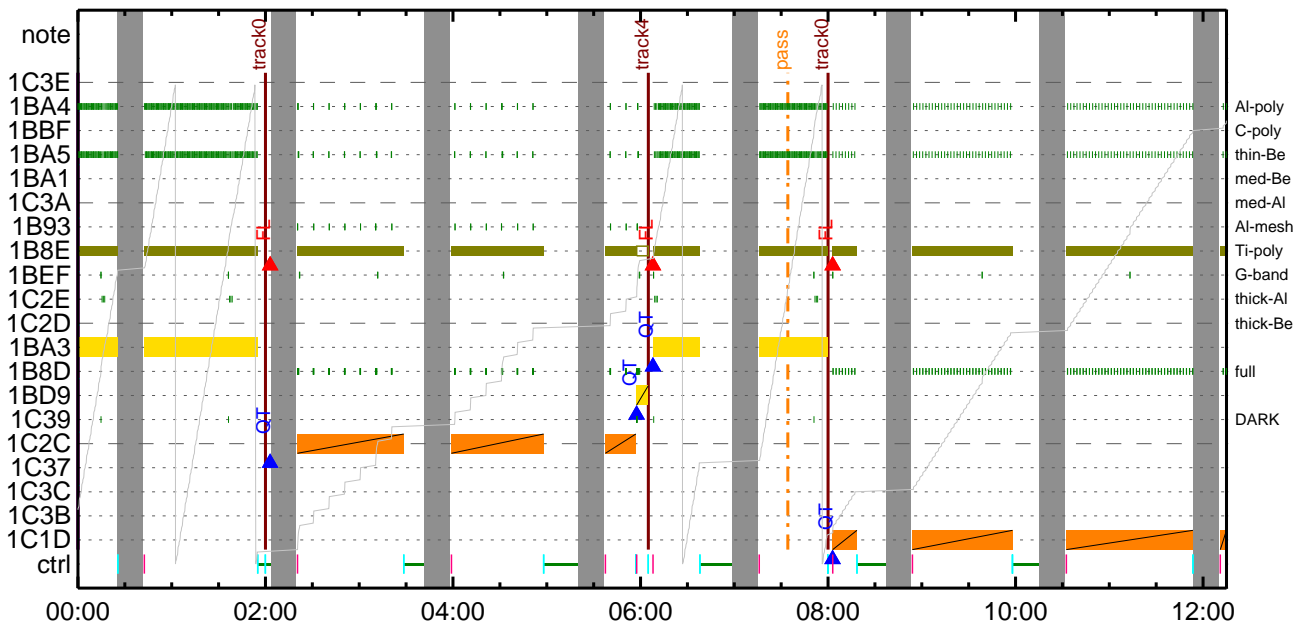


CMDI #0189 2019/04/21

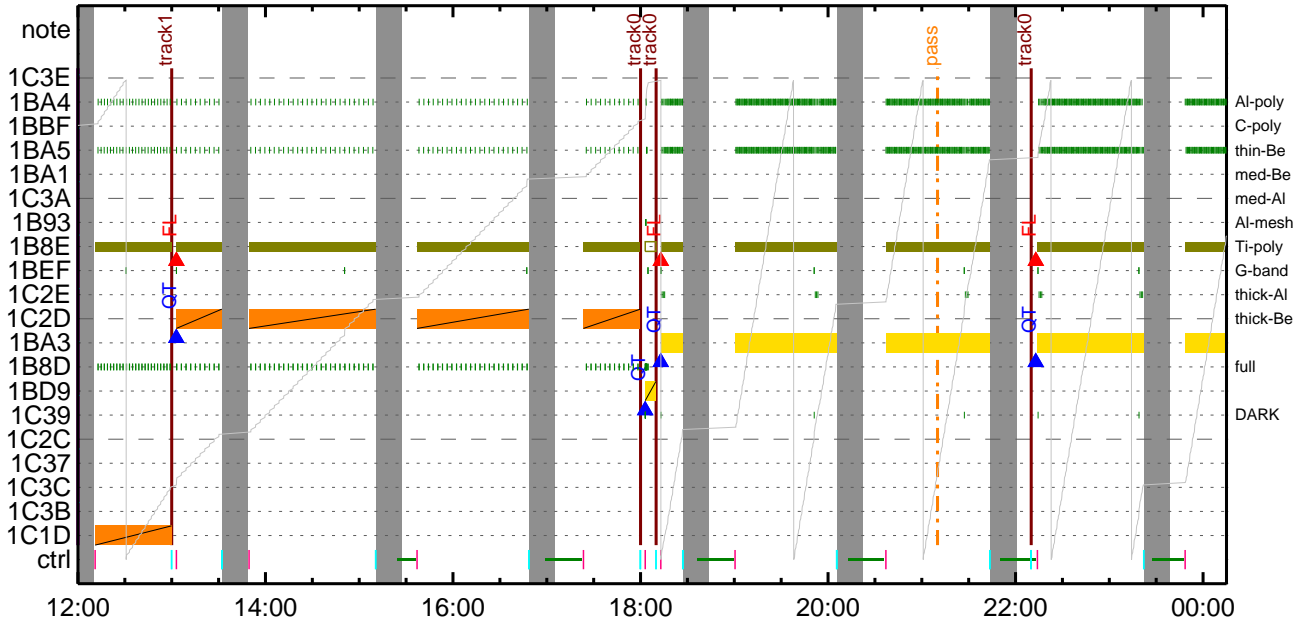


CMDI #0189 2019/04/22

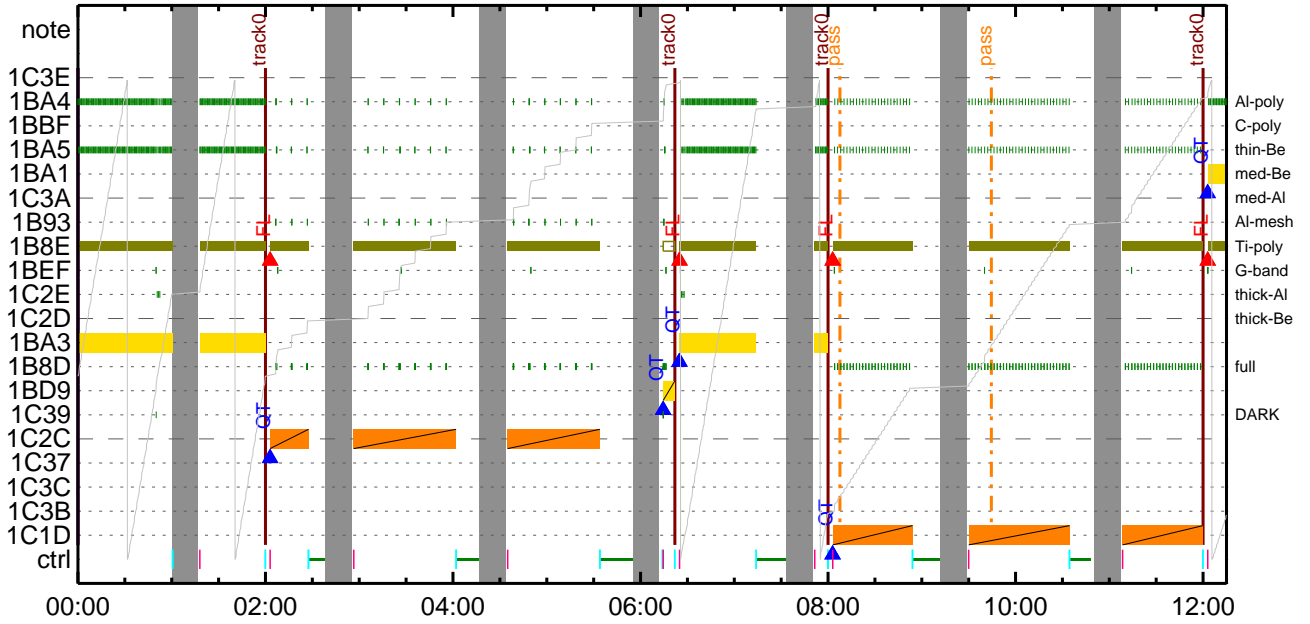


CMDI #0189 2019/04/22

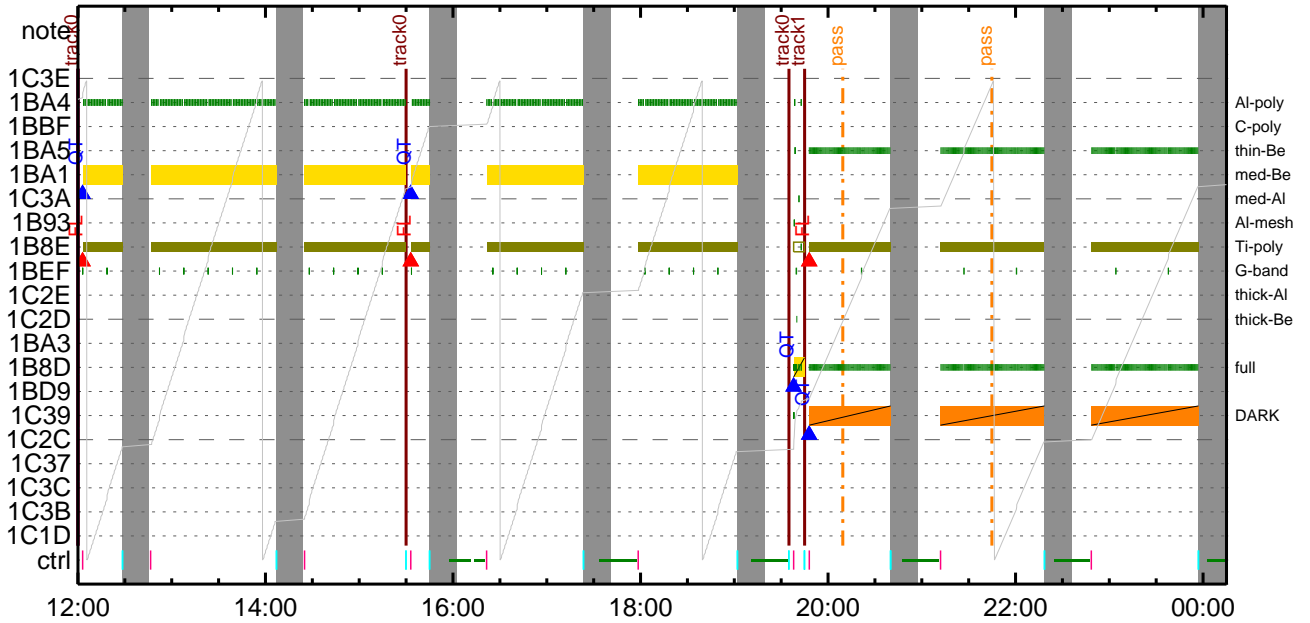


CMDI #0189 2019/04/23

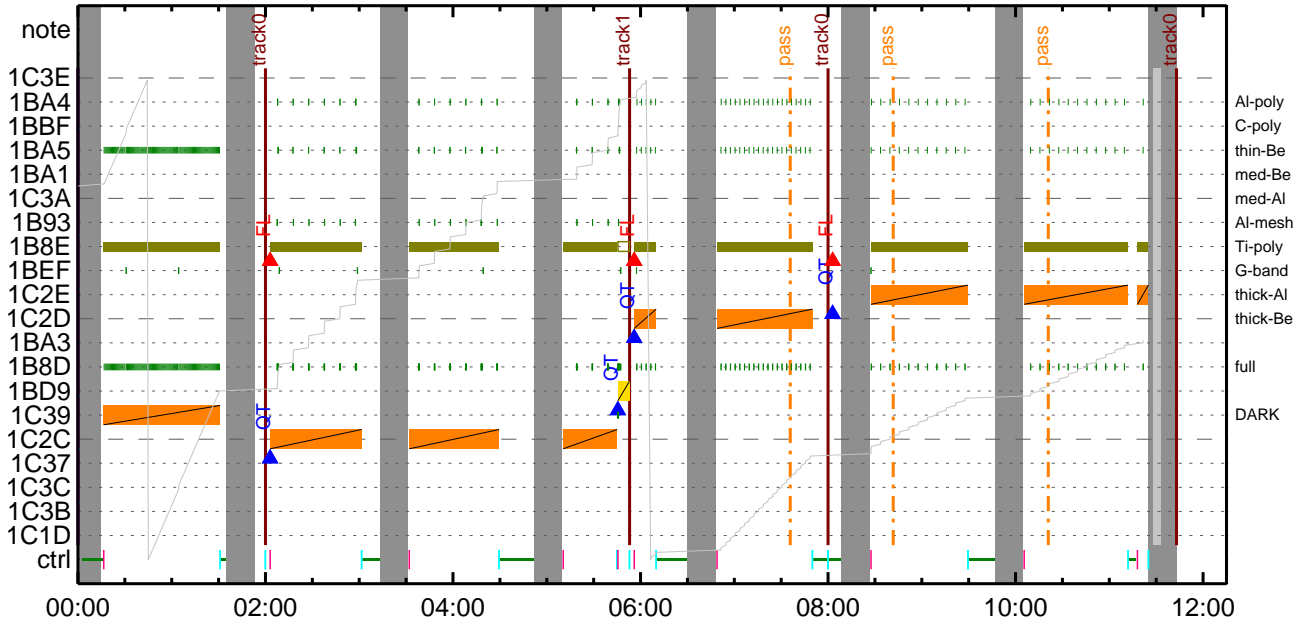


CMDI #0189 2019/04/23

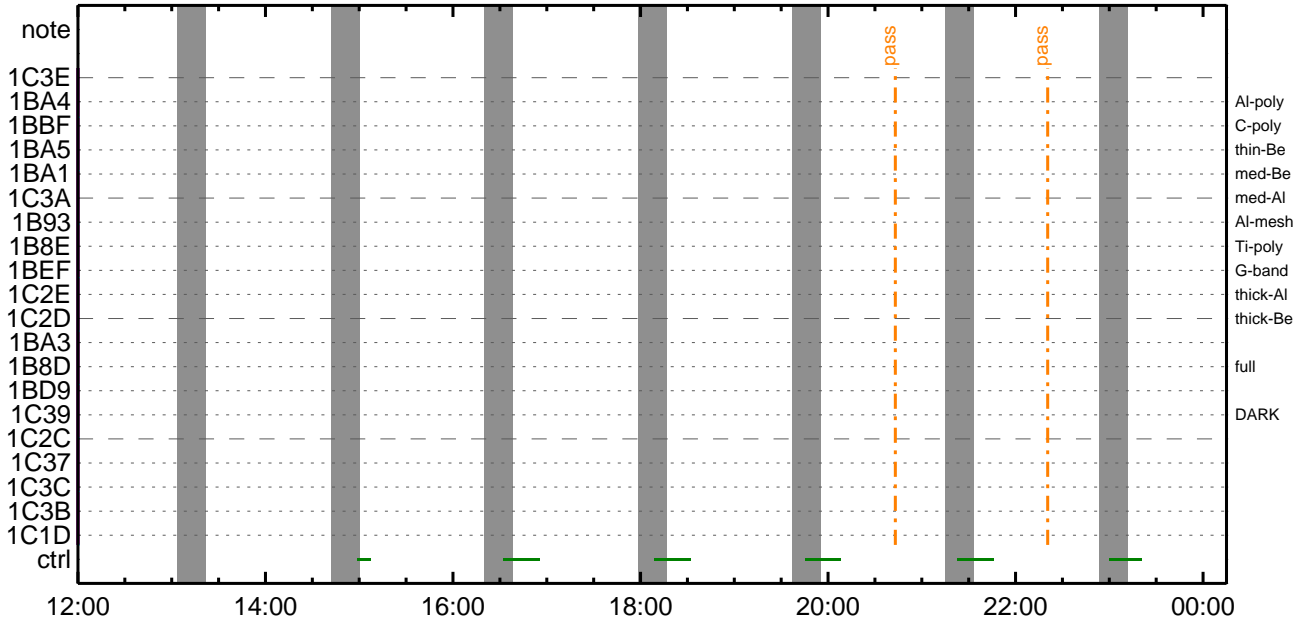


CMDI #0189 2019/04/24

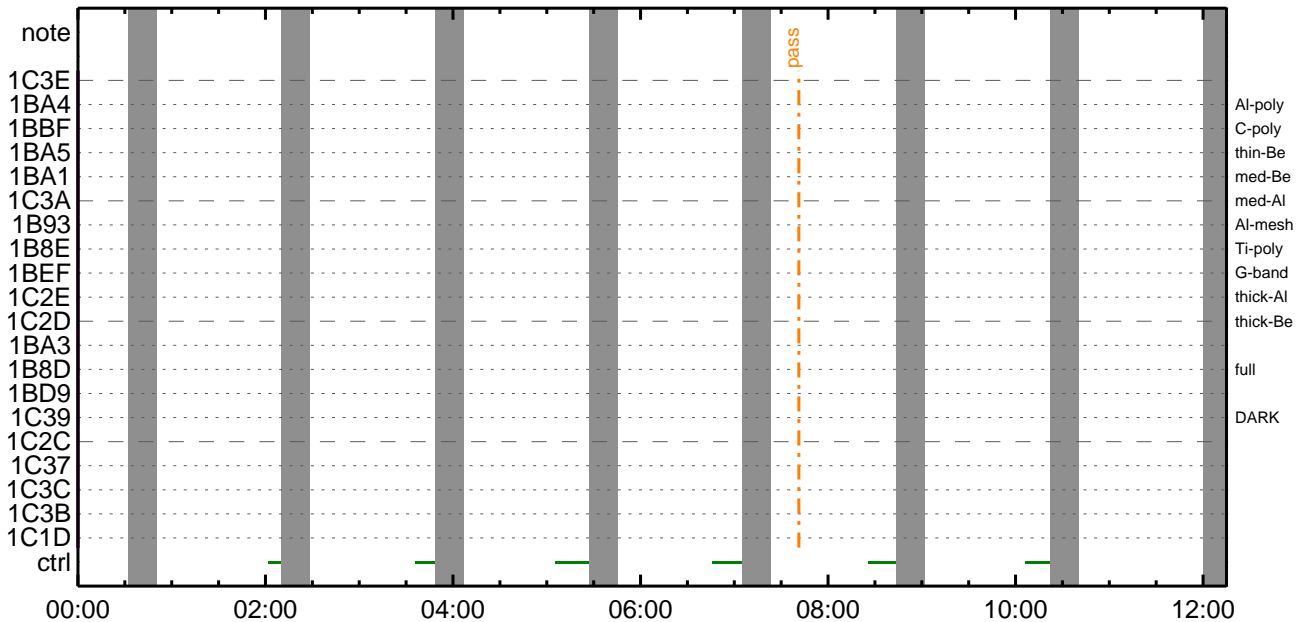


CMDI #0189 2019/04/24

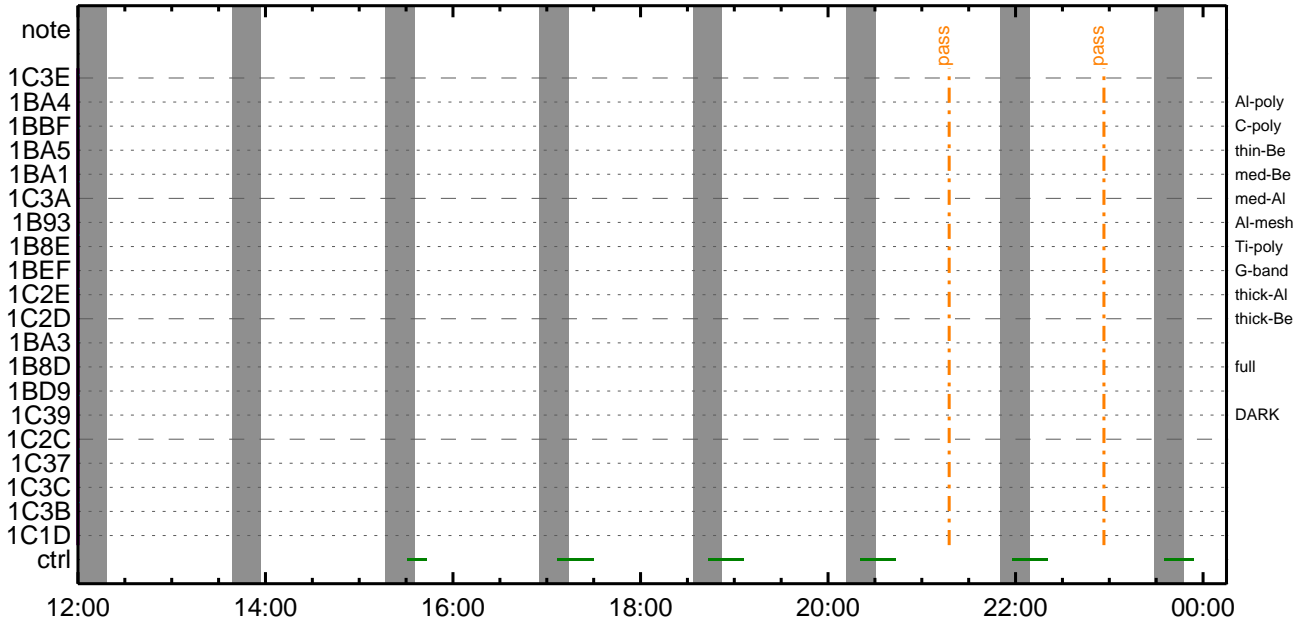

CMDI #0189 2019/04/25

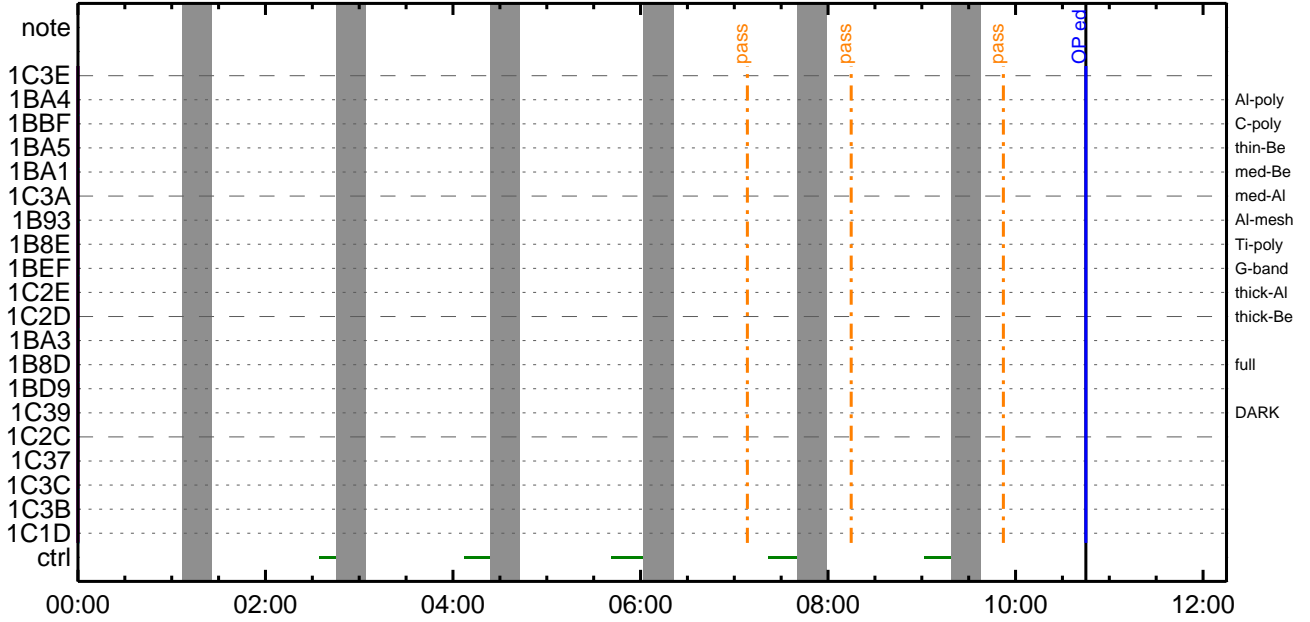

CMDI #0189 2019/04/25

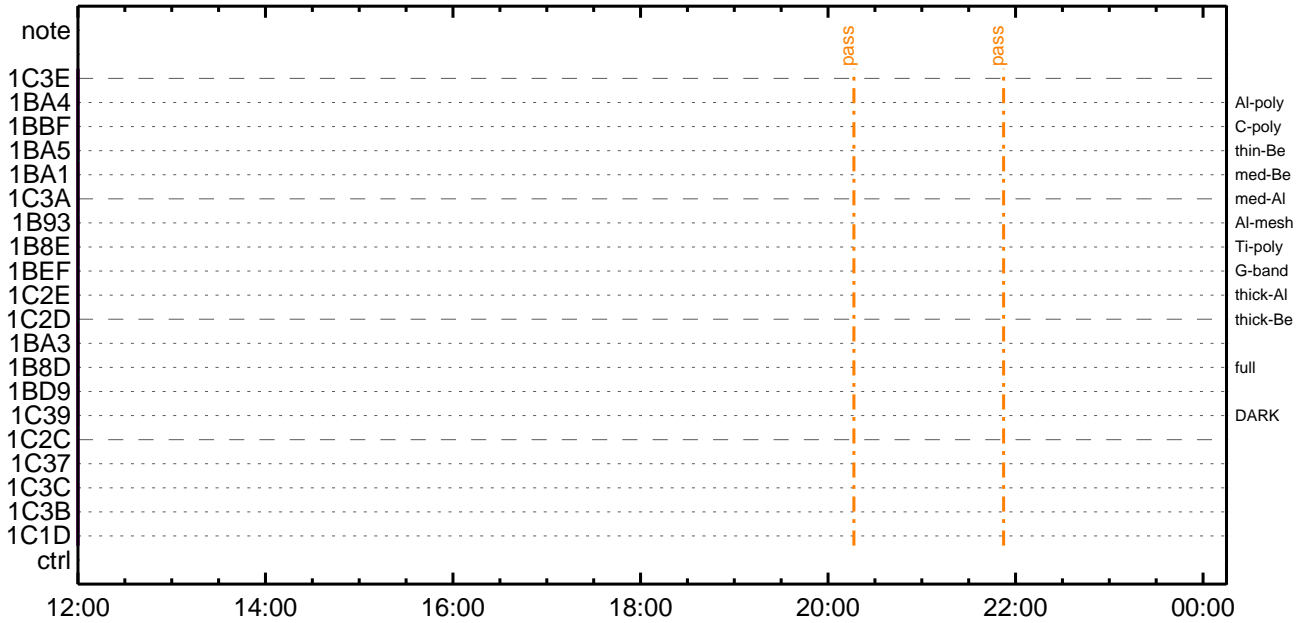

(a) Spacecraft Operation Procedure (real-commands)

```
main-059 2019-04-20 13:08:01 205 33 SOLAR-B MAIN //
0001 C.
0002 . C. ***** AOS *****
0003 C.
0004 . C. ;ãAOSYÁYŞYÁY-¼Á»Û;ã
0005 C.
0006 C. YÀYB;¼Y³YFYÖYÉÁ+ç®
0007 +. DC 00-00 NULL_DUMMY_CMD
0008 C.
0009 . C. ***** AOCs : Reload orbital element (send every contact) *****
0010 C. Áí;ÈçµÁµµ°®Í×ÁÇçÁYçYÁY×Yí;¼YÉ;ÈÈ%µ•íÉ;ÈÈ%°ÇÔµ•ç¼í¹ççÍ;çÁ®, ù¹µèµµçÁ+ç®µ•µÈµµ³µÈ;f
0011 +. DC 02-8E AOCU_ORB_UPD
0012 C.
0013 C.
0014 . C. *****
0015 C. OP/OGYí;¼YÉ;|YÁYÖY×
0016 C. *****
0017 C.
0018 . C. ;ãOP/OGYí;¼YÉ;ã
0019 . S. OP op-059:OP
0020 ()
0021 . S. OG og-059:OG
0022 ()
0023 C.
0024 . C. ;ãNMOG&OPÍ°èYÁYÖY×;ã
0025 C. NMOG(0x200000-0x207FFF;§ 32 kbyte)
0026 +. DC 01-23 DHU_DMA_DMP_PRM_SET
0027 BC (20 00 7f 01 02)
0028 C. çç[HK1_DMP_TOP_ADRS_1] EQ 40
0029 C. çç[HK1_DMP_TOP_ADRS_0] EQ 0
0030 C. çç[HK1_DMP_BLOCK_NUM] EQ 127
0031 C. çç[HK1_DMP_REPEAT_NUM] EQ 0
0032 C. çç[HK1_DMA_DMP_PIM] EQ DHU
0033 +. DC 01-22 DHU_MODE_CHNG
0034 BC (07 0b f8)
0035 C. çç[HK1_PKT_FORM_NO] EQ 7
0036 C. çç[HK1_PKT_GEN_TIME] EQ 0.25 s
0037 C. çç[HK1_S_TLM_BIT_RATE] EQ 32k
0038 C. çç[HK1_X_TLM_BIT_RATE] EQ 4M
0039 C. çç[HK1_DMP_CHK_FLG] EQ EXEC
0040 . C. YÁYÖY×¼ªª Í»µ³ÍÇ§
0041 C. çç[HK1_DMP_CHK_FLG] EQ NON
0042 . C. RAM ID=NMOGµÍ¼É¹ç•è²ÍOKµ³ÍÇ§
0043 C.
0044 C. NMOG(0x208000-0x20FFFF;§ 32 kbyte)
0045 +. DC 01-23 DHU_DMA_DMP_PRM_SET
0046 BC (20 80 7f 01 02)
0047 C. çç[HK1_DMP_TOP_ADRS_1] EQ 41
0048 C. çç[HK1_DMP_TOP_ADRS_0] EQ 0
0049 C. çç[HK1_DMP_BLOCK_NUM] EQ 127
0050 C. çç[HK1_DMP_REPEAT_NUM] EQ 0
0051 C. çç[HK1_DMA_DMP_PIM] EQ DHU
0052 +. DC 01-22 DHU_MODE_CHNG
0053 BC (07 0b f8)
0054 C. çç[HK1_PKT_FORM_NO] EQ 7
0055 C. çç[HK1_PKT_GEN_TIME] EQ 0.25 s
0056 C. çç[HK1_S_TLM_BIT_RATE] EQ 32k
0057 C. çç[HK1_X_TLM_BIT_RATE] EQ 4M
0058 C. çç[HK1_DMP_CHK_FLG] EQ EXEC
0059 . C. YÁYÖY×¼ªª Í»µ³ÍÇ§
0060 C. çç[HK1_DMP_CHK_FLG] EQ NON
0061 . C. RAM ID=NMOGµÍ¼É¹ç•è²ÍOKµ³ÍÇ§
0062 C.
0063 C. NMOG(0x210000-0x210FFF;§ 256byte)+OP(0x210100-0x2141FF: 16.25kbyte)
0064 +. DC 01-23 DHU_DMA_DMP_PRM_SET
0065 BC (21 00 41 01 02)
0066 C. çç[HK1_DMP_TOP_ADRS_1] EQ 42
0067 C. çç[HK1_DMP_TOP_ADRS_0] EQ 0
0068 C. çç[HK1_DMP_BLOCK_NUM] EQ 65
0069 C. çç[HK1_DMP_REPEAT_NUM] EQ 0
0070 C. çç[HK1_DMA_DMP_PIM] EQ DHU
0071 +. DC 01-22 DHU_MODE_CHNG
0072 BC (07 0b f8)
0073 C. çç[HK1_PKT_FORM_NO] EQ 7
0074 C. çç[HK1_PKT_GEN_TIME] EQ 0.25 s
0075 C. çç[HK1_S_TLM_BIT_RATE] EQ 32k
0076 C. çç[HK1_X_TLM_BIT_RATE] EQ 4M
0077 C. çç[HK1_DMP_CHK_FLG] EQ EXEC
0078 . C. YÁYÖY×¼ªª Í»µ³ÍÇ§
0079 C. çç[HK1_DMP_CHK_FLG] EQ NON
0080 . C. RAM ID=NMOG, RAM ID=OPµÍ¼É¹ç•è²ÍOKµ³ÍÇ§
0081 C.
0082 . C. ***** °È²¼µÍ¼Á´¶°µÈÈ-µÁ+ç® (¼µµ-YÁYÖY×¼ªªçµµÁÓÁæçªµµ°µç¼í¹çççµµ) *****
0083 C. DHUYá;¼YÉ;ÈY¼;Yí;¼YÉ;ÈµðÍáµ¹
0084 +. DC 01-22 DHU_MODE_CHNG
0085 BC (02 0a f8)
0086 C. çç[HK1_PKT_FORM_NO] EQ 2
0087 C. çç[HK1_PKT_GEN_TIME] EQ 0.5S
0088 C. çç[HK1_S_TLM_BIT_RATE] EQ 32K
0089 C. çç[HK1_X_TLM_BIT_RATE] EQ 4M
0090 C.
0091 . C. *****
0092 C. TI-CMD SET (OPOG STOP/COPY/START)
0093 C. *****
0094 C.
0095 . C. NOTICE ;§ OPOG UPLOADµ-Á+ç®NGµÍ¼¹çç;ç°È²¼µÍ¼TI-CMDÁ+ç®µÍ¼Á¹Ôµµ•µÈµµ³µÈ;f
```

0096 C. ...
0097 C.
0098 C. TI... (UT)
0099 +. TI 2019-04-20 10:48:00.0
0100 DC 01-B3 DHU_OP_STOP
0101 C. ... EQ 1COUNTUP
0102 C.
0103 +. TI 2019-04-20 10:48:01.0
0104 DC 01-B4 DHU_OP_COPY
0105 C. ... EQ 1COUNTUP
0106 C.
0107 +. TI 2019-04-20 10:48:01.0
0108 DC 01-B5 DHU_OPOG_COPY
0109 C. ... EQ 1COUNTUP
0110 C.
0111 +. TI 2019-04-20 10:52:59.5
0112 DC 01-B2 DHU_OP_START
0113 C. ... EQ 1COUNTUP
0114 C.
0115 C. ...
0116 C. ... EQ ENA
0117 C. ... EQ 4
0118 C. ... EQ DHU
0119 C. ... EQ 0xB3
0120 C.
0121 C. *****
0122 C. TI...
0123 C. *****
0124 C.
0125 C. TI_TBL(0x03AB00-0x03AEFF; \$ 1024byte)
0126 +. DC 01-23 DHU_DMA_DMP_PRM_SET
0127 BC (03 ab 03 01 02)
0128 C. ... EQ 07
0129 C. ... EQ 2B
0130 C. ... EQ 3
0131 C. ... EQ 0
0132 C. ... EQ DHU
0133 +. DC 01-22 DHU_MODE_CHNG
0134 BC (07 0b f8)
0135 C. ... EQ 7
0136 C. ... EQ 0.25 s
0137 C. ... EQ 32k
0138 C. ... EQ 4M
0139 C. ... EQ EXEC
0140 C.
0141 C. ...
0142 C. ... EQ NON
0143 C.
0144 C. RAM ID=TI_TBL...
0145 C.
0146 C. DHU...
0147 +. DC 01-22 DHU_MODE_CHNG
0148 BC (02 0a f8)
0149 C. ... EQ 2
0150 C. ... EQ 0.5S
0151 C. ... EQ 32K
0152 C. ... EQ 4M
0153 C.
0154 C. *****
0155 C. SOT TI command set
0156 C. *****
0157 C. Execute, after the success of OP upload.
0158 +. TI 2019-04-20 10:52:16.0
0159 DC 07-F0 MDP_SOT_MODE_STBY
0160 BC (41)
0161 C. -----
0162 C. HK1_TI_CMD_NUM = 1 CNTUP []
0163 C. -----
0164 C. ***** SOT END *****
0165 C. Stop EIS observation and temporarily disable EIS mode changes
0166 C.
0167 C.
0168 C. ***** Start EIS operation (TI set) *****
0169 C. Execute, after the success of OP upload.
0170 C. Set EIS TI-commands
0171 +. TI 2019-04-20 10:52:30.0
0172 DC 07-FC EIS_MODE_MANU
0173 BC (21 02)
0174 +. TI 2019-04-20 10:52:40.0
0175 DC 07-FC EIS_MODE_CHG_DIS
0176 BC (22)
0177 C. [] [HK1_TI_CMD_NUM] EQ 2 COUNTUP
0178 C. ***** End EIS operation (TI set) *****
0179 C.
0180 C.
0181 C.
0182 C. ***** XRT START *****
0183 C. Execute, after the success of OP upload.
0184 +. TI 2019-04-20 10:52:00.0
0185 DC 07-F0 MDP_XRT_MODE_STBY
0186 BC (c3)
0187 C. [] [HK1_TI_CMD_NUM] EQ 1COUNTUP
0188 C.
0189 C. ***** XRT END *****
0190 C.
0191 C. ***** MDP ... *****
0192 C. (...)
0193 S. DC-BC dcbc-402:DCBC

```
0194 (MDP_known_event)
0195 C.
0196 C.
0197 . C. ***** ¥ÐŸ!•İ Daily±;İÑøĒ'Øσ¹αēDCBC•x²è *****
0198 . S. DC-BC dcbc-153:DCBC
0199 (SPECIAL-CMD_DAILY_OPERATIN_DCB)
0200 C.
0201 C.
0202 . C. ;ãLOS¥Á¥S¥Ã¥~¼Â»Ü;ã
0203 C.
0204 . C. ***** LOS *****
0205 C.
```



```

0096 C.
0097 C.
0098 . C. ***** AOCs Commands (Tracking Curve Upload) *****
0099 C. Upload the Orbit Element and the Target Attitude
0100 C. RAM-ID:TARGET_ATT
0101 . S. RAM ram-150:TARGET_ATT
0102 ( )
0103 C.
0104 C.
0105 C. Set the dump memory area of TARGET_ATT
0106 +. DC 02-48 AOCU_DUMP_SET
0107 BC (07 00 00 00 18 00)
0108 C.
0109 C. <A_STS1>[MEMORY OPERATE SATUS] ADRS = 070000 [ ]
0110 C.
0111 C.
0112 C. Change the TLMFormatNo for the AOCs Dump Format
0113 +. DC 01-22 DHU_MODE_CHNG
0114 BC (04 0b f8)
0115 C.
0116 C. Wait for AOCSDUMP to end
0117 C.
0118 . C. Check the dump memory
0119 C.
0120 C. Result = OK [ ]
0121 C.
0122 +. DC 01-22 DHU_MODE_CHNG
0123 BC (02 0a f8)
0124 C.
0125 C. <A_***>[TLM STS] FMT = 2 [ ]
0126 C.
0127 +. DC 02-8E AOCU_ORB_UPD
0128 . C.
0129 C.
0130 C. ***** XRT START *****
0131 C.
0132 +. DC 07-F0 MDP_XRT_CTRL_MANU
0133 BC (c1)
0134 + DC 07-F0 MDP_XRT_MODE_STBY
0135 BC (c3)
0136 . C. ----- Success Verify ? OK / NG____
0137 C.
0138 C. XRT Obs. Table Upload
0139 . S. RAM ram-291:MDP_OBS_X
0140 ( )
0141 C.
0142 +. DC 07-F0 MDP_DUMP_XRTTBL
0143 BC (84 07 00 00 00 3a d4)
0144 . C. ----- Comparison Check ? OK / ERR ____
0145 C.
0146 C.
0147 +. DC 07-F0 MDP_XRT_ROI_SET
0148 BC (cd 01 b1 b1 04 04)
0149 + DC 07-F0 MDP_XRT_ROI_SET
0150 BC (cd 02 b1 b1 08 08)
0151 + DC 07-F0 MDP_XRT_ROI_SET
0152 BC (cd 03 b1 b1 08 08)
0153 + DC 07-F0 MDP_XRT_ROI_SET
0154 BC (cd 04 b1 b1 06 06)
0155 + DC 07-F0 MDP_XRT_ROI_SET
0156 BC (cd 05 85 83 06 06)
0157 + DC 07-F0 MDP_XRT_ROI_SET
0158 BC (cd 06 85 83 06 06)
0159 + DC 07-F0 MDP_XRT_ROI_SET
0160 BC (cd 07 85 83 08 08)
0161 + DC 07-F0 MDP_XRT_ROI_SET
0162 BC (cd 08 80 80 20 20)
0163 + DC 07-F0 MDP_XRT_ROI_SET
0164 BC (cd 09 80 80 20 08)
0165 + DC 07-F0 MDP_XRT_ROI_SET
0166 BC (cd 0a 80 80 08 20)
0167 + DC 07-F0 MDP_XRT_ROI_SET
0168 BC (cd 0b 80 80 08 08)
0169 + DC 07-F0 MDP_XRT_ROI_SET
0170 BC (cd 0f 80 80 06 06)
0171 + DC 07-F0 MDP_XRT_ROI_SET
0172 BC (cd 10 80 80 08 08)
0173 + DC 07-F0 MDP_XRT_FLD_ENA
0174 BC (d8)
0175 + DC 07-F0 MDP_XRT_FLRCTRL_ENA
0176 BC (c8)
0177 + DC 07-F0 MDP_XRT_ARS_DIS
0178 BC (d5)
0179 + DC 07-F0 MDP_XRT_AEC_RESET
0180 BC (d0)
0181 + DC 07-F0 MDP_XRT_FLD_RESET
0182 BC (da)
0183 +. DC 07-F0 MDP_XRT_QT_PROG_SET
0184 BC (c4 09)
0185 +. DC 07-F0 MDP_XRT_FL_PROG_SET
0186 BC (c5 0d)
0187 . C. ----- Success Verify ? OK / NG ____
0188 C.
0189 C.
0190 . C. All OK? Yes--> Please Proceed. / No --> Stop here.
0191 C.
0192 +. DC 07-F0 MDP_XRT_MODE_OBSV
0193 BC (c2)

```

```
0194 +. TI 2019-04-20 10:52:02.0
0195 DC 07-F0 MDP_XRT_MODE_OBSV
0196 BC (c2)
0197 . C. ----- Success Verify ?          OK / NG ____
0198 C.
0199 C. ***** XRT END *****
0200 . C. Load OBSTBL, dump OBSTBL, enable EIS mode changes
0201 +. DC 07-FC EIS_MODE_CHG_ENA
0202 BC (20)
0203 . C. Verify EIS_MODE_CHG_FLG is ENA
0204 +. DC 07-FC EIS_MODE_MANU
0205 BC (21 02)
0206 . C. Verify EIS in MANUAL mode
0207 . C. Estimated OBSTBL upload time is 43s
0208 C. *****
0209 C. EIS START OBSTBL LOAD
0210 C. *****
0211 . S. RAM ram-820:EIS_OBSTBL
0212 ( )
0213 +. DC 07-FC EIS_DUMP_OBSTBL
0214 BC (07 07 07 00 00 70 00)
0215 C.
0216 C. Execute, after the success of OBSTBL upload.
0217 C. Set EIS TI-commands
0218 +. TI 2019-04-20 10:52:50.0
0219 DC 07-FC EIS_MODE_CHG_ENA
0220 BC (20)
0221 . C. [ ] [HK1_TI_CMD_NUM]      EQ      1 COUNTUP
0222 C. *****
0223 C. EIS END OBSTBL LOAD
0224 C. *****
0225 C.
0226 . C. ***** MDP 'úÃîâî»ö¼ÝªËÂðª¹ªëDCBC•x²è *****
0227 C. (¼áºîÿÓÿÄÿÈÿÞÿËÿÄÿ¼ÿËÿªÿËÿªÿ¼ªª¼Á»Ûª¹ªè)
0228 . S. DC-BC dcbc-402:DCBC
0229 (MDP_known_event)
0230 C.
0231 C.
0232 . C. ***** ¼Ðÿ¹•Ï Daily±;îÑªË´Øª¹ªèDCBC•x²è *****
0233 . S. DC-BC dcbc-153:DCBC
0234 (SPECIAL-CMD_DAILY_OPERATIN_DCB)
0235 C.
0236 C.
0237 . C. ;ãLOSÿÄÿÏÿËÿËÿ-¼Á»Û;ä
0238 C.
0239 . C. ***** LOS *****
0240 C.
```



```
0096 C.
0097 C.
0098 . C. *****
0099 C. SOT table upload
0100 C. *****
0101 . C. < Stop SP table >
0102 +. DC 07-F0 MDP_SP_CTRL_MANU
0103 BC (61)
0104 C. -----
0105 C. MDP_SP_CTRL_MODE = MANU [ ]
0106 C. -----
0107 C.
0108 . C. <Upload SP Observation Table>
0109 . S. RAM ram-284:MDP_OBS_S
0110 ( )
0111 C.
0112 . C. < Dump RAMID=MDP_OBS_S >
0113 +. DC 07-F0 MDP_DUMP_SPTBL
0114 BC (83 07 00 00 00 38 b8)
0115 C. -----
0116 C. MDP_OBS_S verify = OK/NG [ ]
0117 C. -----
0118 C.
0119 C. *****
0120 C. SOT TI command set
0121 C. *****
0122 C. Execute, after the success of TBL upload.
0123 +. TI 2019-04-20 10:52:18.0
0124 DC 07-F0 MDP_SOT_MODE_OBSV
0125 BC (40)
0126 . C. -----
0127 C. HK1_TI_CMD_NUM = 1 CNTUP [ ]
0128 C. -----
0129 C.
0130 C.
0131 . C. ***** MDP 'úÃîâî»ö¼ÝâÉÄðâ¹âðDCBC•x²è *****
0132 C. (%ã°îÿÔÿÄÿÉÿËÿËÿäÿáÿçÿéâÉ%¼â¼Å»Ûâ¹âè)
0133 . S. DC-BC dcbc-402:DCBC
0134 (MDP_known_event)
0135 C.
0136 C.
0137 . C. ***** ÿDÿ¹•Ï Daily±;îÑâÉ´Øâ¹âðDCBC•x²è *****
0138 . S. DC-BC dcbc-153:DCBC
0139 (SPECIAL-CMD_DAILY_OPERATIN_DCB)
0140 C.
0141 C.
0142 . C. ;ãLOSÿÄÿ$ÿÿÄÿÿ-¼Å»Û;ä
0143 C.
0144 . C. ***** LOS *****
0145 C.
```


Apr 20, 19 13:08

XRT_OGLIST_0189.chk

Page 1/13

*** OP Sequence for XRT ***

2019/04/20	11:02:54.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/20	11:02:56.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/20	11:02:58.0	XRT_FOCUS_RECALIBRATE_417_OG [0x1a1]							
		XRT_FOCUS_RECAL	2	07-F8	78	00			
2019/04/20	11:03:00.0	AOCS_Ore-point_Start_1_OG [0x097]							
		AOCU_NM	5	02-76	04	00	00	00	00
2019/04/20	11:06:58.0	XRT_FOCUS_POSITION_410_OG [0x19a]							
		XRT_FOCUS_POSITION	4	07-F8	22	fe	97	00	
2019/04/20	11:07:18.0	XRT_FLD_ENA_411_OG [0x19b]							
		MDP_XRT_FLD_ENA	1	07-F0	d8				
2019/04/20	11:07:20.0	XRT_FLRCTRL_ENA_412_OG [0x19c]							
		MDP_XRT_FLRCTRL_ENA	1	07-F0	c8				
2019/04/20	11:07:22.0	XRT_AEC_RESET_448_OG [0x1c0]							
		MDP_XRT_AEC_RESET	1	07-F0	d0				
2019/04/20	11:07:24.0	XRT_ARS_DIS_423_OG [0x1a7]							
		MDP_XRT_ARS_DIS	1	07-F0	d5				
2019/04/20	11:07:26.0	XRT_FLD_RESET_434_OG [0x1b2]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/20	11:09:56.0	XRT_QT_PROG_SET_432_OG [0x1b0]							
		MDP_XRT_QT_PROG_SET	2	07-F0	c4	12			
2019/04/20	11:09:58.0	XRT_FL_PROG_SET_440_OG [0x1b8]							
		MDP_XRT_FL_PROG_SET	2	07-F0	c5	0d			
2019/04/20	11:11:30.0	XRT_Custom_430_OG [0x1ae]							
2019/04/20	11:12:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/20	11:19:00.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/20	11:19:02.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/20	11:19:04.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/20	11:19:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2019/04/20	11:22:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/20	11:34:00.0	XRT_Custom_430_OG [0x1ae]							
2019/04/20	11:35:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/20	12:57:00.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/20	12:57:02.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/20	12:57:04.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/20	12:57:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2019/04/20	13:00:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/20	13:08:54.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/20	13:08:56.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/20	13:08:58.0	XRT_FOCUS_POSITION_410_OG [0x19a]							
		XRT_FOCUS_POSITION	4	07-F8	22	fe	97	00	
2019/04/20	13:09:18.0	XRT_FLD_ENA_411_OG [0x19b]							
		MDP_XRT_FLD_ENA	1	07-F0	d8				
2019/04/20	13:09:20.0	XRT_FLRCTRL_ENA_412_OG [0x19c]							
		MDP_XRT_FLRCTRL_ENA	1	07-F0	c8				
2019/04/20	13:09:22.0	XRT_AEC_RESET_448_OG [0x1c0]							
		MDP_XRT_AEC_RESET	1	07-F0	d0				
2019/04/20	13:09:24.0	XRT_ARS_DIS_423_OG [0x1a7]							
		MDP_XRT_ARS_DIS	1	07-F0	d5				
2019/04/20	13:09:26.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/20	13:09:28.0	XRT_QT_PROG_SET_416_OG [0x1a0]							
		MDP_XRT_QT_PROG_SET	2	07-F0	c4	11			
2019/04/20	13:09:30.0	XRT_FL_PROG_SET_440_OG [0x1b8]							
		MDP_XRT_FL_PROG_SET	2	07-F0	c5	0d			
2019/04/20	13:12:30.0	XRT_Custom_430_OG [0x1ae]							
2019/04/20	13:13:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/20	14:35:30.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/20	14:35:32.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/20	14:35:34.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/20	14:35:36.0	XRT_PREFLR_STRT_428_OG [0x1ac]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2019/04/20	14:38:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/20	14:54:00.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/20	14:54:02.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/20	14:54:04.0	XRT_FOCUS_POSITION_410_OG [0x19a]							
		XRT_FOCUS_POSITION	4	07-F8	22	fe	97	00	
2019/04/20	14:54:24.0	XRT_FLD_ENA_411_OG [0x19b]							
		MDP_XRT_FLD_ENA	1	07-F0	d8				

2019/04/20	14:54:26.0	XRT_FLRCTRL_ENA_412_OG [0x19c]	MDP_XRT_FLRCTRL_ENA	1	07-F0	c8	
2019/04/20	14:54:28.0	XRT_AEC_RESET_448_OG [0x1c0]	MDP_XRT_AEC_RESET	1	07-F0	d0	
2019/04/20	14:54:30.0	XRT_ARS_DIS_423_OG [0x1a7]	MDP_XRT_ARS_DIS	1	07-F0	d5	
2019/04/20	14:54:32.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da	
2019/04/20	14:54:34.0	XRT_QT_PROG_SET_438_OG [0x1b6]	MDP_XRT_QT_PROG_SET	2	07-F0	c4	09
2019/04/20	14:54:36.0	XRT_FL_PROG_SET_440_OG [0x1b8]	MDP_XRT_FL_PROG_SET	2	07-F0	c5	0d
2019/04/20	14:58:30.0	XRT_Custom_430_OG [0x1ae]					
2019/04/20	14:59:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0	
2019/04/20	16:14:00.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1	
2019/04/20	16:14:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1	
2019/04/20	16:14:04.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da	
2019/04/20	16:14:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]	MDP_XRT_PREFLR_STRT	1	07-F0	e8	
2019/04/20	16:17:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9	
2019/04/20	16:48:00.0	XRT_Custom_430_OG [0x1ae]					
2019/04/20	16:49:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0	
2019/04/20	17:36:54.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1	
2019/04/20	17:36:56.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1	
2019/04/20	17:36:58.0	XRT_FOCUS_POSITION_406_OG [0x196]	XRT_FOCUS_POSITION	4	07-F8	22	ff aa 00
2019/04/20	17:37:00.0	AOCS_Or-e-point_Start_2_OG [0x098]	AOCU_NM	5	02-76	00	00 00 00 00
2019/04/20	17:37:18.0	XRT_FLD_DIS_409_OG [0x199]	MDP_XRT_FLD_DIS	1	07-F0	d9	
2019/04/20	17:37:20.0	XRT_FLRCTRL_DIS_413_OG [0x19d]	MDP_XRT_FLRCTRL_DIS	1	07-F0	c9	
2019/04/20	17:37:22.0	XRT_ARS_DIS_443_OG [0x1bb]	MDP_XRT_ARS_DIS	1	07-F0	d5	
2019/04/20	17:39:58.0	XRT_QT_PROG_SET_422_OG [0x1a6]	MDP_XRT_QT_PROG_SET	2	07-F0	c4	07
2019/04/20	17:40:00.0	XRT_CTRL_AUTO_408_OG [0x198]	MDP_XRT_CTRL_AUTO	1	07-F0	c0	
2019/04/20	17:46:54.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1	
2019/04/20	17:46:56.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1	
2019/04/20	17:46:58.0	XRT_FOCUS_POSITION_410_OG [0x19a]	XRT_FOCUS_POSITION	4	07-F8	22	fe 97 00
2019/04/20	17:47:00.0	AOCS_Or-e-point_Start_1_OG [0x097]	AOCU_NM	5	02-76	04	00 00 00 00
2019/04/20	17:47:18.0	XRT_FLD_ENA_411_OG [0x19b]	MDP_XRT_FLD_ENA	1	07-F0	d8	
2019/04/20	17:47:20.0	XRT_FLRCTRL_ENA_412_OG [0x19c]	MDP_XRT_FLRCTRL_ENA	1	07-F0	c8	
2019/04/20	17:47:22.0	XRT_AEC_RESET_448_OG [0x1c0]	MDP_XRT_AEC_RESET	1	07-F0	d0	
2019/04/20	17:47:24.0	XRT_ARS_DIS_423_OG [0x1a7]	MDP_XRT_ARS_DIS	1	07-F0	d5	
2019/04/20	17:47:26.0	XRT_FLD_RESET_434_OG [0x1b2]	MDP_XRT_FLD_RESET	1	07-F0	da	
2019/04/20	17:49:56.0	XRT_QT_PROG_SET_438_OG [0x1b6]	MDP_XRT_QT_PROG_SET	2	07-F0	c4	09
2019/04/20	17:49:58.0	XRT_FL_PROG_SET_440_OG [0x1b8]	MDP_XRT_FL_PROG_SET	2	07-F0	c5	0d
2019/04/20	17:52:00.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1	
2019/04/20	17:52:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1	
2019/04/20	17:52:04.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da	
2019/04/20	17:52:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]	MDP_XRT_PREFLR_STRT	1	07-F0	e8	
2019/04/20	17:55:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9	
2019/04/20	18:24:30.0	XRT_Custom_430_OG [0x1ae]					
2019/04/20	18:25:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0	
2019/04/20	19:30:30.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1	
2019/04/20	19:30:32.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1	
2019/04/20	19:30:34.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da	
2019/04/20	19:30:36.0	XRT_PREFLR_STRT_428_OG [0x1ac]	MDP_XRT_PREFLR_STRT	1	07-F0	e8	
2019/04/20	19:33:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9	
2019/04/20	20:01:30.0	XRT_Custom_430_OG [0x1ae]					
2019/04/20	20:02:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]					

2019/04/20	21:09:00.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_AUTO	1	07-F0	c0		
			MDP_XRT_CTRL_MANU	1	07-F0	c1		
2019/04/20	21:09:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1		
2019/04/20	21:09:04.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da		
2019/04/20	21:09:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]	MDP_XRT_PREFLR_STRT	1	07-F0	e8		
2019/04/20	21:12:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9		
2019/04/20	21:38:30.0	XRT_Custom_430_OG [0x1ae]						
2019/04/20	21:39:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0		
2019/04/20	22:47:00.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1		
2019/04/20	22:47:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1		
2019/04/20	22:47:04.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da		
2019/04/20	22:47:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]	MDP_XRT_PREFLR_STRT	1	07-F0	e8		
2019/04/20	22:50:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9		
2019/04/20	23:14:00.0	XRT_Custom_430_OG [0x1ae]						
2019/04/20	23:15:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0		
2019/04/21	00:25:30.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1		
2019/04/21	00:25:32.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1		
2019/04/21	00:25:34.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da		
2019/04/21	00:25:36.0	XRT_PREFLR_STRT_428_OG [0x1ac]	MDP_XRT_PREFLR_STRT	1	07-F0	e8		
2019/04/21	00:28:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9		
2019/04/21	00:41:30.0	XRT_Custom_430_OG [0x1ae]						
2019/04/21	00:42:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0		
2019/04/21	01:55:00.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1		
2019/04/21	01:55:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1		
2019/04/21	01:55:04.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da		
2019/04/21	01:55:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]	MDP_XRT_PREFLR_STRT	1	07-F0	e8		
2019/04/21	01:58:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9		
2019/04/21	01:59:54.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1		
2019/04/21	01:59:56.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1		
2019/04/21	01:59:58.0	XRT_FOCUS_POSITION_406_OG [0x196]	XRT_FOCUS_POSITION	4	07-F8	22 ff aa 00		
2019/04/21	02:00:00.0	AOCS_Ore-point_Start_2_OG [0x098]	AOCU_NM	5	02-76	00 00 00 00 00		
2019/04/21	02:00:18.0	XRT_FLD_ENA_411_OG [0x19b]	MDP_XRT_FLD_ENA	1	07-F0	d8		
2019/04/21	02:00:20.0	XRT_FLRCTRL_ENA_412_OG [0x19c]	MDP_XRT_FLRCTRL_ENA	1	07-F0	c8		
2019/04/21	02:00:22.0	XRT_AEC_RESET_448_OG [0x1c0]	MDP_XRT_AEC_RESET	1	07-F0	d0		
2019/04/21	02:00:24.0	XRT_ARS_DIS_423_OG [0x1a7]	MDP_XRT_ARS_DIS	1	07-F0	d5		
2019/04/21	02:00:26.0	XRT_FLD_RESET_434_OG [0x1b2]	MDP_XRT_FLD_RESET	1	07-F0	da		
2019/04/21	02:02:56.0	XRT_QT_PROG_SET_442_OG [0x1ba]	MDP_XRT_QT_PROG_SET	2	07-F0	c4 05		
2019/04/21	02:02:58.0	XRT_FL_PROG_SET_440_OG [0x1b8]	MDP_XRT_FL_PROG_SET	2	07-F0	c5 0d		
2019/04/21	02:19:30.0	XRT_Custom_430_OG [0x1ae]						
2019/04/21	02:20:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0		
2019/04/21	03:28:30.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1		
2019/04/21	03:28:32.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1		
2019/04/21	03:28:34.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da		
2019/04/21	03:28:36.0	XRT_PREFLR_STRT_428_OG [0x1ac]	MDP_XRT_PREFLR_STRT	1	07-F0	e8		
2019/04/21	03:31:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9		
2019/04/21	03:58:00.0	XRT_Custom_430_OG [0x1ae]						
2019/04/21	03:59:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0		
2019/04/21	04:58:00.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1		
2019/04/21	04:58:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1		
2019/04/21	04:58:04.0	XRT_FLD_RESET_415_OG [0x19f]						

Apr 20, 19 13:08

XRT_OGLIST_0189.chk

Page 4/13

2019/04/21	04:58:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]	MDP_XRT_FLD_RESET	1	07-F0	da	
2019/04/21	05:01:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STRT	1	07-F0	e8	
2019/04/21	05:36:30.0	XRT_Custom_430_OG [0x1ae]	MDP_XRT_PREFLR_STOP	1	07-F0	e9	
2019/04/21	05:37:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0	
2019/04/21	05:57:00.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1	
2019/04/21	05:57:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1	
2019/04/21	05:57:04.0	XRT_FOCUS_POSITION_406_OG [0x196]	XRT_FOCUS_POSITION	4	07-F8	22 ff aa 00	
2019/04/21	05:57:24.0	XRT_FLD_DIS_409_OG [0x199]	MDP_XRT_FLD_DIS	1	07-F0	d9	
2019/04/21	05:57:26.0	XRT_FLRCTRL_DIS_413_OG [0x19d]	MDP_XRT_FLRCTRL_DIS	1	07-F0	c9	
2019/04/21	05:57:28.0	XRT_ARS_DIS_423_OG [0x1a7]	MDP_XRT_ARS_DIS	1	07-F0	d5	
2019/04/21	05:57:30.0	XRT_QT_PROG_SET_422_OG [0x1a6]	MDP_XRT_QT_PROG_SET	2	07-F0	c4 07	
2019/04/21	05:57:32.0	XRT_CTRL_AUTO_408_OG [0x198]	MDP_XRT_CTRL_AUTO	1	07-F0	c0	
2019/04/21	06:04:54.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1	
2019/04/21	06:04:56.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1	
2019/04/21	06:04:58.0	XRT_FOCUS_POSITION_410_OG [0x19a]	XRT_FOCUS_POSITION	4	07-F8	22 fe 97 00	
2019/04/21	06:05:00.0	AOCS_OrE-point_Start_1_OG [0x097]	AOCU_NM	5	02-76	04 00 00 00 00	
2019/04/21	06:05:18.0	XRT_FLD_ENA_411_OG [0x19b]	MDP_XRT_FLD_ENA	1	07-F0	d8	
2019/04/21	06:05:20.0	XRT_FLRCTRL_ENA_412_OG [0x19c]	MDP_XRT_FLRCTRL_ENA	1	07-F0	c8	
2019/04/21	06:05:22.0	XRT_AEC_RESET_448_OG [0x1c0]	MDP_XRT_AEC_RESET	1	07-F0	d0	
2019/04/21	06:05:24.0	XRT_ARS_DIS_423_OG [0x1a7]	MDP_XRT_ARS_DIS	1	07-F0	d5	
2019/04/21	06:05:26.0	XRT_FLD_RESET_434_OG [0x1b2]	MDP_XRT_FLD_RESET	1	07-F0	da	
2019/04/21	06:07:56.0	XRT_QT_PROG_SET_438_OG [0x1b6]	MDP_XRT_QT_PROG_SET	2	07-F0	c4 09	
2019/04/21	06:07:58.0	XRT_FL_PROG_SET_440_OG [0x1b8]	MDP_XRT_FL_PROG_SET	2	07-F0	c5 0d	
2019/04/21	06:08:00.0	XRT_CTRL_AUTO_408_OG [0x198]	MDP_XRT_CTRL_AUTO	1	07-F0	c0	
2019/04/21	06:38:00.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1	
2019/04/21	06:38:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1	
2019/04/21	06:38:04.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da	
2019/04/21	06:38:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]	MDP_XRT_PREFLR_STRT	1	07-F0	e8	
2019/04/21	06:41:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9	
2019/04/21	07:15:00.0	XRT_Custom_430_OG [0x1ae]	MDP_XRT_CTRL_AUTO	1	07-F0	c0	
2019/04/21	07:16:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_MANU	1	07-F0	c1	
2019/04/21	07:59:54.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1	
2019/04/21	07:59:56.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1	
2019/04/21	07:59:58.0	XRT_FOCUS_POSITION_406_OG [0x196]	XRT_FOCUS_POSITION	4	07-F8	22 ff aa 00	
2019/04/21	08:00:00.0	AOCS_OrE-point_Start_2_OG [0x098]	AOCU_NM	5	02-76	00 00 00 00 00	
2019/04/21	08:00:18.0	XRT_FLD_ENA_411_OG [0x19b]	MDP_XRT_FLD_ENA	1	07-F0	d8	
2019/04/21	08:00:20.0	XRT_FLRCTRL_ENA_412_OG [0x19c]	MDP_XRT_FLRCTRL_ENA	1	07-F0	c8	
2019/04/21	08:00:22.0	XRT_AEC_RESET_448_OG [0x1c0]	MDP_XRT_AEC_RESET	1	07-F0	d0	
2019/04/21	08:00:24.0	XRT_ARS_DIS_423_OG [0x1a7]	MDP_XRT_ARS_DIS	1	07-F0	d5	
2019/04/21	08:00:26.0	XRT_FLD_RESET_434_OG [0x1b2]	MDP_XRT_FLD_RESET	1	07-F0	da	
2019/04/21	08:02:56.0	XRT_QT_PROG_SET_405_OG [0x195]	MDP_XRT_QT_PROG_SET	2	07-F0	c4 01	
2019/04/21	08:02:58.0	XRT_FL_PROG_SET_440_OG [0x1b8]	MDP_XRT_FL_PROG_SET	2	07-F0	c5 0d	
2019/04/21	08:03:00.0	XRT_CTRL_AUTO_408_OG [0x198]	MDP_XRT_CTRL_AUTO	1	07-F0	c0	
2019/04/21	08:18:30.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1	
2019/04/21	08:18:32.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1	
2019/04/21	08:18:34.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da	
2019/04/21	08:18:36.0	XRT_PREFLR_STRT_428_OG [0x1ac]	MDP_XRT_PREFLR_STRT	1	07-F0	e8	

Apr 20, 19 13:08

XRT_OGLIST_0189.chk

Page 5/13

2019/04/21	08:21:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/21	08:53:00.0	XRT_Custom_430_OG [0x1ae]							
2019/04/21	08:54:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/21	09:58:00.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/21	09:58:02.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/21	09:58:04.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/21	09:58:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2019/04/21	10:01:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/21	10:31:30.0	XRT_Custom_430_OG [0x1ae]							
2019/04/21	10:32:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/21	11:53:30.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/21	11:53:32.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/21	11:53:34.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/21	11:53:36.0	XRT_PREFLR_STRT_428_OG [0x1ac]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2019/04/21	11:56:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/21	12:10:00.0	XRT_Custom_430_OG [0x1ae]							
2019/04/21	12:11:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/21	12:59:54.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/21	12:59:56.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/21	12:59:58.0	XRT_FOCUS_POSITION_406_OG [0x196]							
		XRT_FOCUS_POSITION	4	07-F8	22 ff aa 00				
2019/04/21	13:00:00.0	AOCS_Or-point_Start_3_OG [0x099]							
		AOCU_NM	5	02-76	01 00 00 00 00				
2019/04/21	13:00:18.0	XRT_FLD_ENA_411_OG [0x19b]							
		MDP_XRT_FLD_ENA	1	07-F0	d8				
2019/04/21	13:00:20.0	XRT_FLRCTRL_ENA_412_OG [0x19c]							
		MDP_XRT_FLRCTRL_ENA	1	07-F0	c8				
2019/04/21	13:00:22.0	XRT_AEC_RESET_448_OG [0x1c0]							
		MDP_XRT_AEC_RESET	1	07-F0	d0				
2019/04/21	13:00:24.0	XRT_ARS_DIS_423_OG [0x1a7]							
		MDP_XRT_ARS_DIS	1	07-F0	d5				
2019/04/21	13:00:26.0	XRT_FLD_RESET_434_OG [0x1b2]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/21	13:02:56.0	XRT_QT_PROG_SET_407_OG [0x197]							
		MDP_XRT_QT_PROG_SET	2	07-F0	c4 0a				
2019/04/21	13:02:58.0	XRT_FL_PROG_SET_440_OG [0x1b8]							
		MDP_XRT_FL_PROG_SET	2	07-F0	c5 0d				
2019/04/21	13:03:00.0	XRT_CTRL_AUTO_408_OG [0x198]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/21	13:32:00.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/21	13:32:02.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/21	13:32:04.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/21	13:32:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2019/04/21	13:35:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/21	13:48:30.0	XRT_Custom_430_OG [0x1ae]							
2019/04/21	13:49:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/21	15:10:30.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/21	15:10:32.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/21	15:10:34.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/21	15:10:36.0	XRT_PREFLR_STRT_428_OG [0x1ac]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2019/04/21	15:13:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/21	15:36:00.5	XRT_Custom_430_OG [0x1ae]							
2019/04/21	15:37:00.5	XRT_CTRL_AUTO_424_OG [0x1a8]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/21	16:48:30.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/21	16:48:32.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/21	16:48:34.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/21	16:48:36.0	XRT_PREFLR_STRT_428_OG [0x1ac]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2019/04/21	16:51:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/21	17:22:30.0	XRT_Custom_430_OG [0x1ae]							
2019/04/21	17:23:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]							

Apr 20, 19 13:08

XRT_OGLIST_0189.chk

Page 6/13

2019/04/21	17:59:54.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
			MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/21	17:59:56.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/21	17:59:58.0	XRT_FOCUS_POSITION_406_OG [0x196]	XRT_FOCUS_POSITION	4	07-F8	22 ff aa 00
2019/04/21	18:00:00.0	AOCS_OrE-point_Start_2_OG [0x098]	AOCU_NM	5	02-76	00 00 00 00 00
2019/04/21	18:00:18.0	XRT_FLD_DIS_409_OG [0x199]	MDP_XRT_FLD_DIS	1	07-F0	d9
2019/04/21	18:00:20.0	XRT_FLRCTRL_DIS_413_OG [0x19d]	MDP_XRT_FLRCTRL_DIS	1	07-F0	c9
2019/04/21	18:00:22.0	XRT_ARS_DIS_443_OG [0x1bb]	MDP_XRT_ARS_DIS	1	07-F0	d5
2019/04/21	18:02:58.0	XRT_QT_PROG_SET_422_OG [0x1a6]	MDP_XRT_QT_PROG_SET	2	07-F0	c4 07
2019/04/21	18:03:00.0	XRT_CTRL_AUTO_408_OG [0x198]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2019/04/21	18:09:54.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/21	18:09:56.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/21	18:09:58.0	XRT_FOCUS_POSITION_410_OG [0x19a]	XRT_FOCUS_POSITION	4	07-F8	22 fe 97 00
2019/04/21	18:10:00.0	AOCS_OrE-point_Start_4_OG [0x09a]	AOCU_NM	5	02-76	00 f7 cf af 1b
2019/04/21	18:10:18.0	XRT_FLD_ENA_411_OG [0x19b]	MDP_XRT_FLD_ENA	1	07-F0	d8
2019/04/21	18:10:20.0	XRT_FLRCTRL_ENA_412_OG [0x19c]	MDP_XRT_FLRCTRL_ENA	1	07-F0	c8
2019/04/21	18:10:22.0	XRT_AEC_RESET_448_OG [0x1c0]	MDP_XRT_AEC_RESET	1	07-F0	d0
2019/04/21	18:10:24.0	XRT_ARS_DIS_423_OG [0x1a7]	MDP_XRT_ARS_DIS	1	07-F0	d5
2019/04/21	18:10:26.0	XRT_FLD_RESET_434_OG [0x1b2]	MDP_XRT_FLD_RESET	1	07-F0	da
2019/04/21	18:12:56.0	XRT_QT_PROG_SET_438_OG [0x1b6]	MDP_XRT_QT_PROG_SET	2	07-F0	c4 09
2019/04/21	18:12:58.0	XRT_FL_PROG_SET_440_OG [0x1b8]	MDP_XRT_FL_PROG_SET	2	07-F0	c5 0d
2019/04/21	18:13:00.0	XRT_CTRL_AUTO_408_OG [0x198]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2019/04/21	18:27:00.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/21	18:27:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/21	18:27:04.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da
2019/04/21	18:27:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2019/04/21	18:30:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2019/04/21	18:59:30.0	XRT_Custom_430_OG [0x1ae]				
2019/04/21	19:00:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2019/04/21	20:05:30.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/21	20:05:32.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/21	20:05:34.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da
2019/04/21	20:05:36.0	XRT_PREFLR_STRT_428_OG [0x1ac]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2019/04/21	20:08:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2019/04/21	20:36:00.0	XRT_Custom_430_OG [0x1ae]				
2019/04/21	20:37:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2019/04/21	21:43:30.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/21	21:43:32.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/21	21:43:34.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da
2019/04/21	21:43:36.0	XRT_PREFLR_STRT_428_OG [0x1ac]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2019/04/21	21:46:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2019/04/21	22:09:54.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/21	22:09:56.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/21	22:09:58.0	XRT_FOCUS_POSITION_410_OG [0x19a]	XRT_FOCUS_POSITION	4	07-F8	22 fe 97 00
2019/04/21	22:10:00.0	AOCS_OrE-point_Start_5_OG [0x09b]	AOCU_NM	5	02-76	00 f9 38 af 4c
2019/04/21	22:10:18.0	XRT_FLD_ENA_411_OG [0x19b]	MDP_XRT_FLD_ENA	1	07-F0	d8
2019/04/21	22:10:20.0	XRT_FLRCTRL_ENA_412_OG [0x19c]	MDP_XRT_FLRCTRL_ENA	1	07-F0	c8
2019/04/21	22:10:22.0	XRT_AEC_RESET_448_OG [0x1c0]	MDP_XRT_AEC_RESET	1	07-F0	d0

Apr 20, 19 13:08

XRT_OGLIST_0189.chk

Page 7/13

2019/04/21	22:10:24.0	XRT_ARS_DIS_423_OG [0x1a7]							
		MDP_XRT_ARS_DIS	1	07-F0	d5				
2019/04/21	22:10:26.0	XRT_FLD_RESET_434_OG [0x1b2]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/21	22:12:56.0	XRT_QT_PROG_SET_438_OG [0x1b6]							
		MDP_XRT_QT_PROG_SET	2	07-F0	c4	09			
2019/04/21	22:12:58.0	XRT_FL_PROG_SET_440_OG [0x1b8]							
		MDP_XRT_FL_PROG_SET	2	07-F0	c5	0d			
2019/04/21	22:13:00.0	XRT_Custom_430_OG [0x1ae]							
2019/04/21	22:14:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/21	23:22:00.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/21	23:22:02.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/21	23:22:04.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/21	23:22:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2019/04/21	23:25:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/21	23:47:30.0	XRT_Custom_430_OG [0x1ae]							
2019/04/21	23:48:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/22	01:00:30.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/22	01:00:32.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/22	01:00:34.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/22	01:00:36.0	XRT_PREFLR_STRT_428_OG [0x1ac]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2019/04/22	01:03:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/22	01:17:00.0	XRT_Custom_430_OG [0x1ae]							
2019/04/22	01:18:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/22	01:59:54.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/22	01:59:56.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/22	01:59:58.0	XRT_FOCUS_POSITION_406_OG [0x196]							
		XRT_FOCUS_POSITION	4	07-F8	22	ff	aa	00	
2019/04/22	02:00:00.0	AOCs_OrE-point_Start_2_OG [0x098]							
		AOCU_NM	5	02-76	00	00	00	00	00
2019/04/22	02:00:18.0	XRT_FLD_ENA_411_OG [0x19b]							
		MDP_XRT_FLD_ENA	1	07-F0	d8				
2019/04/22	02:00:20.0	XRT_FLRCTRL_ENA_412_OG [0x19c]							
		MDP_XRT_FLRCTRL_ENA	1	07-F0	c8				
2019/04/22	02:00:22.0	XRT_AEC_RESET_448_OG [0x1c0]							
		MDP_XRT_AEC_RESET	1	07-F0	d0				
2019/04/22	02:00:24.0	XRT_ARS_DIS_423_OG [0x1a7]							
		MDP_XRT_ARS_DIS	1	07-F0	d5				
2019/04/22	02:00:26.0	XRT_FLD_RESET_434_OG [0x1b2]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/22	02:02:56.0	XRT_QT_PROG_SET_442_OG [0x1ba]							
		MDP_XRT_QT_PROG_SET	2	07-F0	c4	05			
2019/04/22	02:02:58.0	XRT_FL_PROG_SET_440_OG [0x1b8]							
		MDP_XRT_FL_PROG_SET	2	07-F0	c5	0d			
2019/04/22	02:03:00.0	XRT_CTRL_AUTO_408_OG [0x198]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/22	02:27:30.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/22	02:27:32.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/22	02:27:34.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/22	02:27:36.0	XRT_PREFLR_STRT_428_OG [0x1ac]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2019/04/22	02:30:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/22	02:55:30.0	XRT_Custom_430_OG [0x1ae]							
2019/04/22	02:56:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/22	04:02:00.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/22	04:02:02.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/22	04:02:04.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/22	04:02:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2019/04/22	04:05:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/22	04:34:00.0	XRT_Custom_430_OG [0x1ae]							
2019/04/22	04:35:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/22	05:34:00.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/22	05:34:02.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/22	05:34:04.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				

Apr 20, 19 13:08

XRT_OGLIST_0189.chk

Page 8/13

2019/04/22	05:34:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2019/04/22	05:37:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/22	06:14:00.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/22	06:14:02.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/22	06:14:04.0	XRT_FOCUS_POSITION_406_OG [0x196]							
		XRT_FOCUS_POSITION	4	07-F8	22 ff aa 00				
2019/04/22	06:14:24.0	XRT_FLD_DIS_409_OG [0x199]							
		MDP_XRT_FLD_DIS	1	07-F0	d9				
2019/04/22	06:14:26.0	XRT_FLRCTRL_DIS_413_OG [0x19d]							
		MDP_XRT_FLRCTRL_DIS	1	07-F0	c9				
2019/04/22	06:14:28.0	XRT_ARS_DIS_423_OG [0x1a7]							
		MDP_XRT_ARS_DIS	1	07-F0	d5				
2019/04/22	06:14:30.0	XRT_QT_PROG_SET_422_OG [0x1a6]							
		MDP_XRT_QT_PROG_SET	2	07-F0	c4 07				
2019/04/22	06:14:32.0	XRT_CTRL_AUTO_408_OG [0x198]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/22	06:21:54.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/22	06:21:56.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/22	06:21:58.0	XRT_FOCUS_POSITION_410_OG [0x19a]							
		XRT_FOCUS_POSITION	4	07-F8	22 fe 97 00				
2019/04/22	06:22:00.0	AOCs_OrE-point_Start_5_OG [0x09b]							
		AOCU_NM	5	02-76	00 f9 38 af 4c				
2019/04/22	06:22:18.0	XRT_FLD_ENA_411_OG [0x19b]							
		MDP_XRT_FLD_ENA	1	07-F0	d8				
2019/04/22	06:22:20.0	XRT_FLRCTRL_ENA_412_OG [0x19c]							
		MDP_XRT_FLRCTRL_ENA	1	07-F0	c8				
2019/04/22	06:22:22.0	XRT_AEC_RESET_448_OG [0x1c0]							
		MDP_XRT_AEC_RESET	1	07-F0	d0				
2019/04/22	06:22:24.0	XRT_ARS_DIS_423_OG [0x1a7]							
		MDP_XRT_ARS_DIS	1	07-F0	d5				
2019/04/22	06:22:26.0	XRT_FLD_RESET_434_OG [0x1b2]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/22	06:24:56.0	XRT_QT_PROG_SET_438_OG [0x1b6]							
		MDP_XRT_QT_PROG_SET	2	07-F0	c4 09				
2019/04/22	06:24:58.0	XRT_FL_PROG_SET_440_OG [0x1b8]							
		MDP_XRT_FL_PROG_SET	2	07-F0	c5 0d				
2019/04/22	06:25:00.0	XRT_CTRL_AUTO_408_OG [0x198]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/22	07:14:00.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/22	07:14:02.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/22	07:14:04.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/22	07:14:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2019/04/22	07:17:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/22	07:50:30.0	XRT_Custom_430_OG [0x1ae]							
2019/04/22	07:51:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/22	07:59:54.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/22	07:59:56.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/22	07:59:58.0	XRT_FOCUS_POSITION_406_OG [0x196]							
		XRT_FOCUS_POSITION	4	07-F8	22 ff aa 00				
2019/04/22	08:00:00.0	AOCs_OrE-point_Start_2_OG [0x098]							
		AOCU_NM	5	02-76	00 00 00 00 00				
2019/04/22	08:00:18.0	XRT_FLD_ENA_411_OG [0x19b]							
		MDP_XRT_FLD_ENA	1	07-F0	d8				
2019/04/22	08:00:20.0	XRT_FLRCTRL_ENA_412_OG [0x19c]							
		MDP_XRT_FLRCTRL_ENA	1	07-F0	c8				
2019/04/22	08:00:22.0	XRT_AEC_RESET_448_OG [0x1c0]							
		MDP_XRT_AEC_RESET	1	07-F0	d0				
2019/04/22	08:00:24.0	XRT_ARS_DIS_423_OG [0x1a7]							
		MDP_XRT_ARS_DIS	1	07-F0	d5				
2019/04/22	08:00:26.0	XRT_FLD_RESET_434_OG [0x1b2]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/22	08:02:56.0	XRT_QT_PROG_SET_405_OG [0x195]							
		MDP_XRT_QT_PROG_SET	2	07-F0	c4 01				
2019/04/22	08:02:58.0	XRT_FL_PROG_SET_440_OG [0x1b8]							
		MDP_XRT_FL_PROG_SET	2	07-F0	c5 0d				
2019/04/22	08:03:00.0	XRT_CTRL_AUTO_408_OG [0x198]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/22	08:54:00.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/22	08:54:02.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/22	08:54:04.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/22	08:54:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2019/04/22	08:57:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/22	09:29:00.5	XRT_Custom_430_OG [0x1ae]							
2019/04/22	09:30:00.5	XRT_CTRL_AUTO_424_OG [0x1a8]							

2019/04/22	10:34:30.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_AUTO	1	07-F0	c0			
			MDP_XRT_CTRL_MANU	1	07-F0	c1			
2019/04/22	10:34:32.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1			
2019/04/22	10:34:34.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da			
2019/04/22	10:34:36.0	XRT_PREFLR_STRT_428_OG [0x1ac]	MDP_XRT_PREFLR_STRT	1	07-F0	e8			
2019/04/22	10:37:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9			
2019/04/22	11:07:30.0	XRT_Custom_430_OG [0x1ae]							
2019/04/22	11:08:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0			
2019/04/22	11:59:54.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1			
2019/04/22	11:59:56.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1			
2019/04/22	11:59:58.0	XRT_FOCUS_POSITION_410_OG [0x19a]	XRT_FOCUS_POSITION	4	07-F8	22 fe 97 00			
2019/04/22	12:00:00.0	AOCS_Ore-point_Start_6_OG [0x09c]	AOCU_NM	5	02-76	00 c5 cb 01 ca			
2019/04/22	12:00:18.0	XRT_FLD_ENA_425_OG [0x1a9]	MDP_XRT_FLD_ENA	1	07-F0	d8			
2019/04/22	12:02:48.0	XRT_FLRCTRL_ENA_412_OG [0x19c]	MDP_XRT_FLRCTRL_ENA	1	07-F0	c8			
2019/04/22	12:02:50.0	XRT_AEC_RESET_448_OG [0x1c0]	MDP_XRT_AEC_RESET	1	07-F0	d0			
2019/04/22	12:02:52.0	XRT_ARS_DIS_423_OG [0x1a7]	MDP_XRT_ARS_DIS	1	07-F0	d5			
2019/04/22	12:02:54.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da			
2019/04/22	12:02:56.0	XRT_QT_PROG_SET_435_OG [0x1b3]	MDP_XRT_QT_PROG_SET	2	07-F0	c4 10			
2019/04/22	12:02:58.0	XRT_FL_PROG_SET_440_OG [0x1b8]	MDP_XRT_FL_PROG_SET	2	07-F0	c5 0d			
2019/04/22	12:03:00.0	XRT_CTRL_AUTO_408_OG [0x198]	MDP_XRT_CTRL_AUTO	1	07-F0	c0			
2019/04/22	12:28:30.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1			
2019/04/22	12:28:32.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1			
2019/04/22	12:28:34.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da			
2019/04/22	12:28:36.0	XRT_PREFLR_STRT_428_OG [0x1ac]	MDP_XRT_PREFLR_STRT	1	07-F0	e8			
2019/04/22	12:31:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9			
2019/04/22	12:45:30.0	XRT_Custom_430_OG [0x1ae]							
2019/04/22	12:46:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0			
2019/04/22	14:07:00.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1			
2019/04/22	14:07:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1			
2019/04/22	14:07:04.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da			
2019/04/22	14:07:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]	MDP_XRT_PREFLR_STRT	1	07-F0	e8			
2019/04/22	14:10:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9			
2019/04/22	14:24:00.0	XRT_Custom_430_OG [0x1ae]							
2019/04/22	14:25:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0			
2019/04/22	15:29:54.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1			
2019/04/22	15:29:56.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1			
2019/04/22	15:29:58.0	XRT_FOCUS_POSITION_410_OG [0x19a]	XRT_FOCUS_POSITION	4	07-F8	22 fe 97 00			
2019/04/22	15:30:00.0	AOCS_ORe-point_Start_7_OG [0x09d]	AOCU_NM	5	02-76	00 38 e5 01 ca			
2019/04/22	15:30:18.0	XRT_FLD_ENA_425_OG [0x1a9]	MDP_XRT_FLD_ENA	1	07-F0	d8			
2019/04/22	15:32:48.0	XRT_FLRCTRL_ENA_412_OG [0x19c]	MDP_XRT_FLRCTRL_ENA	1	07-F0	c8			
2019/04/22	15:32:50.0	XRT_AEC_RESET_448_OG [0x1c0]	MDP_XRT_AEC_RESET	1	07-F0	d0			
2019/04/22	15:32:52.0	XRT_ARS_DIS_423_OG [0x1a7]	MDP_XRT_ARS_DIS	1	07-F0	d5			
2019/04/22	15:32:54.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da			
2019/04/22	15:32:56.0	XRT_QT_PROG_SET_435_OG [0x1b3]	MDP_XRT_QT_PROG_SET	2	07-F0	c4 10			
2019/04/22	15:32:58.0	XRT_FL_PROG_SET_440_OG [0x1b8]	MDP_XRT_FL_PROG_SET	2	07-F0	c5 0d			
2019/04/22	15:33:00.0	XRT_CTRL_AUTO_408_OG [0x198]	MDP_XRT_CTRL_AUTO	1	07-F0	c0			
2019/04/22	15:45:00.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1			
2019/04/22	15:45:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1			
2019/04/22	15:45:04.0	XRT_FLD_RESET_415_OG [0x19f]							

Apr 20, 19 13:08

XRT_OGLIST_0189.chk

Page 10/13

2019/04/22	15:45:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]	MDP_XRT_FLD_RESET	1	07-F0	da
2019/04/22	15:48:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2019/04/22	16:20:30.0	XRT_Custom_430_OG [0x1ae]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2019/04/22	16:21:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2019/04/22	17:23:30.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/22	17:23:32.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/22	17:23:34.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da
2019/04/22	17:23:36.0	XRT_PREFLR_STRT_428_OG [0x1ac]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2019/04/22	17:26:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2019/04/22	17:57:30.0	XRT_Custom_430_OG [0x1ae]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2019/04/22	17:58:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/22	19:02:00.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/22	19:02:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/22	19:02:04.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da
2019/04/22	19:02:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2019/04/22	19:05:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2019/04/22	19:34:54.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/22	19:34:56.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/22	19:34:58.0	XRT_FOCUS_POSITION_406_OG [0x196]	XRT_FOCUS_POSITION	4	07-F8	22 ff aa 00
2019/04/22	19:35:00.0	AOCS_OrE-point_Start_2_OG [0x098]	AOCU_NM	5	02-76	00 00 00 00 00
2019/04/22	19:35:18.0	XRT_FLD_DIS_409_OG [0x199]	MDP_XRT_FLD_DIS	1	07-F0	d9
2019/04/22	19:35:20.0	XRT_FLRCTRL_DIS_413_OG [0x19d]	MDP_XRT_FLRCTRL_DIS	1	07-F0	c9
2019/04/22	19:35:22.0	XRT_ARS_DIS_443_OG [0x1bb]	MDP_XRT_ARS_DIS	1	07-F0	d5
2019/04/22	19:37:58.0	XRT_QT_PROG_SET_403_OG [0x193]	MDP_XRT_QT_PROG_SET	2	07-F0	c4 08
2019/04/22	19:38:00.0	XRT_CTRL_AUTO_408_OG [0x198]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2019/04/22	19:44:54.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/22	19:44:56.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/22	19:44:58.0	XRT_FOCUS_POSITION_406_OG [0x196]	XRT_FOCUS_POSITION	4	07-F8	22 ff aa 00
2019/04/22	19:45:00.0	AOCS_OrE-point_Start_3_OG [0x099]	AOCU_NM	5	02-76	01 00 00 00 00
2019/04/22	19:45:18.0	XRT_FLD_ENA_411_OG [0x19b]	MDP_XRT_FLD_ENA	1	07-F0	d8
2019/04/22	19:45:20.5	XRT_FLRCTRL_ENA_412_OG [0x19c]	MDP_XRT_FLRCTRL_ENA	1	07-F0	c8
2019/04/22	19:45:22.5	XRT_AEC_RESET_448_OG [0x1c0]	MDP_XRT_AEC_RESET	1	07-F0	d0
2019/04/22	19:45:24.5	XRT_ARS_DIS_423_OG [0x1a7]	MDP_XRT_ARS_DIS	1	07-F0	d5
2019/04/22	19:45:26.5	XRT_FLD_RESET_434_OG [0x1b2]	MDP_XRT_FLD_RESET	1	07-F0	da
2019/04/22	19:47:56.5	XRT_QT_PROG_SET_431_OG [0x1af]	MDP_XRT_QT_PROG_SET	2	07-F0	c4 06
2019/04/22	19:47:58.5	XRT_FL_PROG_SET_440_OG [0x1b8]	MDP_XRT_FL_PROG_SET	2	07-F0	c5 0d
2019/04/22	19:48:00.5	XRT_CTRL_AUTO_408_OG [0x198]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2019/04/22	20:40:00.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/22	20:40:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/22	20:40:04.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da
2019/04/22	20:40:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2019/04/22	20:43:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2019/04/22	21:11:00.0	XRT_Custom_430_OG [0x1ae]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2019/04/22	21:12:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/22	22:18:30.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/22	22:18:32.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2019/04/22	22:18:34.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da
2019/04/22	22:18:36.0	XRT_PREFLR_STRT_428_OG [0x1ac]				

Apr 20, 19 13:08

XRT_OGLIST_0189.chk

Page 11/13

2019/04/22	22:21:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STRT	1	07-F0	e8				
			MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/22	22:47:30.0	XRT_Custom_430_OG [0x1ae]								
2019/04/22	22:48:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]								
			MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/22	23:57:00.0	XRT_CTRL_MANU_400_OG [0x190]								
			MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/22	23:57:02.0	XRT_CTRL_MANU_402_OG [0x192]								
			MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/22	23:57:04.0	XRT_FLD_RESET_415_OG [0x19f]								
			MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/22	23:57:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]								
			MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2019/04/23	00:00:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]								
			MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/23	00:15:30.0	XRT_Custom_430_OG [0x1ae]								
2019/04/23	00:16:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]								
			MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/23	01:31:00.0	XRT_CTRL_MANU_400_OG [0x190]								
			MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/23	01:31:02.0	XRT_CTRL_MANU_402_OG [0x192]								
			MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/23	01:31:04.0	XRT_FLD_RESET_415_OG [0x19f]								
			MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/23	01:31:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]								
			MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2019/04/23	01:34:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]								
			MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/23	01:59:54.0	XRT_CTRL_MANU_402_OG [0x192]								
			MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/23	01:59:56.0	XRT_CTRL_MANU_402_OG [0x192]								
			MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/23	01:59:58.0	XRT_FOCUS_POSITION_406_OG [0x196]								
			XRT_FOCUS_POSITION	4	07-F8	22 ff aa 00				
2019/04/23	02:00:00.0	AOCS_Ore-point_Start_2_OG [0x098]								
			AOCU_NM	5	02-76	00 00 00 00 00				
2019/04/23	02:00:18.0	XRT_FLD_ENA_411_OG [0x19b]								
			MDP_XRT_FLD_ENA	1	07-F0	d8				
2019/04/23	02:00:20.0	XRT_FLRCTRL_ENA_412_OG [0x19c]								
			MDP_XRT_FLRCTRL_ENA	1	07-F0	c8				
2019/04/23	02:00:22.0	XRT_AEC_RESET_448_OG [0x1c0]								
			MDP_XRT_AEC_RESET	1	07-F0	d0				
2019/04/23	02:00:24.0	XRT_ARS_DIS_423_OG [0x1a7]								
			MDP_XRT_ARS_DIS	1	07-F0	d5				
2019/04/23	02:00:26.0	XRT_FLD_RESET_434_OG [0x1b2]								
			MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/23	02:02:56.0	XRT_QT_PROG_SET_442_OG [0x1ba]								
			MDP_XRT_QT_PROG_SET	2	07-F0	c4 05				
2019/04/23	02:02:58.0	XRT_FL_PROG_SET_440_OG [0x1b8]								
			MDP_XRT_FL_PROG_SET	2	07-F0	c5 0d				
2019/04/23	02:03:00.0	XRT_CTRL_AUTO_408_OG [0x198]								
			MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/23	03:01:30.0	XRT_CTRL_MANU_400_OG [0x190]								
			MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/23	03:01:32.0	XRT_CTRL_MANU_402_OG [0x192]								
			MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/23	03:01:34.0	XRT_FLD_RESET_415_OG [0x19f]								
			MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/23	03:01:36.0	XRT_PREFLR_STRT_428_OG [0x1ac]								
			MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2019/04/23	03:04:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]								
			MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/23	03:31:00.0	XRT_Custom_430_OG [0x1ae]								
2019/04/23	03:32:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]								
			MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/23	04:29:30.0	XRT_CTRL_MANU_400_OG [0x190]								
			MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/23	04:29:32.0	XRT_CTRL_MANU_402_OG [0x192]								
			MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/23	04:29:34.0	XRT_FLD_RESET_415_OG [0x19f]								
			MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/23	04:29:36.0	XRT_PREFLR_STRT_428_OG [0x1ac]								
			MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2019/04/23	04:32:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]								
			MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/23	05:09:30.0	XRT_Custom_430_OG [0x1ae]								
2019/04/23	05:10:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]								
			MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/23	05:45:00.0	XRT_CTRL_MANU_402_OG [0x192]								
			MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/23	05:45:02.0	XRT_CTRL_MANU_402_OG [0x192]								
			MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/23	05:45:04.0	XRT_FOCUS_POSITION_406_OG [0x196]								
			XRT_FOCUS_POSITION	4	07-F8	22 ff aa 00				
2019/04/23	05:45:24.0	XRT_FLD_DIS_409_OG [0x199]								
			MDP_XRT_FLD_DIS	1	07-F0	d9				
2019/04/23	05:45:26.0	XRT_FLRCTRL_DIS_413_OG [0x19d]								
			MDP_XRT_FLRCTRL_DIS	1	07-F0	c9				
2019/04/23	05:45:28.0	XRT_ARS_DIS_423_OG [0x1a7]								
			MDP_XRT_ARS_DIS	1	07-F0	d5				
2019/04/23	05:45:30.0	XRT_QT_PROG_SET_422_OG [0x1a6]								
			MDP_XRT_QT_PROG_SET	2	07-F0	c4 07				

Apr 20, 19 13:08

XRT_OGLIST_0189.chk

Page 12/13

2019/04/23	05:45:32.0	XRT_CTRL_AUTO_408_OG [0x198]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/23	05:52:54.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/23	05:52:56.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/23	05:52:58.0	XRT_FOCUS_POSITION_406_OG [0x196]							
		XRT_FOCUS_POSITION	4	07-F8	22 ff aa 00				
2019/04/23	05:53:00.0	AOCS_Ore-point_Start_3_OG [0x099]							
		AOCU_NM	5	02-76	01 00 00 00 00				
2019/04/23	05:53:18.0	XRT_FLD_ENA_411_OG [0x19b]							
		MDP_XRT_FLD_ENA	1	07-F0	d8				
2019/04/23	05:53:20.0	XRT_FLRCTRL_ENA_412_OG [0x19c]							
		MDP_XRT_FLRCTRL_ENA	1	07-F0	c8				
2019/04/23	05:53:22.0	XRT_AEC_RESET_448_OG [0x1c0]							
		MDP_XRT_AEC_RESET	1	07-F0	d0				
2019/04/23	05:53:24.0	XRT_ARS_DIS_423_OG [0x1a7]							
		MDP_XRT_ARS_DIS	1	07-F0	d5				
2019/04/23	05:53:26.0	XRT_FLD_RESET_434_OG [0x1b2]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/23	05:55:56.0	XRT_QT_PROG_SET_407_OG [0x197]							
		MDP_XRT_QT_PROG_SET	2	07-F0	c4 0a				
2019/04/23	05:55:58.0	XRT_FL_PROG_SET_440_OG [0x1b8]							
		MDP_XRT_FL_PROG_SET	2	07-F0	c5 0d				
2019/04/23	05:56:00.0	XRT_CTRL_AUTO_408_OG [0x198]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/23	06:10:00.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/23	06:10:02.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/23	06:10:04.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/23	06:10:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2019/04/23	06:13:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/23	06:48:00.0	XRT_Custom_430_OG [0x1ae]							
2019/04/23	06:49:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/23	07:50:00.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/23	07:50:02.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/23	07:50:04.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/23	07:50:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2019/04/23	07:53:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/23	07:59:54.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/23	07:59:56.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/23	07:59:58.0	XRT_FOCUS_POSITION_406_OG [0x196]							
		XRT_FOCUS_POSITION	4	07-F8	22 ff aa 00				
2019/04/23	08:00:00.0	AOCS_ORe-point_Start_2_OG [0x098]							
		AOCU_NM	5	02-76	00 00 00 00 00				
2019/04/23	08:00:18.0	XRT_FLD_ENA_411_OG [0x19b]							
		MDP_XRT_FLD_ENA	1	07-F0	d8				
2019/04/23	08:00:20.0	XRT_FLRCTRL_ENA_412_OG [0x19c]							
		MDP_XRT_FLRCTRL_ENA	1	07-F0	c8				
2019/04/23	08:00:22.0	XRT_AEC_RESET_448_OG [0x1c0]							
		MDP_XRT_AEC_RESET	1	07-F0	d0				
2019/04/23	08:00:24.0	XRT_ARS_DIS_423_OG [0x1a7]							
		MDP_XRT_ARS_DIS	1	07-F0	d5				
2019/04/23	08:00:26.0	XRT_FLD_RESET_434_OG [0x1b2]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/23	08:02:56.0	XRT_QT_PROG_SET_404_OG [0x194]							
		MDP_XRT_QT_PROG_SET	2	07-F0	c4 0b				
2019/04/23	08:02:58.0	XRT_FL_PROG_SET_440_OG [0x1b8]							
		MDP_XRT_FL_PROG_SET	2	07-F0	c5 0d				
2019/04/23	08:26:30.0	XRT_Custom_430_OG [0x1ae]							
2019/04/23	08:27:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/23	09:29:30.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/23	09:29:32.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/23	09:29:34.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/23	09:29:36.0	XRT_PREFLR_STRT_428_OG [0x1ac]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2019/04/23	09:32:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/23	10:04:30.0	XRT_Custom_430_OG [0x1ae]							
2019/04/23	10:05:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/23	11:12:00.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/23	11:12:02.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/23	11:12:04.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				

Apr 20, 19 13:08

XRT_OGLIST_0189.chk

Page 13/13

2019/04/23	11:12:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2019/04/23	11:15:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/23	11:17:00.0	XRT_Custom_430_OG [0x1ae]							
2019/04/23	11:18:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2019/04/23	11:25:00.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/23	11:25:02.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2019/04/23	11:25:04.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2019/04/23	11:25:06.0	XRT_PREFLR_STRT_428_OG [0x1ac]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2019/04/23	11:28:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2019/04/23	11:43:00.0	AOCS_ORe-point_Start_2_OG [0x098]							
		AOCU_NM	5	02-76	00 00 00 00 00				