

XRT Timeline to be uploaded on 2023/02/11

Period: 2023/02/11 11:36:00 - 2023/02/16 10:25:00

* * * * *

Normal mode

* * * * *

XOB #1BBA: AR - Standard Core - (Filter-Ratio with Al/poly and thin-Be long/short pairs) with PFB, 384x384 at 1064 1048, thin-Be, and Al/poly context, with

Term	Pointing (x, y)	Comment
02/11 11:49:00 - 02/11 17:47:54	Track (-649.4, -154.7) ^{Ⓞ 02/11 11:46:00}	# OP start + 10min. AR 13217 MFW observations.
02/11 18:01:00 - 02/12 03:39:00	Track (-605.5, -150.3) ^{Ⓞ 02/11 17:58:00}	# AR cont.
02/12 06:13:00 - 02/12 18:03:54	Track (-513.1, -142.6) ^{Ⓞ 02/12 06:10:00}	# AR cont.
02/12 18:17:00 - 02/13 04:14:00	Track (-414.9, -136.3) ^{Ⓞ 02/12 18:14:00}	# AR cont.

PROG= 16 Inf-time(s)

Subr= 1 1-time(s) 2.0sec	Seqn= 92 1-time(s) 2.0sec	Open/G-band	Open/G-band	open	Safe	Norm	1ms	Obs	1x1	384x384 (1064, 1048)	DPCM	0	0	2.0sec
		Open/G-band	Open/G-band	close	Safe	Norm	1ms	Obs	1x1	384x384 (1064, 1048)	DPCM	0	0	2.0sec
		Open/Ti-poly	Open/thick-Al	close	Safe	Dark	16.0s	Obs	1x1	384x384 (1064, 1048)	Q=98	0	0	2.0sec

Subr= 2 5-time(s) 2.0sec

Seqn= 47 1-time(s) 2.0sec	Al-poly/Open	thin-Be/Open	close	Safe	Norm	250ms	Obs	1x1	384x384 (1064, 1048)	Q=95	2	0	2.0sec
	Al-poly/Open	thin-Be/Open	close	Safe	Norm	250ms	Obs	1x1	384x384 (1064, 1048)	Q=95	3	0	2.0sec
	thin-Be/Open	med-Be/Open	close	Safe	Norm	500ms	Obs	1x1	384x384 (1064, 1048)	Q=95	2	0	2.0sec
	thin-Be/Open	med-Be/Open	close	Safe	Norm	500ms	Obs	1x1	384x384 (1064, 1048)	Q=95	3	0	2.0sec

Seqn= 96 4-time(s) 120.0sec

Al-poly/Open	thin-Be/Open	close	Safe	Norm	250ms	Obs	1x1	384x384 (1064, 1048)	Q=95	1	0	2.0sec
thin-Be/Open	med-Be/Open	close	Safe	Norm	500ms	Obs	1x1	384x384 (1064, 1048)	Q=95	1	0	2.0sec
Al-poly/Open	thin-Be/Open	close	Safe	Norm	250ms	Obs	1x1	384x384 (1064, 1048)	Q=95	1	1	2.0sec
thin-Be/Open	med-Be/Open	close	Safe	Norm	500ms	Obs	1x1	384x384 (1064, 1048)	Q=95	1	1	2.0sec
Al-poly/Open	thin-Be/Open	close	Safe	Norm	250ms	Obs	1x1	384x384 (1064, 1048)	Q=95	1	2	2.0sec
thin-Be/Open	med-Be/Open	close	Safe	Norm	500ms	Obs	1x1	384x384 (1064, 1048)	Q=95	1	2	2.0sec

Default Filter	Thicker Filter	VLS	mode	image	Exp.	CCD	Bin	ROI: size (center)	Comp.	AEC Buffer	Interval
----------------	----------------	-----	------	-------	------	-----	-----	--------------------	-------	------------	----------

XOB #1CED: Synoptic for HOP448 w/ Al-mesh(5/128/723), Al-poly(12/181/1443), Thin-Be(33/512/4096), Thick-Be(32768), Med-Al(256/8192/32768), Med-Be(12

Term	Pointing (x, y)	Comment
02/11 17:51:00 - 02/11 17:57:54	Fixed (0.0, 0.0)	synoptic, shifted -12.0 min
02/12 06:03:00 - 02/12 06:09:54	Fixed (0.0, 0.0)	synoptic + HOP 349.
02/12 18:07:00 - 02/12 18:13:54	Fixed (0.0, 0.0)	synoptic, shifted 4.0 min
02/13 06:24:30 - 02/13 06:31:24	Fixed (0.0, 0.0)	synoptic, shifted 21.5 min + HOP 349.
02/13 18:11:00 - 02/13 18:17:54	Fixed (0.0, 0.0)	synoptic, shifted 8.0 min

PROG= 03 1-time(s)

Subr= 1 1-time(s) 2.0sec	Seqn= 5 1-time(s) 2.0sec	Open/Ti-poly	Open/thick-Al	close	Safe	Dark	500ms	Obs	2x2	2048x2048 (1024, 1024)	Q=98	0	0	2.0sec
		Open/Ti-poly	Open/thick-Al	close	Safe	Dark	500ms	Obs	4x4	2048x2048 (1024, 1024)	Q=98	0	0	2.0sec
		Open/Ti-poly	Open/thick-Al	close	Safe	Dark	500ms	Obs	8x8	2048x2048 (1024, 1024)	Q=98	0	0	2.0sec
		Open/Ti-poly	Open/thick-Al	close	Safe	Dark	500ms	Obs	1x1	2048x512 (1024, 1024)	DPCM	0	0	2.0sec
		Open/Ti-poly	Open/thick-Al	close	Safe	Dark	500ms	Obs	1x1	512x2048 (1024, 1024)	DPCM	0	0	2.0sec

Seqn= 26 1-time(s) 2.0sec

Open/Al-mesh	Open/Al-mesh	close	Safe	Norm	5ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Open/Al-mesh	Open/Al-mesh	close	Safe	Norm	125ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Open/Al-mesh	Open/Al-mesh	close	Safe	Norm	707ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec

Seqn= 15 1-time(s) 2.0sec

Al-poly/Open	Al-poly/Open	close	Safe	Norm	12ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Al-poly/Open	Al-poly/Open	close	Safe	Norm	177ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Al-poly/Open	Al-poly/thick-Al	close	Safe	Norm	1.41s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec

Seqn= 83 1-time(s) 2.0sec

thin-Be/Open	thin-Be/Open	close	Safe	Norm	32ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
thin-Be/Open	thin-Be/Open	close	Safe	Norm	500ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
thin-Be/Open	thin-Be/Open	close	Safe	Norm	4.00s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec

Seqn= 23 1-time(s) 4.0sec

Open/G-band	Open/G-band	open	Safe	Norm	1ms	Obs	1x1	2048x2048 (1024, 1024)	Q=90	0	0	2.0sec
Open/G-band	Open/G-band	close	Safe	Norm	1ms	Obs	1x1	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec

Subr= 2 1-time(s) 2.0sec

Seqn= 41 1-time(s) 2.0sec	Open/thick-Be	Open/thick-Be	close	Safe	Norm	32.0s	Obs	2x2	2048x2048 (1024, 1024)	Q=98	0	0	2.0sec
	med-Al/Open	med-Al/thick-Al	close	Safe	Norm	250ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
	med-Al/Open	med-Al/thick-Al	close	Safe	Norm	8.00s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
	med-Al/Open	med-Al/Open	close	Safe	Norm	32.0s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec

Seqn= 33 1-time(s) 2.0sec

med-Be/Open	Open/thick-Al	close	Safe	Norm	125ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
med-Be/Open	med-Be/Open	close	Safe	Norm	5.66s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
med-Be/Open	med-Be/Open	close	Safe	Norm	22.6s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec

Default Filter	Thicker Filter	VLS	mode	image	Exp.	CCD	Bin	ROI: size (center)	Comp.	AEC Buffer	Interval
----------------	----------------	-----	------	-------	------	-----	-----	--------------------	-------	------------	----------

XOB #1CD0: HOP349 - 3-filter Synoptics (Al-mesh[2/128/723], Al-poly[12/181/1443], thin-Be[24/512/3897] with 512x512 G-band+Leak - 300min cad) + CME w

Term	Pointing (x, y)	Comment
------	-----------------	---------

02/12 04:03:00 - 02/12 05:59:54 Fixed (0.0, 0.0) synoptic + HOP 349.
 02/13 04:35:30 - 02/13 06:21:24 Fixed (0.0, 0.0) synoptic, shifted 21.5 min + HOP 349.
 02/14 04:03:00 - 02/14 05:52:54 Fixed (0.0, 0.0) synoptic, shifted -7.0 min + HOP 349.

PROG= 18 Inf.-time(s)

Subr=	1-time(s)	300.0sec											
Seqn= 55	1-time(s)	2.0sec											
Open/Al-mesh	Open/Al-mesh	close	Safe	Norm	2ms	Obs	2x2	2048x2048	(1024, 1024)	Q=95	0	0	2.0sec
Open/Al-mesh	Open/Al-mesh	close	Safe	Norm	125ms	Obs	2x2	2048x2048	(1024, 1024)	Q=95	0	0	2.0sec
Open/Al-mesh	Open/Al-mesh	close	Safe	Norm	707ms	Obs	2x2	2048x2048	(1024, 1024)	Q=95	0	0	2.0sec
Seqn= 15	1-time(s)	2.0sec											
Al-poly/Open	Al-poly/Open	close	Safe	Norm	12ms	Obs	2x2	2048x2048	(1024, 1024)	Q=95	0	0	2.0sec
Al-poly/Open	Al-poly/Open	close	Safe	Norm	177ms	Obs	2x2	2048x2048	(1024, 1024)	Q=95	0	0	2.0sec
Al-poly/Open	Al-poly/thick-Al	close	Safe	Norm	1.41s	Obs	2x2	2048x2048	(1024, 1024)	Q=95	0	0	2.0sec
Seqn= 79	1-time(s)	2.0sec											
thin-Be/Open	thin-Be/Open	close	Safe	Norm	16ms	Obs	2x2	2048x2048	(1024, 1024)	Q=95	0	0	2.0sec
thin-Be/Open	thin-Be/Open	close	Safe	Norm	500ms	Obs	2x2	2048x2048	(1024, 1024)	Q=95	0	0	2.0sec
thin-Be/Open	thin-Be/Open	close	Safe	Norm	2.83s	Obs	2x2	2048x2048	(1024, 1024)	Q=95	0	0	2.0sec
Seqn= 30	1-time(s)	2.0sec											
Open/G-band	Open/G-band	open	Safe	Norm	1ms	Obs	1x1	512x512	(1024, 1024)	Q=90	0	0	2.0sec
Open/G-band	Open/G-band	close	Safe	Norm	1ms	Obs	1x1	512x512	(1024, 1024)	Q=95	0	0	2.0sec
Subr= 2	20-time(s)	900.0sec											
Seqn= 8	1-time(s)	2.0sec											
thin-Be/Open	med-Be/Open	close	Safe	Norm	1.00s	Obs	4x4	2048x2048	(1024, 1024)	Q=98	3	0	2.0sec
thin-Be/Open	med-Be/Open	close	Safe	Norm	1.41s	Obs	4x4	2048x2048	(1024, 1024)	DPCM	2	0	2.0sec
Seqn= 74	1-time(s)	2.0sec											
med-Be/Open	med-Be/Open	close	Safe	Norm	500ms	Obs	4x4	2048x2048	(1024, 1024)	Q=98	3	0	2.0sec
med-Be/Open	med-Be/Open	close	Safe	Norm	2.00s	Obs	4x4	2048x2048	(1024, 1024)	Q=98	2	0	2.0sec
Seqn= 6	1-time(s)	2.0sec											
Al-poly/Open	Al-poly/Open	close	Safe	Norm	125ms	Obs	4x4	2048x2048	(1024, 1024)	Q=98	3	0	2.0sec
Al-poly/Open	Al-poly/Open	close	Safe	Norm	1.00s	Obs	4x4	2048x2048	(1024, 1024)	DPCM	2	0	2.0sec
Seqn= 29	1-time(s)	2.0sec											
Open/Al-mesh	Open/Al-mesh	close	Safe	Norm	125ms	Obs	4x4	2048x2048	(1024, 1024)	Q=98	3	0	2.0sec
Open/Al-mesh	Open/Al-mesh	close	Safe	Norm	250ms	Obs	4x4	2048x2048	(1024, 1024)	Q=98	2	0	2.0sec
Default Filter	Thicker Filter	VLS	mode	image	Exp.	CCD	Bin	ROI: size (center)	Comp.	AEC Buffer	Interval		

XOB #1CD7: AR - Standard Core - (Filter-Ratio with Al/poly and thin-Be long/short pairs) with PFB, 384x384 at 1064 1048, thin-Be, and Al/poly context, with

Term	Pointing (x, y)	Comment
02/13 06:34:30 - 02/13 17:44:00	Track (-309.4, -131.2) ^{Ⓢ 02/13 06:31:30}	# AR cont.
02/13 18:25:00 - 02/14 03:59:54	Track (-204.5, -127.6) ^{Ⓢ 02/13 18:18:00}	# AR cont.
02/14 06:06:00 - 02/14 07:29:54	Track (-97.5, -125.5) ^{Ⓢ 02/14 06:03:00}	# AR cont.

PROG= 13 Inf.-time(s)

Subr=	1-time(s)	2.0sec											
Seqn= 92	1-time(s)	2.0sec											
Open/G-band	Open/G-band	open	Safe	Norm	1ms	Obs	1x1	384x384	(1064, 1048)	DPCM	0	0	2.0sec
Open/G-band	Open/G-band	close	Safe	Norm	1ms	Obs	1x1	384x384	(1064, 1048)	DPCM	0	0	2.0sec
Open/Ti-poly	Open/thick-Al	close	Safe	Dark	16.0s	Obs	1x1	384x384	(1064, 1048)	Q=98	0	0	2.0sec
Subr= 2	5-time(s)	2.0sec											
Seqn= 47	1-time(s)	2.0sec											
Al-poly/Open	thin-Be/Open	close	Safe	Norm	250ms	Obs	1x1	384x384	(1064, 1048)	Q=95	2	0	2.0sec
Al-poly/Open	thin-Be/Open	close	Safe	Norm	250ms	Obs	1x1	384x384	(1064, 1048)	Q=95	3	0	2.0sec
thin-Be/Open	med-Be/Open	close	Safe	Norm	500ms	Obs	1x1	384x384	(1064, 1048)	Q=95	2	0	2.0sec
thin-Be/Open	med-Be/Open	close	Safe	Norm	500ms	Obs	1x1	384x384	(1064, 1048)	Q=95	3	0	2.0sec
Seqn= 96	4-time(s)	180.0sec											
Al-poly/Open	thin-Be/Open	close	Safe	Norm	250ms	Obs	1x1	384x384	(1064, 1048)	Q=95	1	0	2.0sec
thin-Be/Open	med-Be/Open	close	Safe	Norm	500ms	Obs	1x1	384x384	(1064, 1048)	Q=95	1	0	2.0sec
Al-poly/Open	thin-Be/Open	close	Safe	Norm	250ms	Obs	1x1	384x384	(1064, 1048)	Q=95	1	1	2.0sec
thin-Be/Open	med-Be/Open	close	Safe	Norm	500ms	Obs	1x1	384x384	(1064, 1048)	Q=95	1	1	2.0sec
Al-poly/Open	thin-Be/Open	close	Safe	Norm	250ms	Obs	1x1	384x384	(1064, 1048)	Q=95	1	2	2.0sec
thin-Be/Open	med-Be/Open	close	Safe	Norm	500ms	Obs	1x1	384x384	(1064, 1048)	Q=95	1	2	2.0sec
Default Filter	Thicker Filter	VLS	mode	image	Exp.	CCD	Bin	ROI: size (center)	Comp.	AEC Buffer	Interval		

XOB #1CEE: Synoptic 8 Filter w/ Al-mesh(5/128/723), Al-poly(12/181/1443), Thin-Be(33/512/4096), Thick-Be(32768), Med-Al(512/8192/32768), Med-Be(128/576)

Term	Pointing (x, y)	Comment
02/14 05:56:00 - 02/14 06:02:54	Fixed (0.0, 0.0)	synoptic, shifted -7.0 min + HOP 349.

PROG= 20 1-time(s)

Subr=	1-time(s)	2.0sec											
Seqn= 5	1-time(s)	2.0sec											
Open/Ti-poly	Open/thick-Al	close	Safe	Dark	500ms	Obs	2x2	2048x2048	(1024, 1024)	Q=98	0	0	2.0sec
Open/Ti-poly	Open/thick-Al	close	Safe	Dark	500ms	Obs	4x4	2048x2048	(1024, 1024)	Q=98	0	0	2.0sec
Open/Ti-poly	Open/thick-Al	close	Safe	Dark	500ms	Obs	8x8	2048x2048	(1024, 1024)	Q=98	0	0	2.0sec
Open/Ti-poly	Open/thick-Al	close	Safe	Dark	500ms	Obs	1x1	2048x512	(1024, 1024)	DPCM	0	0	2.0sec
Open/Ti-poly	Open/thick-Al	close	Safe	Dark	500ms	Obs	1x1	512x2048	(1024, 1024)	DPCM	0	0	2.0sec
Seqn= 26	1-time(s)	2.0sec											
Open/Al-mesh	Open/Al-mesh	close	Safe	Norm	5ms	Obs	2x2	2048x2048	(1024, 1024)	Q=95	0	0	2.0sec
Open/Al-mesh	Open/Al-mesh	close	Safe	Norm	125ms	Obs	2x2	2048x2048	(1024, 1024)	Q=95	0	0	2.0sec
Open/Al-mesh	Open/Al-mesh	close	Safe	Norm	707ms	Obs	2x2	2048x2048	(1024, 1024)	Q=95	0	0	2.0sec
Seqn= 15	1-time(s)	2.0sec											
Al-poly/Open	Al-poly/Open	close	Safe	Norm	12ms	Obs	2x2	2048x2048	(1024, 1024)	Q=95	0	0	2.0sec

Al-poly/Open	Al-poly/Open	close	Safe	Norm	177ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Al-poly/Open	Al-poly/thick-Al	close	Safe	Norm	1.41s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Seqn= 83		1-time(s)	2.0sec									
thin-Be/Open	thin-Be/Open	close	Safe	Norm	32ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
thin-Be/Open	thin-Be/Open	close	Safe	Norm	500ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
thin-Be/Open	thin-Be/Open	close	Safe	Norm	4.00s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Seqn= 23		1-time(s)	4.0sec									
Open/G-band	Open/G-band	open	Safe	Norm	1ms	Obs	1x1	2048x2048 (1024, 1024)	Q=90	0	0	2.0sec
Open/G-band	Open/G-band	close	Safe	Norm	1ms	Obs	1x1	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Subr= 2		1-time(s)	2.0sec									
Seqn= 41		1-time(s)	2.0sec									
Open/thick-Be	Open/thick-Be	close	Safe	Norm	32.0s	Obs	2x2	2048x2048 (1024, 1024)	Q=98	0	0	2.0sec
Seqn= 17		1-time(s)	2.0sec									
med-Al/Open	med-Al/thick-Al	close	Safe	Norm	250ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
med-Al/Open	med-Al/thick-Al	close	Safe	Norm	8.00s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
med-Al/Open	med-Al/Open	close	Safe	Norm	32.0s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Seqn= 33		1-time(s)	2.0sec									
med-Be/Open	Open/thick-Al	close	Safe	Norm	125ms	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
med-Be/Open	med-Be/Open	close	Safe	Norm	5.66s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
med-Be/Open	med-Be/Open	close	Safe	Norm	22.6s	Obs	2x2	2048x2048 (1024, 1024)	Q=95	0	0	2.0sec
Seqn= 56		1-time(s)	2.0sec									
Al-poly/Ti-poly	Al-poly/thick-Al	close	Safe	Norm	63ms	Obs	2x2	2048x2048 (1024, 1024)	Q=98	0	0	2.0sec
Al-poly/Ti-poly	Al-poly/thick-Al	close	Safe	Norm	2.00s	Obs	2x2	2048x2048 (1024, 1024)	Q=98	0	0	2.0sec
Default Filter	Thicker Filter	VLS	mode	image	Exp.	CCD	Bin	ROI: size (center)	Comp.	AEC Buffer	Interval	

* * * * *

Flare mode

* * * * *

XOB #1C96: Flare - multifilter 26 sec cadence (Be/thin, Be/med, Be/thick), AEC 3, 384x384 + context (med-Al,thick-Be -384x384 + Al-poly 512x512 2x2) + GB

Term	Pointing (x, y)	Comment
02/11 11:49:00 - 02/11 17:47:54	Track (-649.4, -154.7) ^{Ⓜ 02/11 11:46:00}	# OP start + 10min. AR 13217 MFW observations.
02/11 18:01:00 - 02/12 03:39:00	Track (-605.5, -150.3) ^{Ⓜ 02/11 17:58:00}	# AR cont.
02/12 04:03:00 - 02/12 05:59:54	Fixed (0.0, 0.0)	synoptic + HOP 349.
02/12 06:13:00 - 02/12 18:03:54	Track (-513.1, -142.6) ^{Ⓜ 02/12 06:10:00}	# AR cont.
02/12 18:17:00 - 02/13 04:14:00	Track (-414.9, -136.3) ^{Ⓜ 02/12 18:14:00}	# AR cont.
02/13 04:35:30 - 02/13 06:21:24	Fixed (0.0, 0.0)	synoptic, shifted 21.5 min + HOP 349.
02/13 06:34:30 - 02/13 17:44:00	Track (-309.4, -131.2) ^{Ⓜ 02/13 06:31:30}	# AR cont.
02/13 18:25:00 - 02/14 03:59:54	Track (-204.5, -127.6) ^{Ⓜ 02/13 18:18:00}	# AR cont.
02/14 04:03:00 - 02/14 05:52:54	Fixed (0.0, 0.0)	synoptic, shifted -7.0 min + HOP 349.
02/14 06:06:00 - 02/14 07:29:54	Track (-97.5, -125.5) ^{Ⓜ 02/14 06:03:00}	# AR cont.

PROG= 04 30-time(s)

Subr= 1		20-time(s)	2.0sec									
Seqn= 11		1-time(s)	2.0sec									
Al-poly/Open	Al-poly/thick-Al	close	Safe	Norm	125ms	Obs	2x2	512x512 (1024, 1024)	Q=95	2	0	2.0sec
Seqn= 73		1-time(s)	10.0sec									
thin-Be/Open	med-Be/Open	close	Safe	Norm	125ms	Obs	1x1	384x384 (1024, 1024)	Q=95	3	0	2.0sec
med-Be/Open	Open/thick-Al	close	Safe	Norm	250ms	Obs	1x1	384x384 (1024, 1024)	Q=95	3	0	2.0sec
Open/thick-Be	Open/thick-Be	close	Safe	Norm	2.00s	Obs	1x1	384x384 (1024, 1024)	Q=95	3	0	2.0sec
Subr= 2		1-time(s)	2.0sec									
Seqn= 10		1-time(s)	2.0sec									
med-Al/Open	med-Al/thick-Al	close	Safe	Norm	500ms	Obs	1x1	384x384 (1024, 1024)	Q=95	3	0	2.0sec
Open/thick-Be	Open/thick-Be	close	Safe	Norm	2.00s	Obs	1x1	384x384 (1024, 1024)	Q=95	3	0	2.0sec
Seqn= 11		1-time(s)	2.0sec									
Al-poly/Open	Al-poly/thick-Al	close	Safe	Norm	125ms	Obs	2x2	512x512 (1024, 1024)	Q=95	2	0	2.0sec
Seqn= 87		1-time(s)	2.0sec									
Open/G-band	Open/G-band	open	Safe	Norm	1ms	Obs	1x1	384x384 (1024, 1024)	Q=98	0	0	2.0sec
Open/G-band	Open/G-band	close	Safe	Norm	1ms	Obs	1x1	384x384 (1024, 1024)	Q=98	0	0	2.0sec
Open/thick-Al	Open/thick-Al	close	Safe	Dark	1.00s	Obs	1x1	384x384 (1024, 1024)	Q=98	0	0	2.0sec
Open/thick-Al	Open/thick-Al	close	Safe	Dark	1.00s	Obs	2x2	512x512 (1024, 1024)	Q=98	0	0	2.0sec
Default Filter	Thicker Filter	VLS	mode	image	Exp.	CCD	Bin	ROI: size (center)	Comp.	AEC Buffer	Interval	

* * * * *

Active Region Search

* * * * *

NOT USED


* * * * *

Flare Detection


* * * * *

Term	Pointing (x, y)	Comment										
02/11 10:26:10 - 02/11 17:48:18	cannot be identified											
02/11 17:58:18 - 02/12 06:00:18	Track (-605.5, -150.3) ^{Ⓜ 02/11 17:58:00}	# AR cont.										
02/12 06:10:18 - 02/12 18:04:18	Track (-513.1, -142.6) ^{Ⓜ 02/12 06:10:00}	# AR cont.										
02/12 18:14:18 - 02/13 06:21:48	Track (-414.9, -136.3) ^{Ⓜ 02/12 18:14:00}	# AR cont.										
02/13 06:31:48 - 02/13 18:08:18	Track (-309.4, -131.2) ^{Ⓜ 02/13 06:31:30}	# AR cont.										
02/13 18:22:18 - 02/14 05:53:18	Track (-204.5, -127.6) ^{Ⓜ 02/13 18:18:00}	# AR cont.										
02/14 06:03:18 - 02/16 10:25:00	Track (-97.5, -125.5) ^{Ⓜ 02/14 06:03:00}	# AR cont.										
Al-poly/Open	Al-poly/Open	close	Safe	Norm	4ms	Obs	8x8		Q=50		30sec	
Default Filter	Thicker Filter	VLS	mode	image	Exp.	CCD	Bin	ROI: size (center)	Comp.	AEC Buffer	Interval	


CMDI #0873 2023/02/11

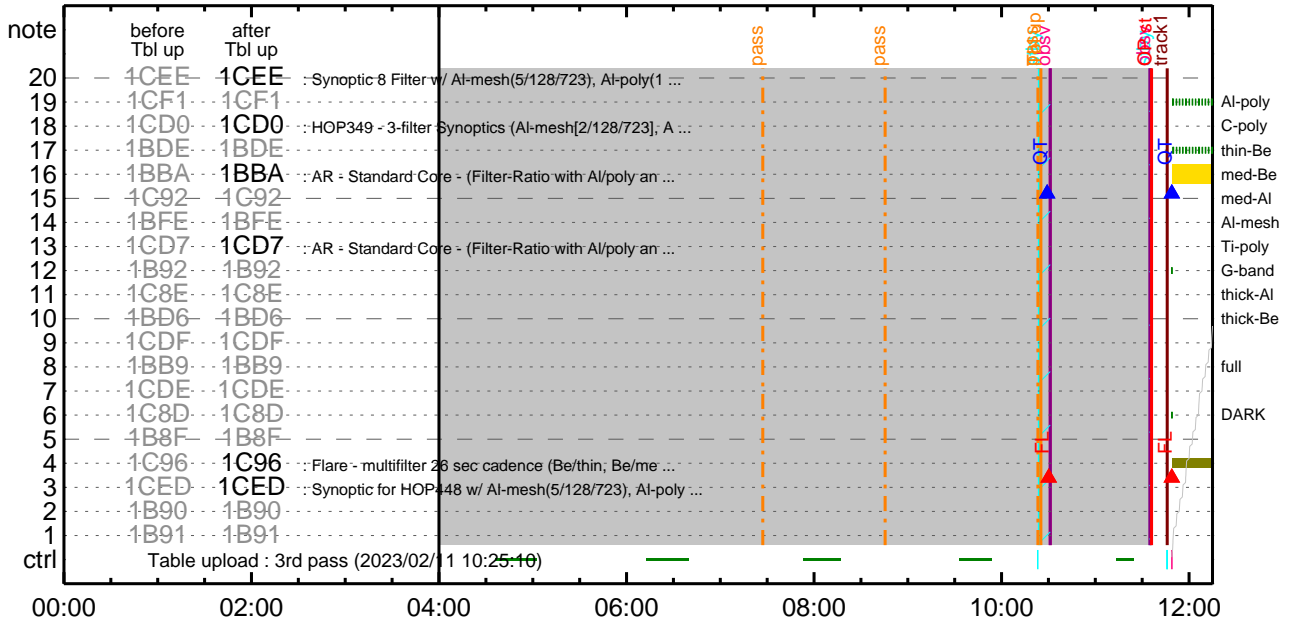


CMDI #0873 2023/02/11

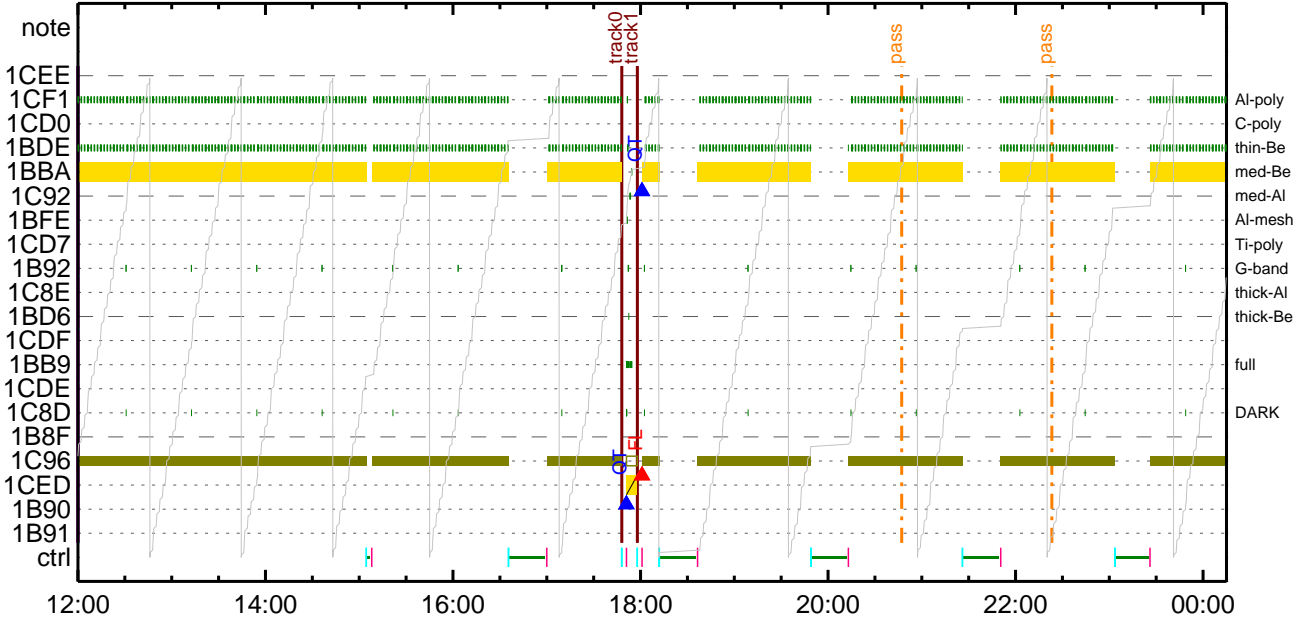


CMDI #0873 2023/02/12

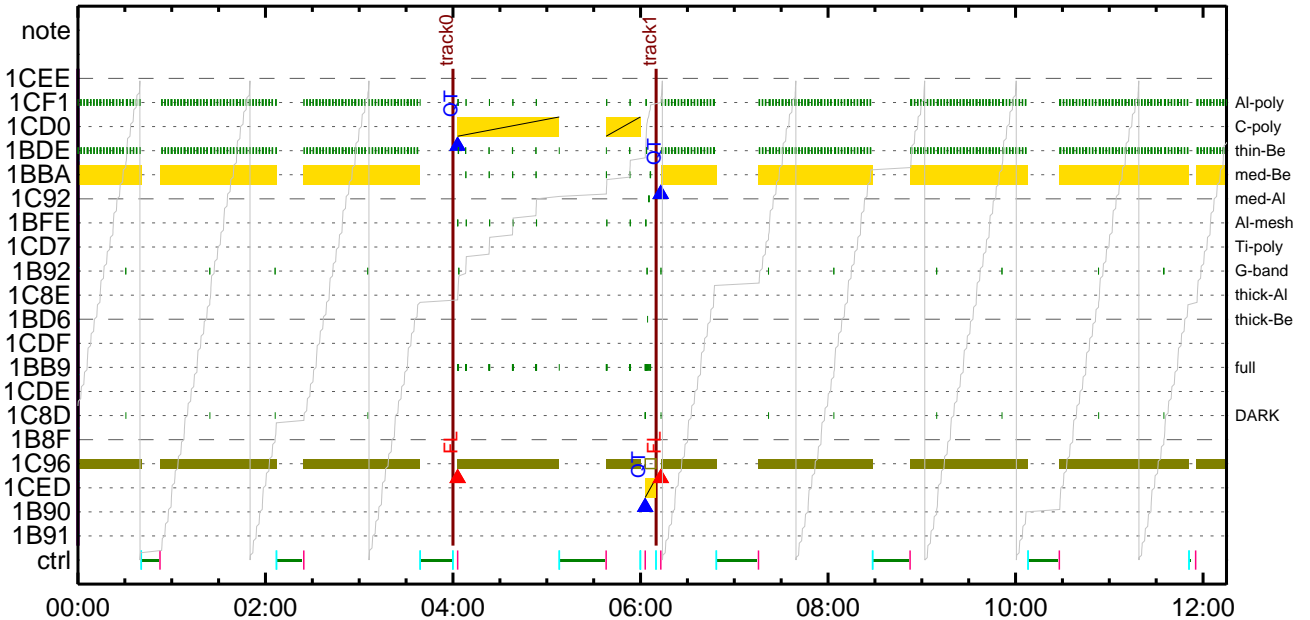


CMDI #0873 2023/02/12

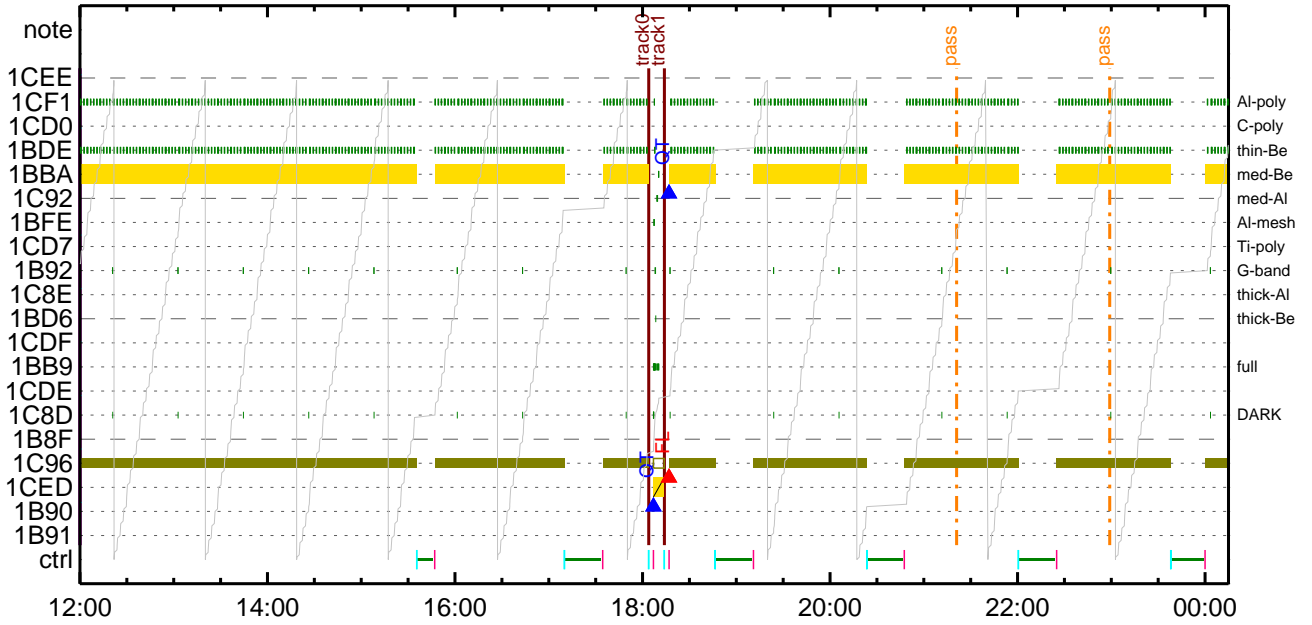


CMDI #0873 2023/02/13

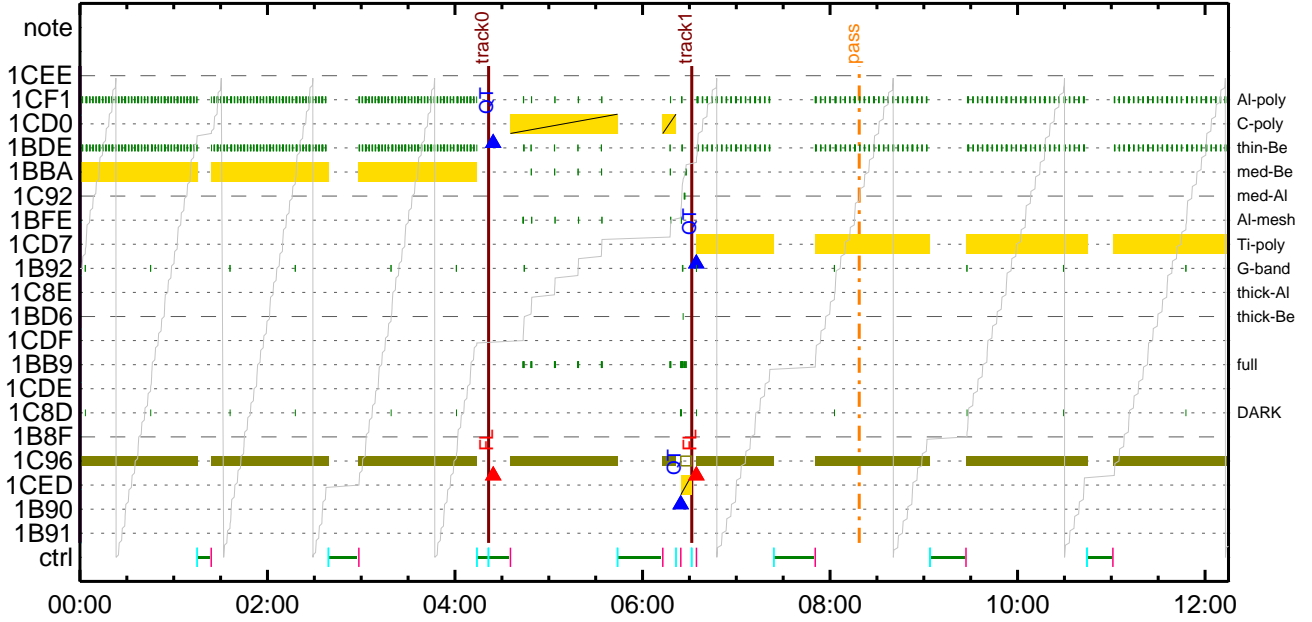


CMDI #0873 2023/02/13

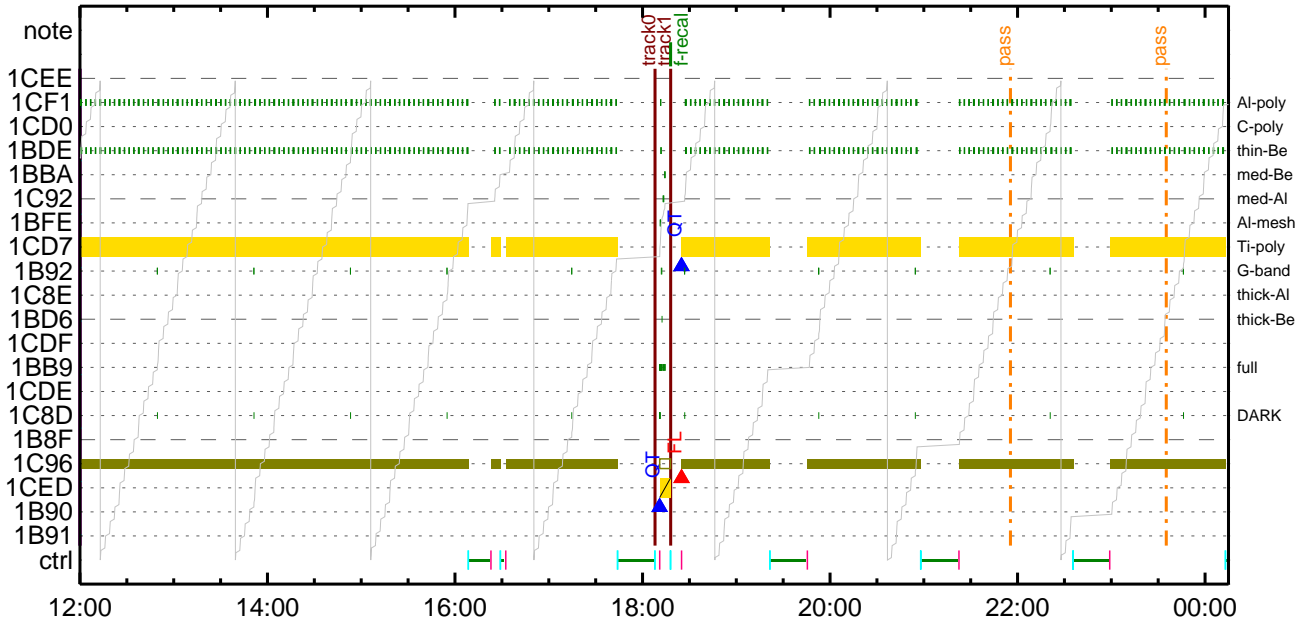


CMDI #0873 2023/02/14

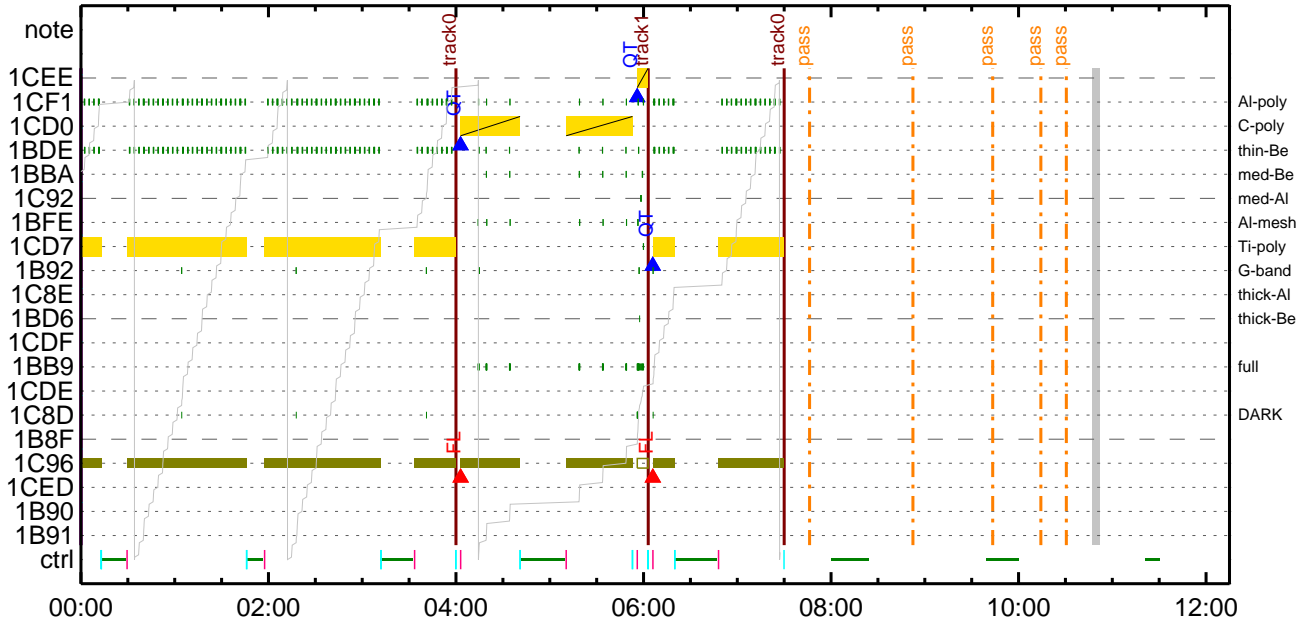


CMDI #0873 2023/02/14

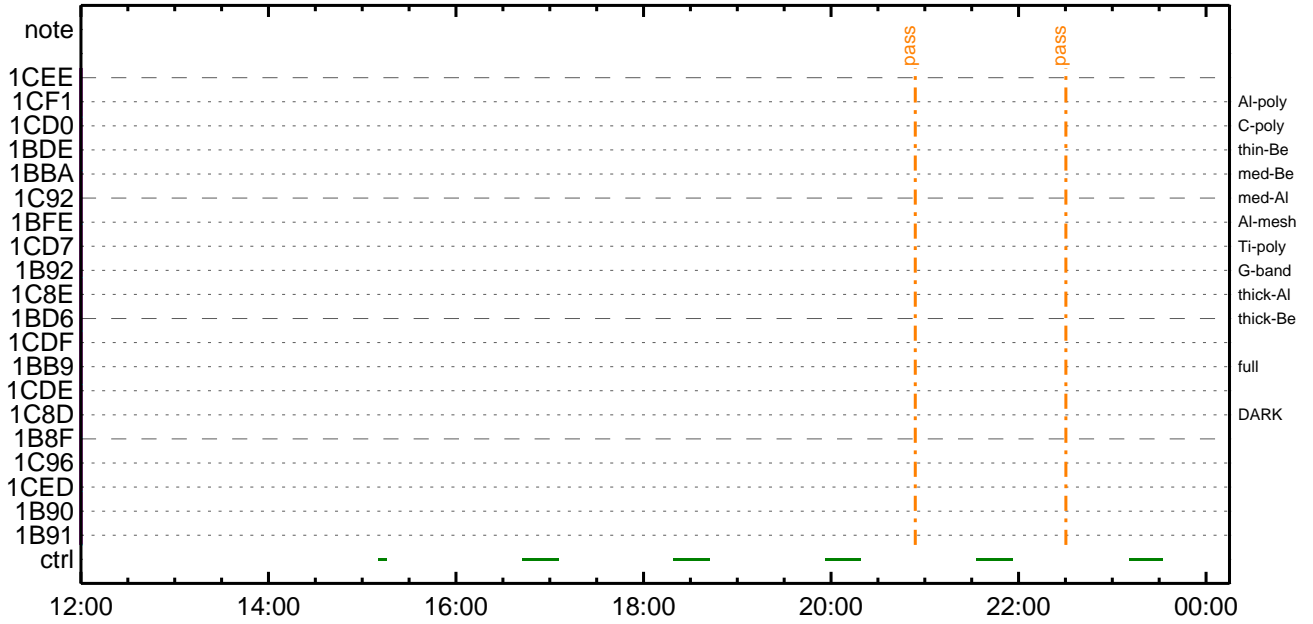


CMDI #0873 2023/02/15

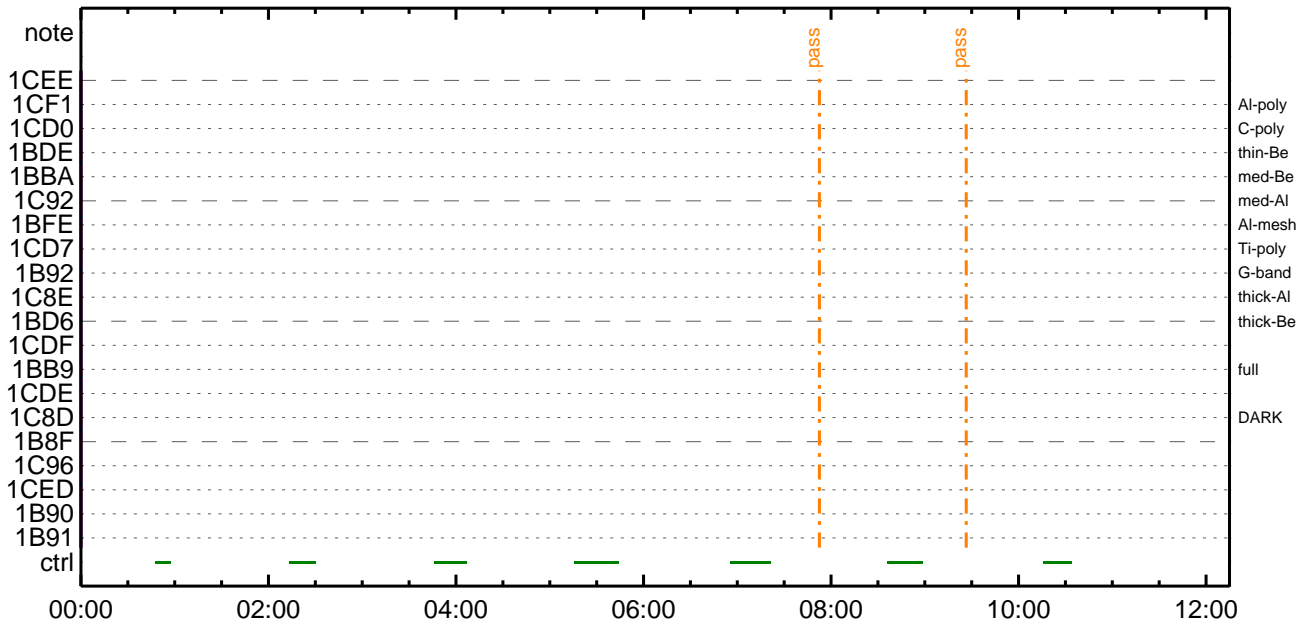


CMDI #0873 2023/02/15

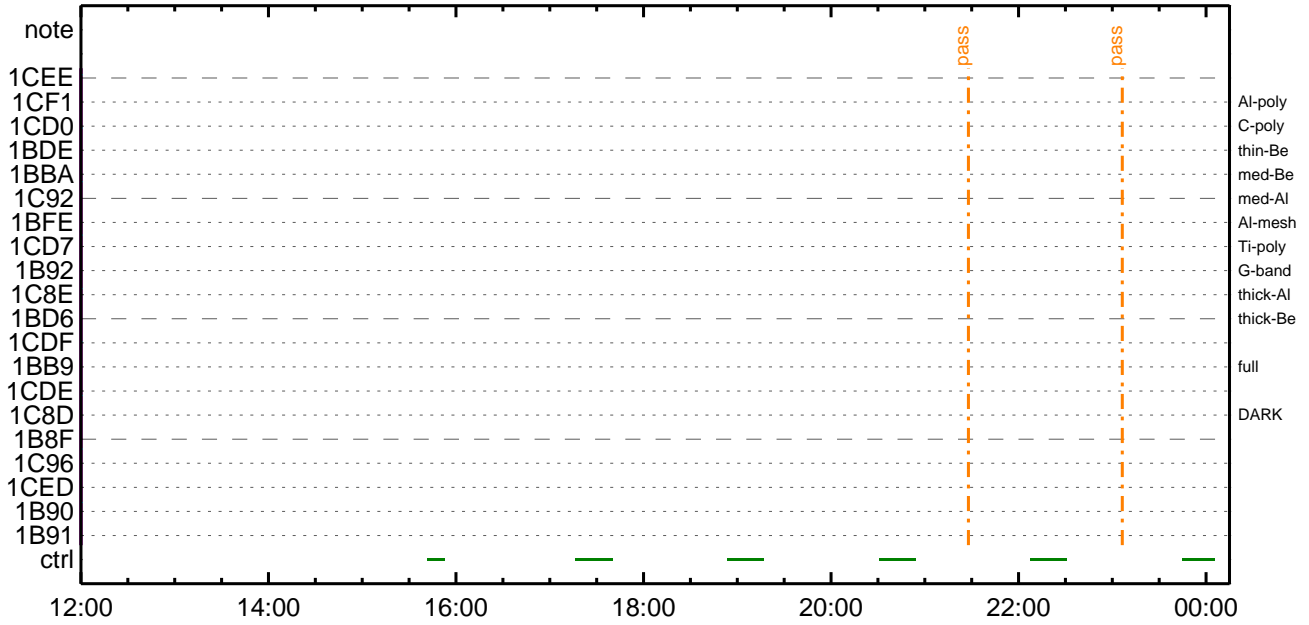

CMDI #0873 2023/02/16

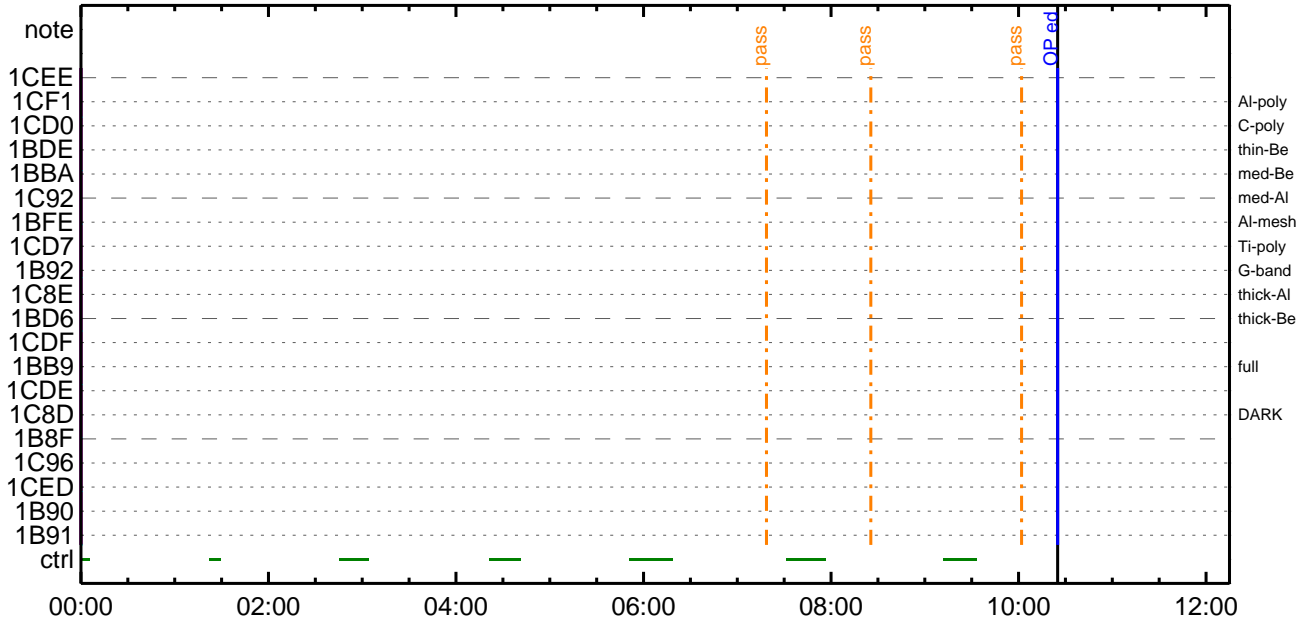

CMDI #0873 2023/02/16

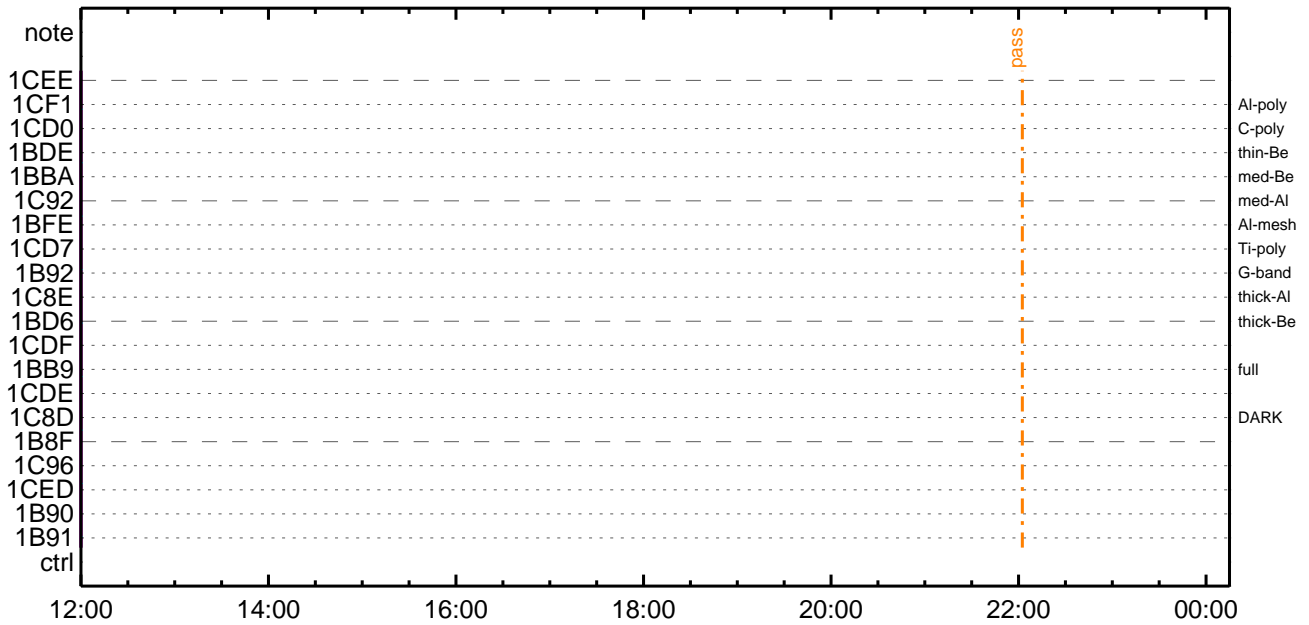

0096 C. SET EDUMP I±°iYÑY¹aÇ¹Ôa|a³aE;f

0097 C.

0098 C. TIY³YFYYÖYÉaððÄDİ¿(UT)

0099 +. TI 2023-02-11 11:31:00.0

0100 DC 01-B3 DHU_OP_STOP

0101 C. [] [HK1_TI_CMD_NUM] EQ 1COUNTUP

0102 C.

0103 +. TI 2023-02-11 11:31:01.0

0104 DC 01-B4 DHU_OP_COPY

0105 C. [] [HK1_TI_CMD_NUM] EQ 1COUNTUP

0106 C.

0107 +. TI 2023-02-11 11:31:01.0

0108 DC 01-B5 DHU_OPOG_COPY

0109 C. [] [HK1_TI_CMD_NUM] EQ 1COUNTUP

0110 C.

0111 +. TI 2023-02-11 11:35:59.5

0112 DC 01-B2 DHU_OP_START

0113 C. [] [HK1_TI_CMD_NUM] EQ 1COUNTUP

0114 C.

0115 C. °E²¼aİÄè%îİÑaİYÁYŞYÄY-¹àİÜ

0116 C. [] [HK1_TI_CMD_ENA/DIS] EQ ENA

0117 C. [] [HK1_TI_CMD_NUM] EQ 4

0118 C. [] [HK1_NEXT_EXEC_PIM] EQ DHU

0119 C. [] [HK1_NEXT_EXEC_DC] EQ 0xB3

0120 C.

0121 C. *****

0122 C. TIİİ°èYÄYÖYx

0123 C. *****

0124 C.

0125 C. TI_TBL(0x03AB00-0x03AEFF;§ 1024byte)

0126 +. DC 01-23 DHU_DMA_DMP_PRM_SET

0127 BC (03 ab 03 01 02)

0128 C. [] [HK1_DMP_TOP_ADRS_1] EQ 07

0129 C. [] [HK1_DMP_TOP_ADRS_0] EQ 2B

0130 C. [] [HK1_DMP_BLOCK_NUM] EQ 3

0131 C. [] [HK1_DMP_REPEAT_NUM] EQ 0

0132 C. [] [HK1_DMA_DMP_PIM] EQ DHU

0133 +. DC 01-22 DHU_MODE_CHNG

0134 BC (07 0b f8)

0135 C. [] [HK1_PKT_FORM_NO] EQ 7

0136 C. [] [HK1_PKT_GEN_TIME] EQ 0.25 s

0137 C. [] [HK1_S_TLM_BIT_RATE] EQ 32k

0138 C. [] [HK1_X_TLM_BIT_RATE] EQ 4M

0139 C. [] [HK1_DMP_CHK_FLG] EQ EXEC

0140 C.

0141 C. YÄYÖYx¼¹İ»að³İÇŞ

0142 C. [] [HK1_DMP_CHK_FLG] EQ NON

0143 C.

0144 C. RAM ID=TI_TBLaİ%È¹Ç•è²İOKað³İÇŞ

0145 C.

0146 C. DHUYâ;¼YÉ;È¼Y¼, Yİ;¼YÈ;Èaðİã¹

0147 +. DC 01-22 DHU_MODE_CHNG

0148 BC (02 0a f8)

0149 C. [] [HK1_PKT_FORM_NO] EQ 2

0150 C. [] [HK1_PKT_GEN_TIME] EQ 0.5S

0151 C. [] [HK1_S_TLM_BIT_RATE] EQ 32K

0152 C. [] [HK1_X_TLM_BIT_RATE] EQ 4M

0153 C.

0154 C. Stop EIS observation and temporarily disable EIS mode changes

0155 C.

0156 C.

0157 C. ***** Start EIS operation (TI set) *****

0158 C. Execute, after the success of OP upload.

0159 C. Set EIS TI-commands

0160 +. TI 2023-02-11 11:35:30.0

0161 DC 07-FC EIS_MODE_MANU

0162 BC (21 02)

0163 +. TI 2023-02-11 11:35:40.0

0164 DC 07-FC EIS_MODE_CHG_DIS

0165 BC (22)

0166 C. [] [HK1_TI_CMD_NUM] EQ 2 COUNTUP

0167 C. ***** End EIS operation (TI set) *****

0168 C.

0169 C.

0170 C.

0171 C. ***** XRT START *****

0172 C. Execute, after the success of OP upload.

0173 +. TI 2023-02-11 11:35:00.0

0174 DC 07-F0 MDP_XRT_MODE_STBY

0175 BC (c3)

0176 C. [] [HK1_TI_CMD_NUM] EQ 1COUNTUP

0177 C.

0178 C. ***** XRT END *****

0179 C.

0180 C. ***** MDP ´úÄİaİ»ö¼Y¼aÈÄa¹aèDCBC•x²è *****

0181 C. (¼á°İYÖYÄYÉYFYYÉYÇYèaÈ¼a¼¼¼»Ü¹aè)

0182 C. DC-BC dcbc-402:DCBC

0183 (MDP_known_event)

0184 C.

0185 C.

0186 C. ***** YDY¹•İ Daily±¿İÑaÈ¹Øa¹aèDCBC•x²è *****

0187 C. DC-BC dcbc-153:DCBC

0188 (SPECIAL-CMD_DAILY_OPERATIN_DCB)

0189 C.

0190 C.

0191 C. ;ãLOS YÄYŞYÄY-¼Ä»Ü;ä

0192 C.

0193 C. ***** LOS *****


```

0096 C.
0097 C.
0098 C.
0099 C. ***** XRT START *****
0100 C.
0101 +. DC 07-F0 MDP_XRT_CTRL_MANU
0102 BC (c1)
0103 + DC 07-F0 MDP_XRT_MODE_STBY
0104 BC (c3)
0105 . C. ----- Success Verify ? OK / NG ____
0106 C.
0107 C. XRT Obs. Table Upload
0108 . S. RAM ram-291:MDP_OBS_X
0109 ( )
0110 C.
0111 +. DC 07-F0 MDP_DUMP_XRTTBL
0112 BC (84 07 00 00 00 3a d4)
0113 . C. ----- Comparison Check ? OK / ERR ____
0114 C.
0115 C.
0116 +. DC 07-F0 MDP_XRT_ROI_SET
0117 BC (cd 01 b1 b1 04 04)
0118 + DC 07-F0 MDP_XRT_ROI_SET
0119 BC (cd 02 b1 b1 08 08)
0120 + DC 07-F0 MDP_XRT_ROI_SET
0121 BC (cd 03 b1 b1 08 08)
0122 + DC 07-F0 MDP_XRT_ROI_SET
0123 BC (cd 04 b1 b1 06 06)
0124 + DC 07-F0 MDP_XRT_ROI_SET
0125 BC (cd 05 85 83 06 06)
0126 + DC 07-F0 MDP_XRT_ROI_SET
0127 BC (cd 06 85 83 06 06)
0128 + DC 07-F0 MDP_XRT_ROI_SET
0129 BC (cd 07 80 80 20 20)
0130 + DC 07-F0 MDP_XRT_ROI_SET
0131 BC (cd 08 80 80 20 08)
0132 + DC 07-F0 MDP_XRT_ROI_SET
0133 BC (cd 09 80 80 08 20)
0134 + DC 07-F0 MDP_XRT_ROI_SET
0135 BC (cd 0a 80 80 08 08)
0136 + DC 07-F0 MDP_XRT_ROI_SET
0137 BC (cd 0f 80 80 06 06)
0138 + DC 07-F0 MDP_XRT_ROI_SET
0139 BC (cd 10 80 80 08 08)
0140 + DC 07-F0 MDP_XRT_FLD_ENA
0141 BC (d8)
0142 + DC 07-F0 MDP_XRT_FLRCTRL_ENA
0143 BC (c8)
0144 + DC 07-F0 MDP_XRT_ARS_DIS
0145 BC (d5)
0146 + DC 07-F0 MDP_XRT_AEC_RESET
0147 BC (d0)
0148 + DC 07-F0 MDP_XRT_FLD_RESET
0149 BC (da)
0150 +. DC 07-F0 MDP_XRT_QT_PROG_SET
0151 BC (c4 10)
0152 +. DC 07-F0 MDP_XRT_FL_PROG_SET
0153 BC (c5 04)
0154 . C. ----- Success Verify ? OK / NG ____
0155 C.
0156 C.
0157 . C. All OK? Yes--> Please Proceed. / No --> Stop here.
0158 C.
0159 +. DC 07-F0 MDP_XRT_MODE_OBSV
0160 BC (c2)
0161 +. TI 2023-02-11 11:35:02.0
0162 DC 07-F0 MDP_XRT_MODE_OBSV
0163 BC (c2)
0164 . C. ----- Success Verify ? OK / NG ____
0165 C.
0166 C. ***** XRT END *****
0167 C.
0168 . C. ***** MDP `úÃîï»ö%ÝðËÄð¹ñèDCBC•x²è *****
0169 C. (%á°îÿÓYÁYÉYÉYÉYáYçYèèE%¼ø¼Á»Û¹ñè)
0170 . S. DC-BC dcbc-402:DCBC
0171 (MDP_known_event)
0172 C.
0173 C.
0174 . C. ***** ¥D¥¹•İ Daily±¿İÑñÈ´Øñ¹ñèDCBC•x²è *****
0175 . S. DC-BC dcbc-153:DCBC
0176 (SPECIAL-CMD_DAILY_OPERATIN_DCB)
0177 C.
0178 C.
0179 . C. ;ãLOS¥Á¥$¥Ã¥¹¼Á»Û;ã
0180 C.
0181 . C. ***** LOS *****
0182 C.

```

*** OP Sequence for XRT ***

2023/02/11	11:45:54.0	XRT_CTRL_MANU_402_OG [0x192]						
		MDP_XRT_CTRL_MANU	1	07-F0	c1			
2023/02/11	11:45:56.0	XRT_CTRL_MANU_402_OG [0x192]						
		MDP_XRT_CTRL_MANU	1	07-F0	c1			
2023/02/11	11:45:58.0	XRT_FOCUS_POSITION_410_OG [0x19a]						
		XRT_FOCUS_POSITION	4	07-F8	22 fe 97 00			
2023/02/11	11:46:00.5	AOCS_Orе-point_Start_1_OG [0x097]						
		AOCU_NM	5	02-76	01 03 74 01 db			
2023/02/11	11:46:18.0	XRT_FLD_ENA_411_OG [0x19b]						
		MDP_XRT_FLD_ENA	1	07-F0	d8			
2023/02/11	11:46:20.0	XRT_FLRCTRL_ENA_412_OG [0x19c]						
		MDP_XRT_FLRCTRL_ENA	1	07-F0	c8			
2023/02/11	11:46:22.0	XRT_AEC_RESET_448_OG [0x1c0]						
		MDP_XRT_AEC_RESET	1	07-F0	d0			
2023/02/11	11:46:24.0	XRT_ARS_DIS_423_OG [0x1a7]						
		MDP_XRT_ARS_DIS	1	07-F0	d5			
2023/02/11	11:46:26.0	XRT_FLD_RESET_434_OG [0x1b2]						
		MDP_XRT_FLD_RESET	1	07-F0	da			
2023/02/11	11:48:56.0	XRT_QT_PROG_SET_437_OG [0x1b5]						
		MDP_XRT_QT_PROG_SET	2	07-F0	c4 10			
2023/02/11	11:48:58.0	XRT_FL_PROG_SET_418_OG [0x1a2]						
		MDP_XRT_FL_PROG_SET	2	07-F0	c5 04			
2023/02/11	11:49:00.0	XRT_CTRL_AUTO_408_OG [0x198]						
		MDP_XRT_CTRL_AUTO	1	07-F0	c0			
2023/02/11	15:04:30.0	XRT_CTRL_MANU_400_OG [0x190]						
		MDP_XRT_CTRL_MANU	1	07-F0	c1			
2023/02/11	15:04:32.0	XRT_CTRL_MANU_402_OG [0x192]						
		MDP_XRT_CTRL_MANU	1	07-F0	c1			
2023/02/11	15:04:34.0	XRT_FLD_RESET_415_OG [0x19f]						
		MDP_XRT_FLD_RESET	1	07-F0	da			
2023/02/11	15:04:36.0	XRT_PREFLR_STRT_436_OG [0x1b4]						
		MDP_XRT_PREFLR_STRT	1	07-F0	e8			
2023/02/11	15:07:00.0	XRT_Custom_430_OG [0x1ae]						
2023/02/11	15:07:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]						
		MDP_XRT_PREFLR_STOP	1	07-F0	e9			
2023/02/11	15:08:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]						
		MDP_XRT_CTRL_AUTO	1	07-F0	c0			
2023/02/11	16:35:30.0	XRT_CTRL_MANU_400_OG [0x190]						
		MDP_XRT_CTRL_MANU	1	07-F0	c1			
2023/02/11	16:35:32.0	XRT_CTRL_MANU_402_OG [0x192]						
		MDP_XRT_CTRL_MANU	1	07-F0	c1			
2023/02/11	16:35:34.0	XRT_FLD_RESET_415_OG [0x19f]						
		MDP_XRT_FLD_RESET	1	07-F0	da			
2023/02/11	16:35:36.0	XRT_PREFLR_STRT_436_OG [0x1b4]						
		MDP_XRT_PREFLR_STRT	1	07-F0	e8			
2023/02/11	16:38:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]						
		MDP_XRT_PREFLR_STOP	1	07-F0	e9			
2023/02/11	16:59:00.5	XRT_Custom_430_OG [0x1ae]						
2023/02/11	17:00:00.5	XRT_CTRL_AUTO_424_OG [0x1a8]						
		MDP_XRT_CTRL_AUTO	1	07-F0	c0			
2023/02/11	17:47:54.0	XRT_CTRL_MANU_402_OG [0x192]						
		MDP_XRT_CTRL_MANU	1	07-F0	c1			
2023/02/11	17:47:56.0	XRT_CTRL_MANU_402_OG [0x192]						
		MDP_XRT_CTRL_MANU	1	07-F0	c1			
2023/02/11	17:47:58.0	XRT_FOCUS_POSITION_406_OG [0x196]						
		XRT_FOCUS_POSITION	4	07-F8	22 ff aa 00			
2023/02/11	17:48:00.0	AOCS_Orе-point_Start_2_OG [0x098]						
		AOCU_NM	5	02-76	00 00 00 00 00			
2023/02/11	17:48:18.0	XRT_FLD_DIS_409_OG [0x199]						
		MDP_XRT_FLD_DIS	1	07-F0	d9			
2023/02/11	17:48:20.0	XRT_FLRCTRL_DIS_413_OG [0x19d]						
		MDP_XRT_FLRCTRL_DIS	1	07-F0	c9			
2023/02/11	17:48:22.0	XRT_ARS_DIS_421_OG [0x1a5]						
		MDP_XRT_ARS_DIS	1	07-F0	d5			
2023/02/11	17:50:58.0	XRT_QT_PROG_SET_420_OG [0x1a4]						
		MDP_XRT_QT_PROG_SET	2	07-F0	c4 03			
2023/02/11	17:51:00.0	XRT_CTRL_AUTO_408_OG [0x198]						
		MDP_XRT_CTRL_AUTO	1	07-F0	c0			
2023/02/11	17:57:54.0	XRT_CTRL_MANU_402_OG [0x192]						
		MDP_XRT_CTRL_MANU	1	07-F0	c1			
2023/02/11	17:57:56.0	XRT_CTRL_MANU_402_OG [0x192]						
		MDP_XRT_CTRL_MANU	1	07-F0	c1			
2023/02/11	17:57:58.0	XRT_FOCUS_POSITION_410_OG [0x19a]						
		XRT_FOCUS_POSITION	4	07-F8	22 fe 97 00			
2023/02/11	17:58:00.5	AOCS_Orе-point_Start_1_OG [0x097]						
		AOCU_NM	5	02-76	01 03 74 01 db			
2023/02/11	17:58:18.0	XRT_FLD_ENA_411_OG [0x19b]						
		MDP_XRT_FLD_ENA	1	07-F0	d8			
2023/02/11	17:58:20.0	XRT_FLRCTRL_ENA_412_OG [0x19c]						
		MDP_XRT_FLRCTRL_ENA	1	07-F0	c8			
2023/02/11	17:58:22.0	XRT_AEC_RESET_448_OG [0x1c0]						
		MDP_XRT_AEC_RESET	1	07-F0	d0			
2023/02/11	17:58:24.0	XRT_ARS_DIS_423_OG [0x1a7]						
		MDP_XRT_ARS_DIS	1	07-F0	d5			
2023/02/11	17:58:26.0	XRT_FLD_RESET_434_OG [0x1b2]						
		MDP_XRT_FLD_RESET	1	07-F0	da			
2023/02/11	18:00:56.0	XRT_QT_PROG_SET_437_OG [0x1b5]						
		MDP_XRT_QT_PROG_SET	2	07-F0	c4 10			
2023/02/11	18:00:58.0	XRT_FL_PROG_SET_418_OG [0x1a2]						
		MDP_XRT_FL_PROG_SET	2	07-F0	c5 04			
2023/02/11	18:01:00.0	XRT_CTRL_AUTO_408_OG [0x198]						

2023/02/11	18:12:00.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
			MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/11	18:12:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/11	18:12:04.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/11	18:12:06.0	XRT_PREFLR_STRT_436_OG [0x1b4]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2023/02/11	18:15:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2023/02/11	18:35:30.0	XRT_Custom_430_OG [0x1ae]				
2023/02/11	18:36:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/11	19:49:00.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/11	19:49:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/11	19:49:04.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/11	19:49:06.0	XRT_PREFLR_STRT_436_OG [0x1b4]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2023/02/11	19:52:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2023/02/11	20:12:00.0	XRT_Custom_430_OG [0x1ae]				
2023/02/11	20:13:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/11	21:26:00.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/11	21:26:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/11	21:26:04.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/11	21:26:06.0	XRT_PREFLR_STRT_436_OG [0x1b4]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2023/02/11	21:29:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2023/02/11	21:49:30.0	XRT_Custom_430_OG [0x1ae]				
2023/02/11	21:50:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/11	23:03:30.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/11	23:03:32.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/11	23:03:34.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/11	23:03:36.0	XRT_PREFLR_STRT_436_OG [0x1b4]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2023/02/11	23:06:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2023/02/11	23:25:00.0	XRT_Custom_430_OG [0x1ae]				
2023/02/11	23:26:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/12	00:40:30.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/12	00:40:32.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/12	00:40:34.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/12	00:40:36.0	XRT_PREFLR_STRT_436_OG [0x1b4]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2023/02/12	00:43:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2023/02/12	00:51:30.0	XRT_Custom_430_OG [0x1ae]				
2023/02/12	00:52:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/12	02:07:00.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/12	02:07:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/12	02:07:04.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/12	02:07:06.0	XRT_PREFLR_STRT_436_OG [0x1b4]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2023/02/12	02:10:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2023/02/12	02:23:30.0	XRT_Custom_430_OG [0x1ae]				
2023/02/12	02:24:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/12	03:39:00.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/12	03:39:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/12	03:39:04.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/12	03:39:06.0	XRT_PREFLR_STRT_436_OG [0x1b4]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2023/02/12	03:42:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2023/02/12	03:59:54.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/12	03:59:56.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1

2023/02/12	03:59:58.0	XRT_FOCUS_POSITION_406_OG [0x196] XRT_FOCUS_POSITION	4	07-F8	22 ff aa 00
2023/02/12	04:00:00.0	AOCs_OrE-point_Start_2_OG [0x098] AOCU_NM	5	02-76	00 00 00 00 00
2023/02/12	04:00:18.0	XRT_FLD_ENA_411_OG [0x19b] MDP_XRT_FLD_ENA	1	07-F0	d8
2023/02/12	04:00:20.0	XRT_FLRCTRL_ENA_412_OG [0x19c] MDP_XRT_FLRCTRL_ENA	1	07-F0	c8
2023/02/12	04:00:22.0	XRT_AEC_RESET_448_OG [0x1c0] MDP_XRT_AEC_RESET	1	07-F0	d0
2023/02/12	04:00:24.0	XRT_ARS_DIS_423_OG [0x1a7] MDP_XRT_ARS_DIS	1	07-F0	d5
2023/02/12	04:00:26.0	XRT_FLD_RESET_434_OG [0x1b2] MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/12	04:02:56.0	XRT_QT_PROG_SET_442_OG [0x1ba] MDP_XRT_QT_PROG_SET	2	07-F0	c4 12
2023/02/12	04:02:58.0	XRT_FL_PROG_SET_418_OG [0x1a2] MDP_XRT_FL_PROG_SET	2	07-F0	c5 04
2023/02/12	04:03:00.0	XRT_CTRL_AUTO_408_OG [0x198] MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/12	05:08:00.0	XRT_CTRL_MANU_400_OG [0x190] MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/12	05:08:02.0	XRT_CTRL_MANU_402_OG [0x192] MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/12	05:08:04.0	XRT_FLD_RESET_415_OG [0x19f] MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/12	05:08:06.0	XRT_PREFLR_STRT_436_OG [0x1b4] MDP_XRT_PREFLR_STRT	1	07-F0	e8
2023/02/12	05:11:14.0	XRT_PREFLR_STOP_419_OG [0x1a3] MDP_XRT_PREFLR_STOP	1	07-F0	e9
2023/02/12	05:37:00.0	XRT_Custom_430_OG [0x1ae]			
2023/02/12	05:38:00.0	XRT_CTRL_AUTO_424_OG [0x1a8] MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/12	05:59:54.0	XRT_CTRL_MANU_402_OG [0x192] MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/12	05:59:56.0	XRT_CTRL_MANU_402_OG [0x192] MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/12	05:59:58.0	XRT_FOCUS_POSITION_406_OG [0x196] XRT_FOCUS_POSITION	4	07-F8	22 ff aa 00
2023/02/12	06:00:18.0	XRT_FLD_DIS_409_OG [0x199] MDP_XRT_FLD_DIS	1	07-F0	d9
2023/02/12	06:00:20.0	XRT_FLRCTRL_DIS_413_OG [0x19d] MDP_XRT_FLRCTRL_DIS	1	07-F0	c9
2023/02/12	06:00:22.0	XRT_ARS_DIS_421_OG [0x1a5] MDP_XRT_ARS_DIS	1	07-F0	d5
2023/02/12	06:02:58.0	XRT_QT_PROG_SET_420_OG [0x1a4] MDP_XRT_QT_PROG_SET	2	07-F0	c4 03
2023/02/12	06:03:00.0	XRT_CTRL_AUTO_408_OG [0x198] MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/12	06:09:54.0	XRT_CTRL_MANU_402_OG [0x192] MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/12	06:09:56.0	XRT_CTRL_MANU_402_OG [0x192] MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/12	06:09:58.0	XRT_FOCUS_POSITION_410_OG [0x19a] XRT_FOCUS_POSITION	4	07-F8	22 fe 97 00
2023/02/12	06:10:00.0	AOCs_OrE-point_Start_1_OG [0x097] AOCU_NM	5	02-76	01 03 74 01 db
2023/02/12	06:10:18.0	XRT_FLD_ENA_411_OG [0x19b] MDP_XRT_FLD_ENA	1	07-F0	d8
2023/02/12	06:10:20.0	XRT_FLRCTRL_ENA_412_OG [0x19c] MDP_XRT_FLRCTRL_ENA	1	07-F0	c8
2023/02/12	06:10:22.0	XRT_AEC_RESET_448_OG [0x1c0] MDP_XRT_AEC_RESET	1	07-F0	d0
2023/02/12	06:10:24.0	XRT_ARS_DIS_423_OG [0x1a7] MDP_XRT_ARS_DIS	1	07-F0	d5
2023/02/12	06:10:26.0	XRT_FLD_RESET_434_OG [0x1b2] MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/12	06:12:56.0	XRT_QT_PROG_SET_437_OG [0x1b5] MDP_XRT_QT_PROG_SET	2	07-F0	c4 10
2023/02/12	06:12:58.0	XRT_FL_PROG_SET_418_OG [0x1a2] MDP_XRT_FL_PROG_SET	2	07-F0	c5 04
2023/02/12	06:13:00.0	XRT_CTRL_AUTO_408_OG [0x198] MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/12	06:48:30.0	XRT_CTRL_MANU_400_OG [0x190] MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/12	06:48:32.0	XRT_CTRL_MANU_402_OG [0x192] MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/12	06:48:34.0	XRT_FLD_RESET_415_OG [0x19f] MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/12	06:48:36.0	XRT_PREFLR_STRT_436_OG [0x1b4] MDP_XRT_PREFLR_STRT	1	07-F0	e8
2023/02/12	06:51:44.0	XRT_PREFLR_STOP_419_OG [0x1a3] MDP_XRT_PREFLR_STOP	1	07-F0	e9
2023/02/12	07:14:30.5	XRT_Custom_430_OG [0x1ae]			
2023/02/12	07:15:30.5	XRT_CTRL_AUTO_424_OG [0x1a8] MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/12	08:28:30.0	XRT_CTRL_MANU_400_OG [0x190] MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/12	08:28:32.0	XRT_CTRL_MANU_402_OG [0x192] MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/12	08:28:34.0	XRT_FLD_RESET_415_OG [0x19f] MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/12	08:28:36.0	XRT_PREFLR_STRT_436_OG [0x1b4]			

2023/02/12	08:31:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STRT	1	07-F0	e8	
			MDP_XRT_PREFLR_STOP	1	07-F0	e9	
2023/02/12	08:51:30.0	XRT_Custom_430_OG [0x1ae]					
2023/02/12	08:52:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]					
			MDP_XRT_CTRL_AUTO	1	07-F0	c0	
2023/02/12	10:08:00.0	XRT_CTRL_MANU_400_OG [0x190]					
			MDP_XRT_CTRL_MANU	1	07-F0	c1	
2023/02/12	10:08:02.0	XRT_CTRL_MANU_402_OG [0x192]					
			MDP_XRT_CTRL_MANU	1	07-F0	c1	
2023/02/12	10:08:04.0	XRT_FLD_RESET_415_OG [0x19f]					
			MDP_XRT_FLD_RESET	1	07-F0	da	
2023/02/12	10:08:06.0	XRT_PREFLR_STRT_436_OG [0x1b4]					
			MDP_XRT_PREFLR_STRT	1	07-F0	e8	
2023/02/12	10:11:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]					
			MDP_XRT_PREFLR_STOP	1	07-F0	e9	
2023/02/12	10:27:00.0	XRT_Custom_430_OG [0x1ae]					
2023/02/12	10:28:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]					
			MDP_XRT_CTRL_AUTO	1	07-F0	c0	
2023/02/12	11:51:00.0	XRT_CTRL_MANU_400_OG [0x190]					
			MDP_XRT_CTRL_MANU	1	07-F0	c1	
2023/02/12	11:51:02.0	XRT_CTRL_MANU_402_OG [0x192]					
			MDP_XRT_CTRL_MANU	1	07-F0	c1	
2023/02/12	11:51:04.0	XRT_FLD_RESET_415_OG [0x19f]					
			MDP_XRT_FLD_RESET	1	07-F0	da	
2023/02/12	11:51:06.0	XRT_PREFLR_STRT_436_OG [0x1b4]					
			MDP_XRT_PREFLR_STRT	1	07-F0	e8	
2023/02/12	11:54:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]					
			MDP_XRT_PREFLR_STOP	1	07-F0	e9	
2023/02/12	11:54:16.0	XRT_Custom_430_OG [0x1ae]					
2023/02/12	11:55:16.0	XRT_CTRL_AUTO_424_OG [0x1a8]					
			MDP_XRT_CTRL_AUTO	1	07-F0	c0	
2023/02/12	15:35:30.0	XRT_CTRL_MANU_400_OG [0x190]					
			MDP_XRT_CTRL_MANU	1	07-F0	c1	
2023/02/12	15:35:32.0	XRT_CTRL_MANU_402_OG [0x192]					
			MDP_XRT_CTRL_MANU	1	07-F0	c1	
2023/02/12	15:35:34.0	XRT_FLD_RESET_415_OG [0x19f]					
			MDP_XRT_FLD_RESET	1	07-F0	da	
2023/02/12	15:35:36.0	XRT_PREFLR_STRT_436_OG [0x1b4]					
			MDP_XRT_PREFLR_STRT	1	07-F0	e8	
2023/02/12	15:38:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]					
			MDP_XRT_PREFLR_STOP	1	07-F0	e9	
2023/02/12	15:46:00.0	XRT_Custom_430_OG [0x1ae]					
2023/02/12	15:47:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]					
			MDP_XRT_CTRL_AUTO	1	07-F0	c0	
2023/02/12	17:10:00.0	XRT_CTRL_MANU_400_OG [0x190]					
			MDP_XRT_CTRL_MANU	1	07-F0	c1	
2023/02/12	17:10:02.0	XRT_CTRL_MANU_402_OG [0x192]					
			MDP_XRT_CTRL_MANU	1	07-F0	c1	
2023/02/12	17:10:04.0	XRT_FLD_RESET_415_OG [0x19f]					
			MDP_XRT_FLD_RESET	1	07-F0	da	
2023/02/12	17:10:06.0	XRT_PREFLR_STRT_436_OG [0x1b4]					
			MDP_XRT_PREFLR_STRT	1	07-F0	e8	
2023/02/12	17:13:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]					
			MDP_XRT_PREFLR_STOP	1	07-F0	e9	
2023/02/12	17:33:30.0	XRT_Custom_430_OG [0x1ae]					
2023/02/12	17:34:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]					
			MDP_XRT_CTRL_AUTO	1	07-F0	c0	
2023/02/12	18:03:54.0	XRT_CTRL_MANU_402_OG [0x192]					
			MDP_XRT_CTRL_MANU	1	07-F0	c1	
2023/02/12	18:03:56.0	XRT_CTRL_MANU_402_OG [0x192]					
			MDP_XRT_CTRL_MANU	1	07-F0	c1	
2023/02/12	18:03:58.0	XRT_FOCUS_POSITION_406_OG [0x196]					
			XRT_FOCUS_POSITION	4	07-F8	22 ff aa 00	
2023/02/12	18:04:00.0	AOCS_OrE-point_Start_2_OG [0x098]					
			AOCU_NM	5	02-76	00 00 00 00 00	
2023/02/12	18:04:18.0	XRT_FLD_DIS_409_OG [0x199]					
			MDP_XRT_FLD_DIS	1	07-F0	d9	
2023/02/12	18:04:20.0	XRT_FLRCTRL_DIS_413_OG [0x19d]					
			MDP_XRT_FLRCTRL_DIS	1	07-F0	c9	
2023/02/12	18:04:22.0	XRT_ARS_DIS_421_OG [0x1a5]					
			MDP_XRT_ARS_DIS	1	07-F0	d5	
2023/02/12	18:06:58.0	XRT_QT_PROG_SET_420_OG [0x1a4]					
			MDP_XRT_QT_PROG_SET	2	07-F0	c4 03	
2023/02/12	18:07:00.0	XRT_CTRL_AUTO_408_OG [0x198]					
			MDP_XRT_CTRL_AUTO	1	07-F0	c0	
2023/02/12	18:13:54.0	XRT_CTRL_MANU_402_OG [0x192]					
			MDP_XRT_CTRL_MANU	1	07-F0	c1	
2023/02/12	18:13:56.0	XRT_CTRL_MANU_402_OG [0x192]					
			MDP_XRT_CTRL_MANU	1	07-F0	c1	
2023/02/12	18:13:58.0	XRT_FOCUS_POSITION_410_OG [0x19a]					
			XRT_FOCUS_POSITION	4	07-F8	22 fe 97 00	
2023/02/12	18:14:00.0	AOCS_OrE-point_Start_1_OG [0x097]					
			AOCU_NM	5	02-76	01 03 74 01 db	
2023/02/12	18:14:18.0	XRT_FLD_ENA_411_OG [0x19b]					
			MDP_XRT_FLD_ENA	1	07-F0	d8	
2023/02/12	18:14:20.0	XRT_FLRCTRL_ENA_412_OG [0x19c]					
			MDP_XRT_FLRCTRL_ENA	1	07-F0	c8	
2023/02/12	18:14:22.0	XRT_AEC_RESET_448_OG [0x1c0]					
			MDP_XRT_AEC_RESET	1	07-F0	d0	
2023/02/12	18:14:24.0	XRT_ARS_DIS_423_OG [0x1a7]					
			MDP_XRT_ARS_DIS	1	07-F0	d5	
2023/02/12	18:14:26.0	XRT_FLD_RESET_434_OG [0x1b2]					

2023/02/12	18:16:56.0	XRT_QT_PROG_SET_437_OG [0x1b5]	MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/12	18:16:58.0	XRT_FL_PROG_SET_418_OG [0x1a2]	MDP_XRT_QT_PROG_SET	2	07-F0	c4 10
2023/02/12	18:17:00.0	XRT_CTRL_AUTO_408_OG [0x198]	MDP_XRT_FL_PROG_SET	2	07-F0	c5 04
2023/02/12	18:46:30.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/12	18:46:32.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/12	18:46:34.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/12	18:46:36.0	XRT_PREFLR_STRT_436_OG [0x1b4]	MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/12	18:49:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2023/02/12	19:10:00.0	XRT_Custom_430_OG [0x1ae]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2023/02/12	19:11:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CUSTOM_430_OG [0x1ae]	1	07-F0	c0
2023/02/12	20:23:30.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/12	20:23:32.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/12	20:23:34.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/12	20:23:36.0	XRT_PREFLR_STRT_436_OG [0x1b4]	MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/12	20:26:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2023/02/12	20:46:30.0	XRT_Custom_430_OG [0x1ae]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2023/02/12	20:47:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CUSTOM_430_OG [0x1ae]	1	07-F0	c0
2023/02/12	22:00:30.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/12	22:00:32.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/12	22:00:34.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/12	22:00:36.0	XRT_PREFLR_STRT_436_OG [0x1b4]	MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/12	22:03:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2023/02/12	22:24:00.0	XRT_Custom_430_OG [0x1ae]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2023/02/12	22:25:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CUSTOM_430_OG [0x1ae]	1	07-F0	c0
2023/02/12	23:38:00.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/12	23:38:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/12	23:38:04.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/12	23:38:06.0	XRT_PREFLR_STRT_436_OG [0x1b4]	MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/12	23:41:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2023/02/12	23:59:00.0	XRT_Custom_430_OG [0x1ae]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2023/02/13	00:00:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CUSTOM_430_OG [0x1ae]	1	07-F0	c0
2023/02/13	01:15:00.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/13	01:15:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/13	01:15:04.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/13	01:15:06.0	XRT_PREFLR_STRT_436_OG [0x1b4]	MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/13	01:18:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2023/02/13	01:23:00.0	XRT_Custom_430_OG [0x1ae]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2023/02/13	01:24:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CUSTOM_430_OG [0x1ae]	1	07-F0	c0
2023/02/13	02:39:00.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/13	02:39:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/13	02:39:04.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/13	02:39:06.0	XRT_PREFLR_STRT_436_OG [0x1b4]	MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/13	02:42:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2023/02/13	02:57:30.0	XRT_Custom_430_OG [0x1ae]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2023/02/13	02:58:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CUSTOM_430_OG [0x1ae]	1	07-F0	c0
2023/02/13	04:14:00.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/13	04:14:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/13	04:14:04.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/13	04:14:06.0	XRT_PREFLR_STRT_436_OG [0x1b4]	MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/13			MDP_XRT_PREFLR_STRT	1	07-F0	e8

2023/02/13	04:17:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2023/02/13	04:21:24.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2023/02/13	04:21:26.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2023/02/13	04:21:28.0	XRT_FOCUS_POSITION_406_OG [0x196]							
		XRT_FOCUS_POSITION	4	07-F8	22 ff aa 00				
2023/02/13	04:21:30.0	AOCS_Ore-point_Start_2_OG [0x098]							
		AOCU_NM	5	02-76	00 00 00 00 00				
2023/02/13	04:21:48.0	XRT_FLD_ENA_411_OG [0x19b]							
		MDP_XRT_FLD_ENA	1	07-F0	d8				
2023/02/13	04:21:50.0	XRT_FLRCTRL_ENA_412_OG [0x19c]							
		MDP_XRT_FLRCTRL_ENA	1	07-F0	c8				
2023/02/13	04:21:52.0	XRT_AEC_RESET_448_OG [0x1c0]							
		MDP_XRT_AEC_RESET	1	07-F0	d0				
2023/02/13	04:21:54.0	XRT_ARS_DIS_423_OG [0x1a7]							
		MDP_XRT_ARS_DIS	1	07-F0	d5				
2023/02/13	04:21:56.0	XRT_FLD_RESET_434_OG [0x1b2]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2023/02/13	04:24:26.0	XRT_QT_PROG_SET_442_OG [0x1ba]							
		MDP_XRT_QT_PROG_SET	2	07-F0	c4 12				
2023/02/13	04:24:28.0	XRT_FL_PROG_SET_418_OG [0x1a2]							
		MDP_XRT_FL_PROG_SET	2	07-F0	c5 04				
2023/02/13	04:34:30.0	XRT_Custom_430_OG [0x1ae]							
2023/02/13	04:35:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2023/02/13	05:44:00.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2023/02/13	05:44:02.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2023/02/13	05:44:04.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2023/02/13	05:44:06.0	XRT_PREFLR_STRT_436_OG [0x1b4]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2023/02/13	05:47:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2023/02/13	06:12:00.5	XRT_Custom_430_OG [0x1ae]							
2023/02/13	06:13:00.5	XRT_CTRL_AUTO_424_OG [0x1a8]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2023/02/13	06:21:24.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2023/02/13	06:21:26.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2023/02/13	06:21:28.0	XRT_FOCUS_POSITION_406_OG [0x196]							
		XRT_FOCUS_POSITION	4	07-F8	22 ff aa 00				
2023/02/13	06:21:48.0	XRT_FLD_DIS_409_OG [0x199]							
		MDP_XRT_FLD_DIS	1	07-F0	d9				
2023/02/13	06:21:50.0	XRT_FLRCTRL_DIS_413_OG [0x19d]							
		MDP_XRT_FLRCTRL_DIS	1	07-F0	c9				
2023/02/13	06:21:52.0	XRT_ARS_DIS_421_OG [0x1a5]							
		MDP_XRT_ARS_DIS	1	07-F0	d5				
2023/02/13	06:24:28.0	XRT_QT_PROG_SET_420_OG [0x1a4]							
		MDP_XRT_QT_PROG_SET	2	07-F0	c4 03				
2023/02/13	06:24:30.0	XRT_CTRL_AUTO_408_OG [0x198]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2023/02/13	06:31:24.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2023/02/13	06:31:26.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2023/02/13	06:31:28.0	XRT_FOCUS_POSITION_410_OG [0x19a]							
		XRT_FOCUS_POSITION	4	07-F8	22 fe 97 00				
2023/02/13	06:31:30.0	AOCS_Ore-point_Start_1_OG [0x097]							
		AOCU_NM	5	02-76	01 03 74 01 db				
2023/02/13	06:31:48.0	XRT_FLD_ENA_411_OG [0x19b]							
		MDP_XRT_FLD_ENA	1	07-F0	d8				
2023/02/13	06:31:50.0	XRT_FLRCTRL_ENA_412_OG [0x19c]							
		MDP_XRT_FLRCTRL_ENA	1	07-F0	c8				
2023/02/13	06:31:52.0	XRT_AEC_RESET_448_OG [0x1c0]							
		MDP_XRT_AEC_RESET	1	07-F0	d0				
2023/02/13	06:31:54.0	XRT_ARS_DIS_423_OG [0x1a7]							
		MDP_XRT_ARS_DIS	1	07-F0	d5				
2023/02/13	06:31:56.0	XRT_FLD_RESET_434_OG [0x1b2]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2023/02/13	06:34:26.0	XRT_QT_PROG_SET_432_OG [0x1b0]							
		MDP_XRT_QT_PROG_SET	2	07-F0	c4 0d				
2023/02/13	06:34:28.0	XRT_FL_PROG_SET_418_OG [0x1a2]							
		MDP_XRT_FL_PROG_SET	2	07-F0	c5 04				
2023/02/13	06:34:30.0	XRT_CTRL_AUTO_408_OG [0x198]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2023/02/13	07:24:00.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2023/02/13	07:24:02.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2023/02/13	07:24:04.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2023/02/13	07:24:06.0	XRT_PREFLR_STRT_436_OG [0x1b4]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2023/02/13	07:27:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2023/02/13	07:49:30.0	XRT_Custom_430_OG [0x1ae]							
2023/02/13	07:50:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				

2023/02/13	09:04:00.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2023/02/13	09:04:02.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2023/02/13	09:04:04.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2023/02/13	09:04:06.0	XRT_PREFLR_STRT_436_OG [0x1b4]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2023/02/13	09:07:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2023/02/13	09:26:00.0	XRT_Custom_430_OG [0x1ae]							
2023/02/13	09:27:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2023/02/13	10:44:30.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2023/02/13	10:44:32.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2023/02/13	10:44:34.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2023/02/13	10:44:36.0	XRT_PREFLR_STRT_436_OG [0x1b4]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2023/02/13	10:47:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2023/02/13	11:00:00.0	XRT_Custom_430_OG [0x1ae]							
2023/02/13	11:01:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2023/02/13	16:08:30.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2023/02/13	16:08:32.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2023/02/13	16:08:34.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2023/02/13	16:08:36.0	XRT_PREFLR_STRT_436_OG [0x1b4]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2023/02/13	16:11:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2023/02/13	16:22:00.0	XRT_Custom_430_OG [0x1ae]							
2023/02/13	16:23:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2023/02/13	16:29:00.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2023/02/13	16:29:02.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2023/02/13	16:29:04.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2023/02/13	16:29:06.0	XRT_PREFLR_STRT_436_OG [0x1b4]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2023/02/13	16:31:30.0	XRT_Custom_430_OG [0x1ae]							
2023/02/13	16:32:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2023/02/13	16:32:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2023/02/13	17:44:00.0	XRT_CTRL_MANU_400_OG [0x190]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2023/02/13	17:44:02.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2023/02/13	17:44:04.0	XRT_FLD_RESET_415_OG [0x19f]							
		MDP_XRT_FLD_RESET	1	07-F0	da				
2023/02/13	17:44:06.0	XRT_PREFLR_STRT_436_OG [0x1b4]							
		MDP_XRT_PREFLR_STRT	1	07-F0	e8				
2023/02/13	17:47:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]							
		MDP_XRT_PREFLR_STOP	1	07-F0	e9				
2023/02/13	18:07:54.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2023/02/13	18:07:56.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2023/02/13	18:07:58.0	XRT_FOCUS_POSITION_406_OG [0x196]							
		XRT_FOCUS_POSITION	4	07-F8	22 ff aa 00				
2023/02/13	18:08:00.0	AOCS_Ore-point_Start_2_OG [0x098]							
		AOCU_NM	5	02-76	00 00 00 00 00				
2023/02/13	18:08:18.0	XRT_FLD_DIS_409_OG [0x199]							
		MDP_XRT_FLD_DIS	1	07-F0	d9				
2023/02/13	18:08:20.0	XRT_FLRCTRL_DIS_413_OG [0x19d]							
		MDP_XRT_FLRCTRL_DIS	1	07-F0	c9				
2023/02/13	18:08:22.0	XRT_ARS_DIS_421_OG [0x1a5]							
		MDP_XRT_ARS_DIS	1	07-F0	d5				
2023/02/13	18:10:58.0	XRT_QT_PROG_SET_420_OG [0x1a4]							
		MDP_XRT_QT_PROG_SET	2	07-F0	c4 03				
2023/02/13	18:11:00.0	XRT_CTRL_AUTO_408_OG [0x198]							
		MDP_XRT_CTRL_AUTO	1	07-F0	c0				
2023/02/13	18:17:54.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2023/02/13	18:17:56.0	XRT_CTRL_MANU_402_OG [0x192]							
		MDP_XRT_CTRL_MANU	1	07-F0	c1				
2023/02/13	18:17:58.0	XRT_FOCUS_RECALIBRATE_445_OG [0x1bd]							
		XRT_FOCUS_RECAL	2	07-F8	78 00				
2023/02/13	18:18:00.0	AOCS_Ore-point_Start_1_OG [0x097]							
		AOCU_NM	5	02-76	01 03 74 01 db				
2023/02/13	18:21:58.0	XRT_FOCUS_POSITION_410_OG [0x19a]							
		XRT_FOCUS_POSITION	4	07-F8	22 fe 97 00				
2023/02/13	18:22:18.0	XRT_FLD_ENA_411_OG [0x19b]							
		MDP_XRT_FLD_ENA	1	07-F0	d8				
2023/02/13	18:22:20.0	XRT_FLRCTRL_ENA_412_OG [0x19c]							

2023/02/13	18:22:22.0	XRT_AEC_RESET_448_OG [0x1c0]	MDP_XRT_FLRCTRL_ENA	1	07-F0	c8
			MDP_XRT_AEC_RESET	1	07-F0	d0
2023/02/13	18:22:24.0	XRT_ARS_DIS_423_OG [0x1a7]	MDP_XRT_ARS_DIS	1	07-F0	d5
2023/02/13	18:22:26.0	XRT_FLD_RESET_434_OG [0x1b2]	MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/13	18:24:56.0	XRT_QT_PROG_SET_432_OG [0x1b0]	MDP_XRT_QT_PROG_SET	2	07-F0	c4 0d
2023/02/13	18:24:58.0	XRT_FL_PROG_SET_418_OG [0x1a2]	MDP_XRT_FL_PROG_SET	2	07-F0	c5 04
2023/02/13	18:25:00.0	XRT_CTRL_AUTO_408_OG [0x198]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/13	19:21:30.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/13	19:21:32.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/13	19:21:34.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/13	19:21:36.0	XRT_PREFLR_STRT_436_OG [0x1b4]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2023/02/13	19:24:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2023/02/13	19:44:30.0	XRT_Custom_430_OG [0x1ae]				
2023/02/13	19:45:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/13	20:58:00.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/13	20:58:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/13	20:58:04.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/13	20:58:06.0	XRT_PREFLR_STRT_436_OG [0x1b4]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2023/02/13	21:01:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2023/02/13	21:21:30.0	XRT_Custom_430_OG [0x1ae]				
2023/02/13	21:22:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/13	22:35:30.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/13	22:35:32.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/13	22:35:34.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/13	22:35:36.0	XRT_PREFLR_STRT_436_OG [0x1b4]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2023/02/13	22:38:44.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2023/02/13	22:58:00.0	XRT_Custom_430_OG [0x1ae]				
2023/02/13	22:59:00.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/14	00:13:00.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/14	00:13:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/14	00:13:04.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/14	00:13:06.0	XRT_PREFLR_STRT_436_OG [0x1b4]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2023/02/14	00:16:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2023/02/14	00:28:30.0	XRT_Custom_430_OG [0x1ae]				
2023/02/14	00:29:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/14	01:46:00.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/14	01:46:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/14	01:46:04.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/14	01:46:06.0	XRT_PREFLR_STRT_436_OG [0x1b4]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2023/02/14	01:49:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2023/02/14	01:56:30.0	XRT_Custom_430_OG [0x1ae]				
2023/02/14	01:57:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/14	03:12:00.0	XRT_CTRL_MANU_400_OG [0x190]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/14	03:12:02.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/14	03:12:04.0	XRT_FLD_RESET_415_OG [0x19f]	MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/14	03:12:06.0	XRT_PREFLR_STRT_436_OG [0x1b4]	MDP_XRT_PREFLR_STRT	1	07-F0	e8
2023/02/14	03:15:14.0	XRT_PREFLR_STOP_419_OG [0x1a3]	MDP_XRT_PREFLR_STOP	1	07-F0	e9
2023/02/14	03:32:30.0	XRT_Custom_430_OG [0x1ae]				
2023/02/14	03:33:30.0	XRT_CTRL_AUTO_424_OG [0x1a8]	MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/14	03:59:54.0	XRT_CTRL_MANU_402_OG [0x192]	MDP_XRT_CTRL_MANU	1	07-F0	c1

2023/02/14	03:59:56.0	XRT_CTRL_MANU_402_OG [0x192] MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/14	03:59:58.0	XRT_FOCUS_POSITION_406_OG [0x196] XRT_FOCUS_POSITION	4	07-F8	22 ff aa 00
2023/02/14	04:00:00.0	AOCS_ORe-point_Start_2_OG [0x098] AOCU_NM	5	02-76	00 00 00 00 00
2023/02/14	04:00:18.0	XRT_FLD_ENA_411_OG [0x19b] MDP_XRT_FLD_ENA	1	07-F0	d8
2023/02/14	04:00:20.0	XRT_FLRCTRL_ENA_412_OG [0x19c] MDP_XRT_FLRCTRL_ENA	1	07-F0	c8
2023/02/14	04:00:22.0	XRT_AEC_RESET_448_OG [0x1c0] MDP_XRT_AEC_RESET	1	07-F0	d0
2023/02/14	04:00:24.0	XRT_ARS_DIS_423_OG [0x1a7] MDP_XRT_ARS_DIS	1	07-F0	d5
2023/02/14	04:00:26.0	XRT_FLD_RESET_434_OG [0x1b2] MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/14	04:02:56.0	XRT_QT_PROG_SET_442_OG [0x1ba] MDP_XRT_QT_PROG_SET	2	07-F0	c4 12
2023/02/14	04:02:58.0	XRT_FL_PROG_SET_418_OG [0x1a2] MDP_XRT_FL_PROG_SET	2	07-F0	c5 04
2023/02/14	04:03:00.0	XRT_CTRL_AUTO_408_OG [0x198] MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/14	04:41:00.0	XRT_CTRL_MANU_400_OG [0x190] MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/14	04:41:02.0	XRT_CTRL_MANU_402_OG [0x192] MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/14	04:41:04.0	XRT_FLD_RESET_415_OG [0x19f] MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/14	04:41:06.0	XRT_PREFLR_STRT_436_OG [0x1b4] MDP_XRT_PREFLR_STRT	1	07-F0	e8
2023/02/14	04:44:14.0	XRT_PREFLR_STOP_419_OG [0x1a3] MDP_XRT_PREFLR_STOP	1	07-F0	e9
2023/02/14	05:09:30.0	XRT_Custom_430_OG [0x1ae]			
2023/02/14	05:10:30.0	XRT_CTRL_AUTO_424_OG [0x1a8] MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/14	05:52:54.0	XRT_CTRL_MANU_402_OG [0x192] MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/14	05:52:56.0	XRT_CTRL_MANU_402_OG [0x192] MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/14	05:52:58.0	XRT_FOCUS_POSITION_406_OG [0x196] XRT_FOCUS_POSITION	4	07-F8	22 ff aa 00
2023/02/14	05:53:18.0	XRT_FLD_DIS_409_OG [0x199] MDP_XRT_FLD_DIS	1	07-F0	d9
2023/02/14	05:53:20.0	XRT_FLRCTRL_DIS_413_OG [0x19d] MDP_XRT_FLRCTRL_DIS	1	07-F0	c9
2023/02/14	05:53:22.0	XRT_ARS_DIS_421_OG [0x1a5] MDP_XRT_ARS_DIS	1	07-F0	d5
2023/02/14	05:55:58.0	XRT_QT_PROG_SET_438_OG [0x1b6] MDP_XRT_QT_PROG_SET	2	07-F0	c4 14
2023/02/14	05:56:00.0	XRT_CTRL_AUTO_408_OG [0x198] MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/14	06:02:54.0	XRT_CTRL_MANU_402_OG [0x192] MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/14	06:02:56.0	XRT_CTRL_MANU_402_OG [0x192] MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/14	06:02:58.0	XRT_FOCUS_POSITION_410_OG [0x19a] XRT_FOCUS_POSITION	4	07-F8	22 fe 97 00
2023/02/14	06:03:00.0	AOCS_ORe-point_Start_1_OG [0x097] AOCU_NM	5	02-76	01 03 74 01 db
2023/02/14	06:03:18.0	XRT_FLD_ENA_411_OG [0x19b] MDP_XRT_FLD_ENA	1	07-F0	d8
2023/02/14	06:03:20.0	XRT_FLRCTRL_ENA_412_OG [0x19c] MDP_XRT_FLRCTRL_ENA	1	07-F0	c8
2023/02/14	06:03:22.0	XRT_AEC_RESET_448_OG [0x1c0] MDP_XRT_AEC_RESET	1	07-F0	d0
2023/02/14	06:03:24.0	XRT_ARS_DIS_423_OG [0x1a7] MDP_XRT_ARS_DIS	1	07-F0	d5
2023/02/14	06:03:26.0	XRT_FLD_RESET_434_OG [0x1b2] MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/14	06:05:56.0	XRT_QT_PROG_SET_432_OG [0x1b0] MDP_XRT_QT_PROG_SET	2	07-F0	c4 0d
2023/02/14	06:05:58.0	XRT_FL_PROG_SET_418_OG [0x1a2] MDP_XRT_FL_PROG_SET	2	07-F0	c5 04
2023/02/14	06:06:00.0	XRT_CTRL_AUTO_408_OG [0x198] MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/14	06:20:00.0	XRT_CTRL_MANU_400_OG [0x190] MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/14	06:20:02.0	XRT_CTRL_MANU_402_OG [0x192] MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/14	06:20:04.0	XRT_FLD_RESET_415_OG [0x19f] MDP_XRT_FLD_RESET	1	07-F0	da
2023/02/14	06:20:06.0	XRT_PREFLR_STRT_436_OG [0x1b4] MDP_XRT_PREFLR_STRT	1	07-F0	e8
2023/02/14	06:23:14.0	XRT_PREFLR_STOP_419_OG [0x1a3] MDP_XRT_PREFLR_STOP	1	07-F0	e9
2023/02/14	06:47:00.0	XRT_Custom_430_OG [0x1ae]			
2023/02/14	06:48:00.0	XRT_CTRL_AUTO_424_OG [0x1a8] MDP_XRT_CTRL_AUTO	1	07-F0	c0
2023/02/14	07:29:54.0	XRT_CTRL_MANU_402_OG [0x192] MDP_XRT_CTRL_MANU	1	07-F0	c1
2023/02/14	07:30:00.0	AOCS_ORe-point_Start_2_OG [0x098] AOCU_NM	5	02-76	00 00 00 00 00